

YDP-103 Quick Operation Guide

While holding down the [GRAND PIANO/FUNCTION] button, press one of the highlighted keys shown below to set a parameter.

GRAND PIANO
FUNCTION

+

Auto Power Off		Duo				Voice				Voice Demo				Preset Song				Metronome				Touch Sensitivity				Balance between Voice 1 and Voice 2																																														
A#-1		C#0 D#0		F#0 G#0 A#0		C#1 D#1		F#1 G#1 A#1		C#2 D#2		F#2 G#2 A#2		C#3 D#3		F#3 G#3 A#3		C#4 D#4		F#4		G#4 A#4		C#5 D#5		F#5 G#5 A#5		C#6 D#6		F#6 G#6 A#6		C#7 D#7																																								
Auto Power Off Disable	Duo On/Off	GRAND PIANO 1	GRAND PIANO 2	E. PIANO 1	E. PIANO 2	PIPE ORGAN 1	PIPE ORGAN 2	HARPSICHORD 1	HARPSICHORD 2	VIBRAPHONE	GRAND PIANO 1	GRAND PIANO 2	E. PIANO 1	E. PIANO 2	PIPE ORGAN 1	PIPE ORGAN 2	HARPSICHORD 1	HARPSICHORD 2	VIBRAPHONE	Mennett G dur BWV.Ann.114	Für Elise	Träumerei	Dolly's Dreaming and Awakening	Humoresque	La Fille aux Cheveux de Lin	Metronome On/Off	Voice confirmation of current Tempo value	Number key 1	Number key 2	Number key 3	Number key 4	Number key 5	Number key 6	Number key 7	Number key 8	Number key 9	Number key 0	Default Tempo	Increase Beat by one step	Decrease Beat by one step	Default Volume	Increase Volume by one step	Decrease Volume by one step	Touch Sensitivity	Depth -1	Depth +1	Room	Hall1	Hall2	Stage	Off	-1 (Voice 1)	+1 (Voice 1)	-1 (Voice 2)	+1 (Voice 2)	0 (Voice 2)	Decrease Volume by one step	Increase Volume by one step	0 (equal balance)	Decrease by one step	Increase by one step	Default	Increase Volume by one step	Decrease by one step	0 (Default)	F#6	G#6 A#6	Decrease by approx. 0.2 Hz	Increase by approx. 0.2 Hz	A3 = 442.0 Hz	A3 = 440.0 Hz	Operation Confirmation Sounds On/Off
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																					

