



THR30II Wireless

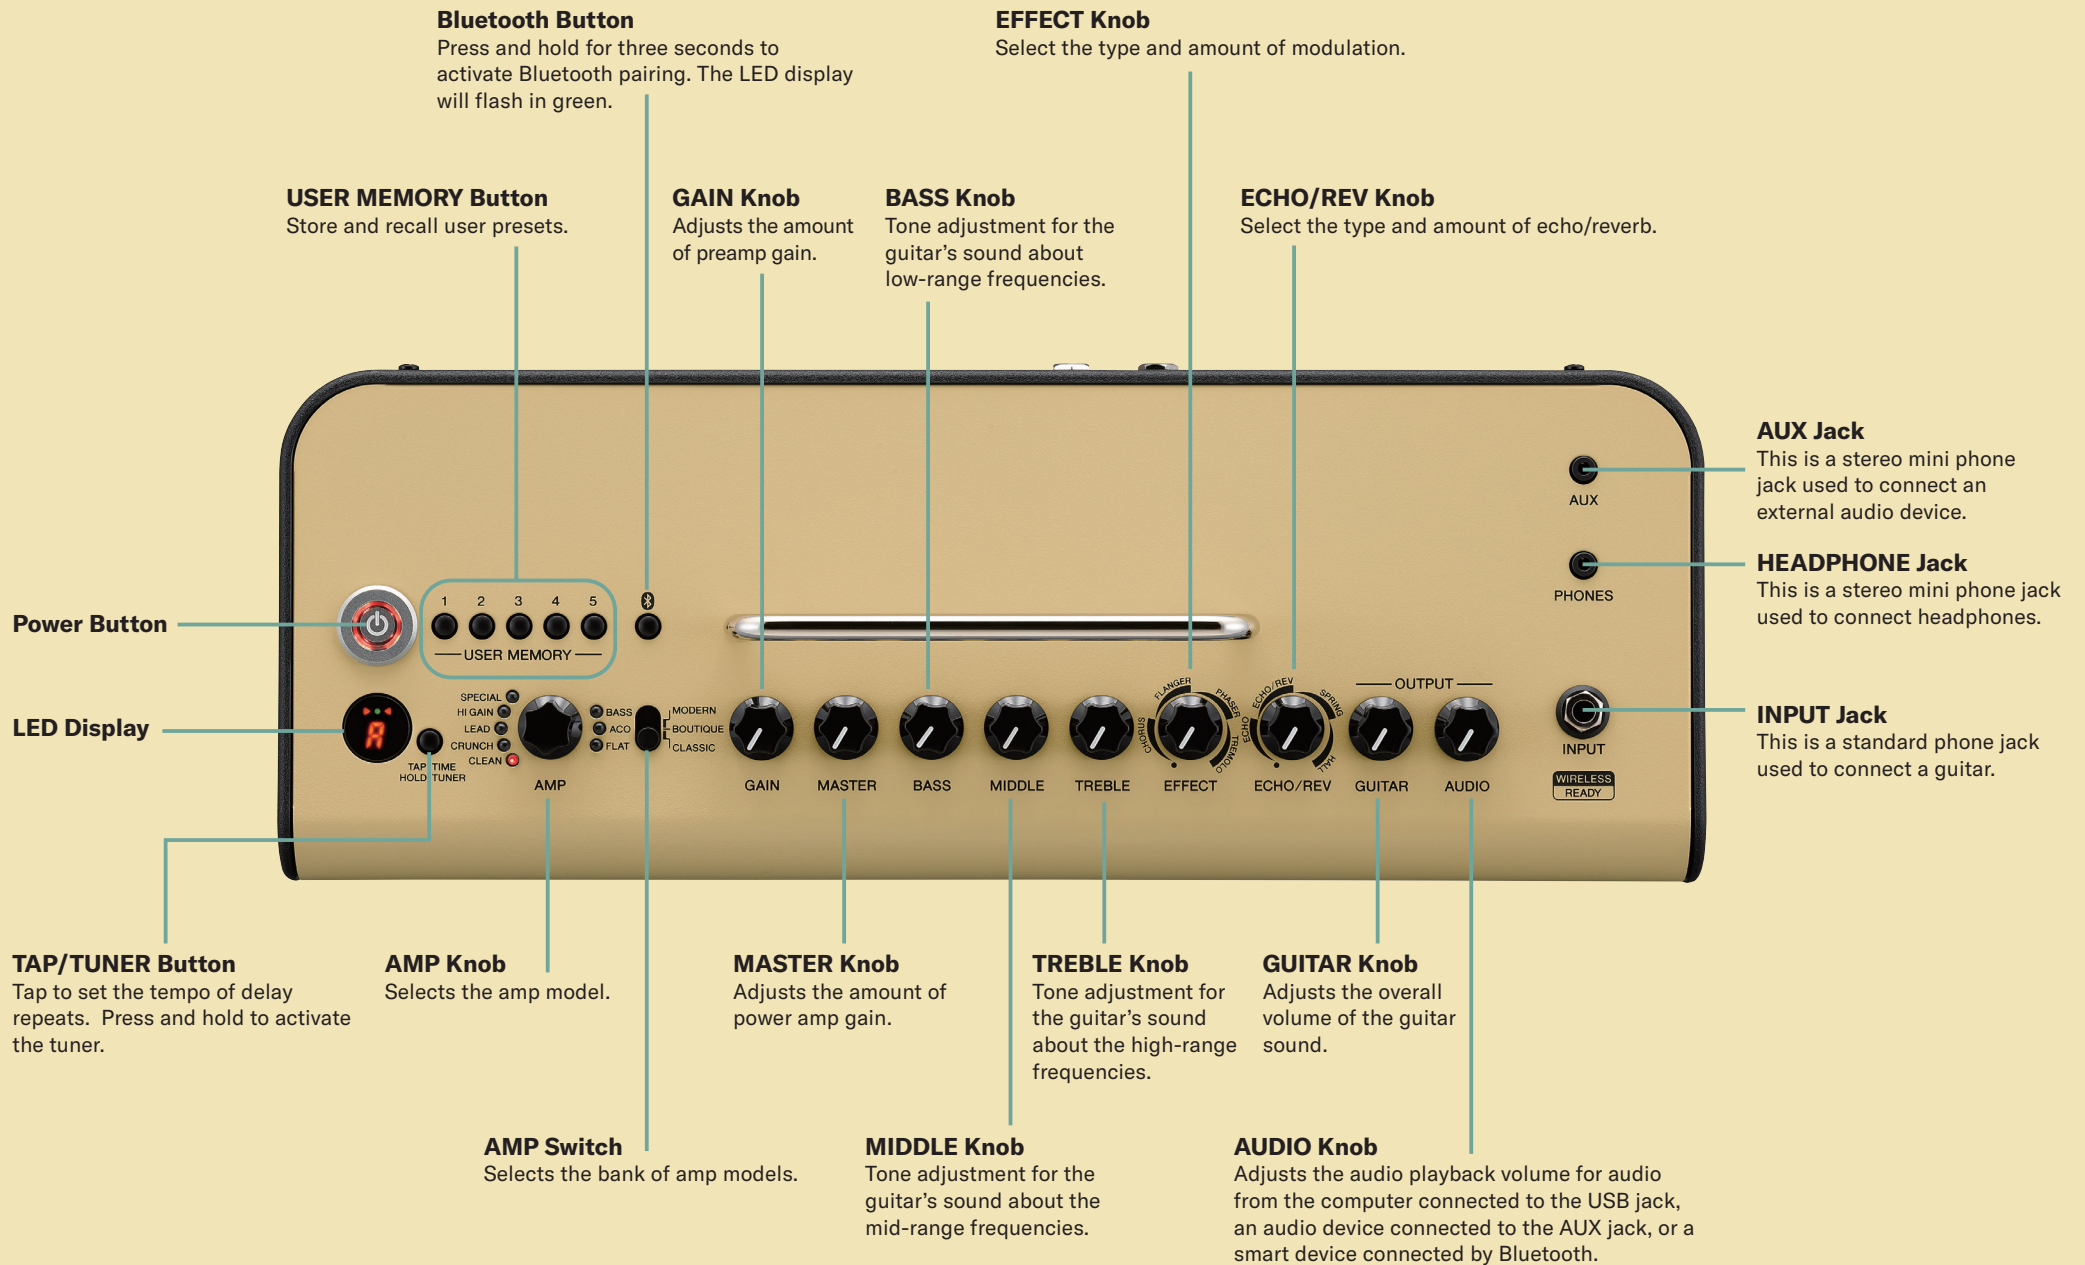

THR10II Wireless & THR10II

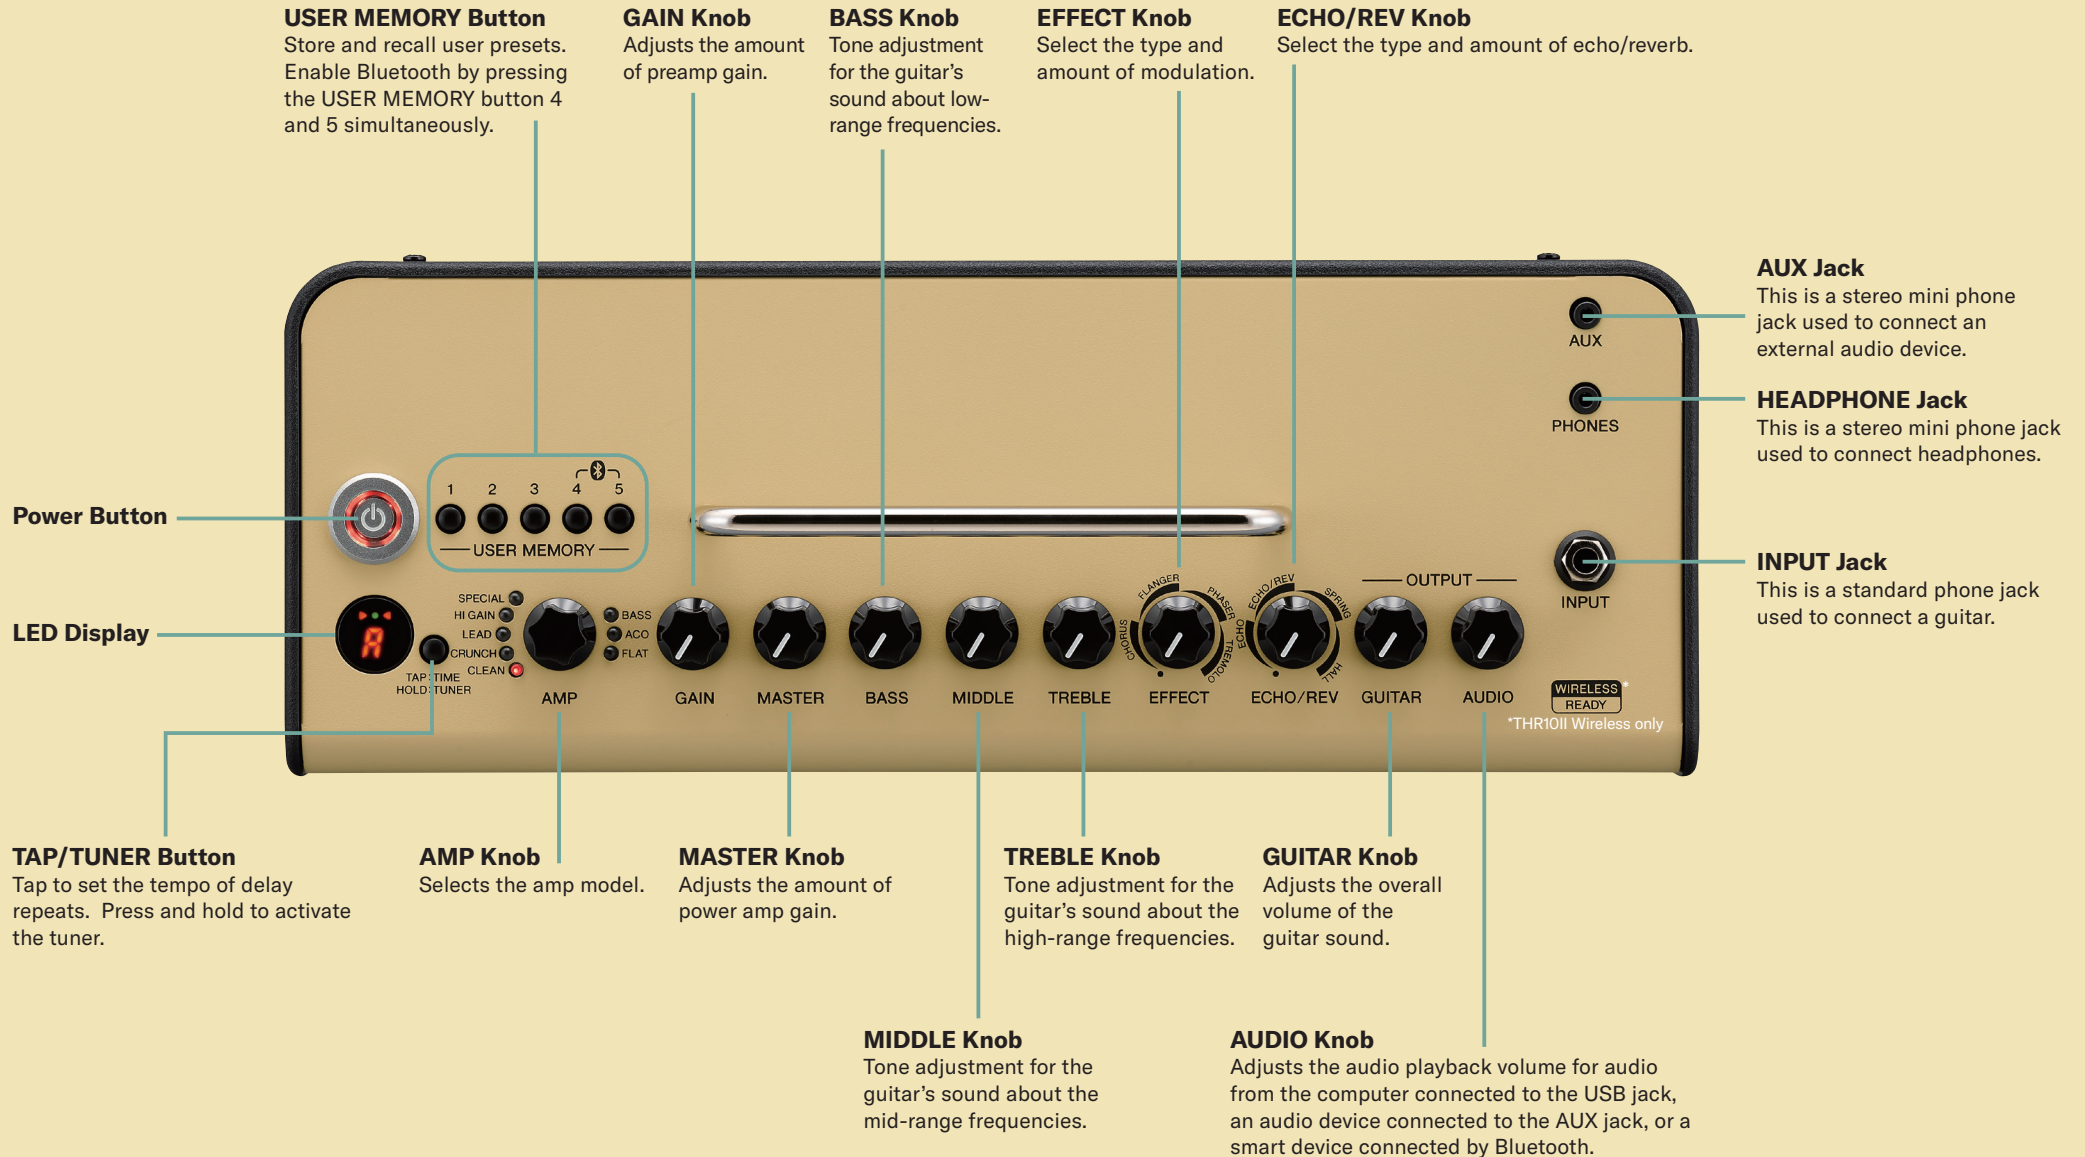

THR30IIA Wireless

Bluetooth Button

Press and hold for three seconds to activate Bluetooth pairing. The LED display will flash in green.

USER MEMORY Button

Store and recall user presets.

TONE BLEND Knob

Blend the direct signal from your guitar with the processed signal from the THR. (Maximum setting produces the mic sound only. Minimum setting produces the direct pickup sound only.)

EFFECT Knob

Select the type and amount of modulation.

VOLUME Knob

Adjusts the overall volume of the guitar sound.

MIC/INST Jack

For connection to a microphone or electronic instrument.

GAIN Knob

Adjusts the input signal level of the MIC/INST jack.

AUX Jack

This is a stereo mini phone jack used to connect an external audio device.

HEADPHONE Jack

This is a stereo mini phone jack used to connect headphones.

GUITAR Jack

This is a standard phone jack used to connect a guitar.

Power Button

LED Display

TAP/TUNER Button

Tap to set the tempo of delay repeats. Press and hold to activate the tuner.

TONE SELECT Knob

Select the mic model or voicing.

STEREO IMAGER Switch

Expands the stereo width of the guitar signal.

BASS Knob

Tone adjustment for the guitar's sound about low-range frequencies.

REVERB Knob

Select the type and amount of reverb.

MIC/INST REVERB Knob

Adjust the reverb amount for the secondary input.

MIC/INST VOLUME Knob


Adjust the volume for the secondary input.

TREBLE Knob


Tone adjustment for the guitar's sound about the high-range frequencies.

MIDDLE Knob

Tone adjustment for the guitar's sound about the mid-range frequencies.

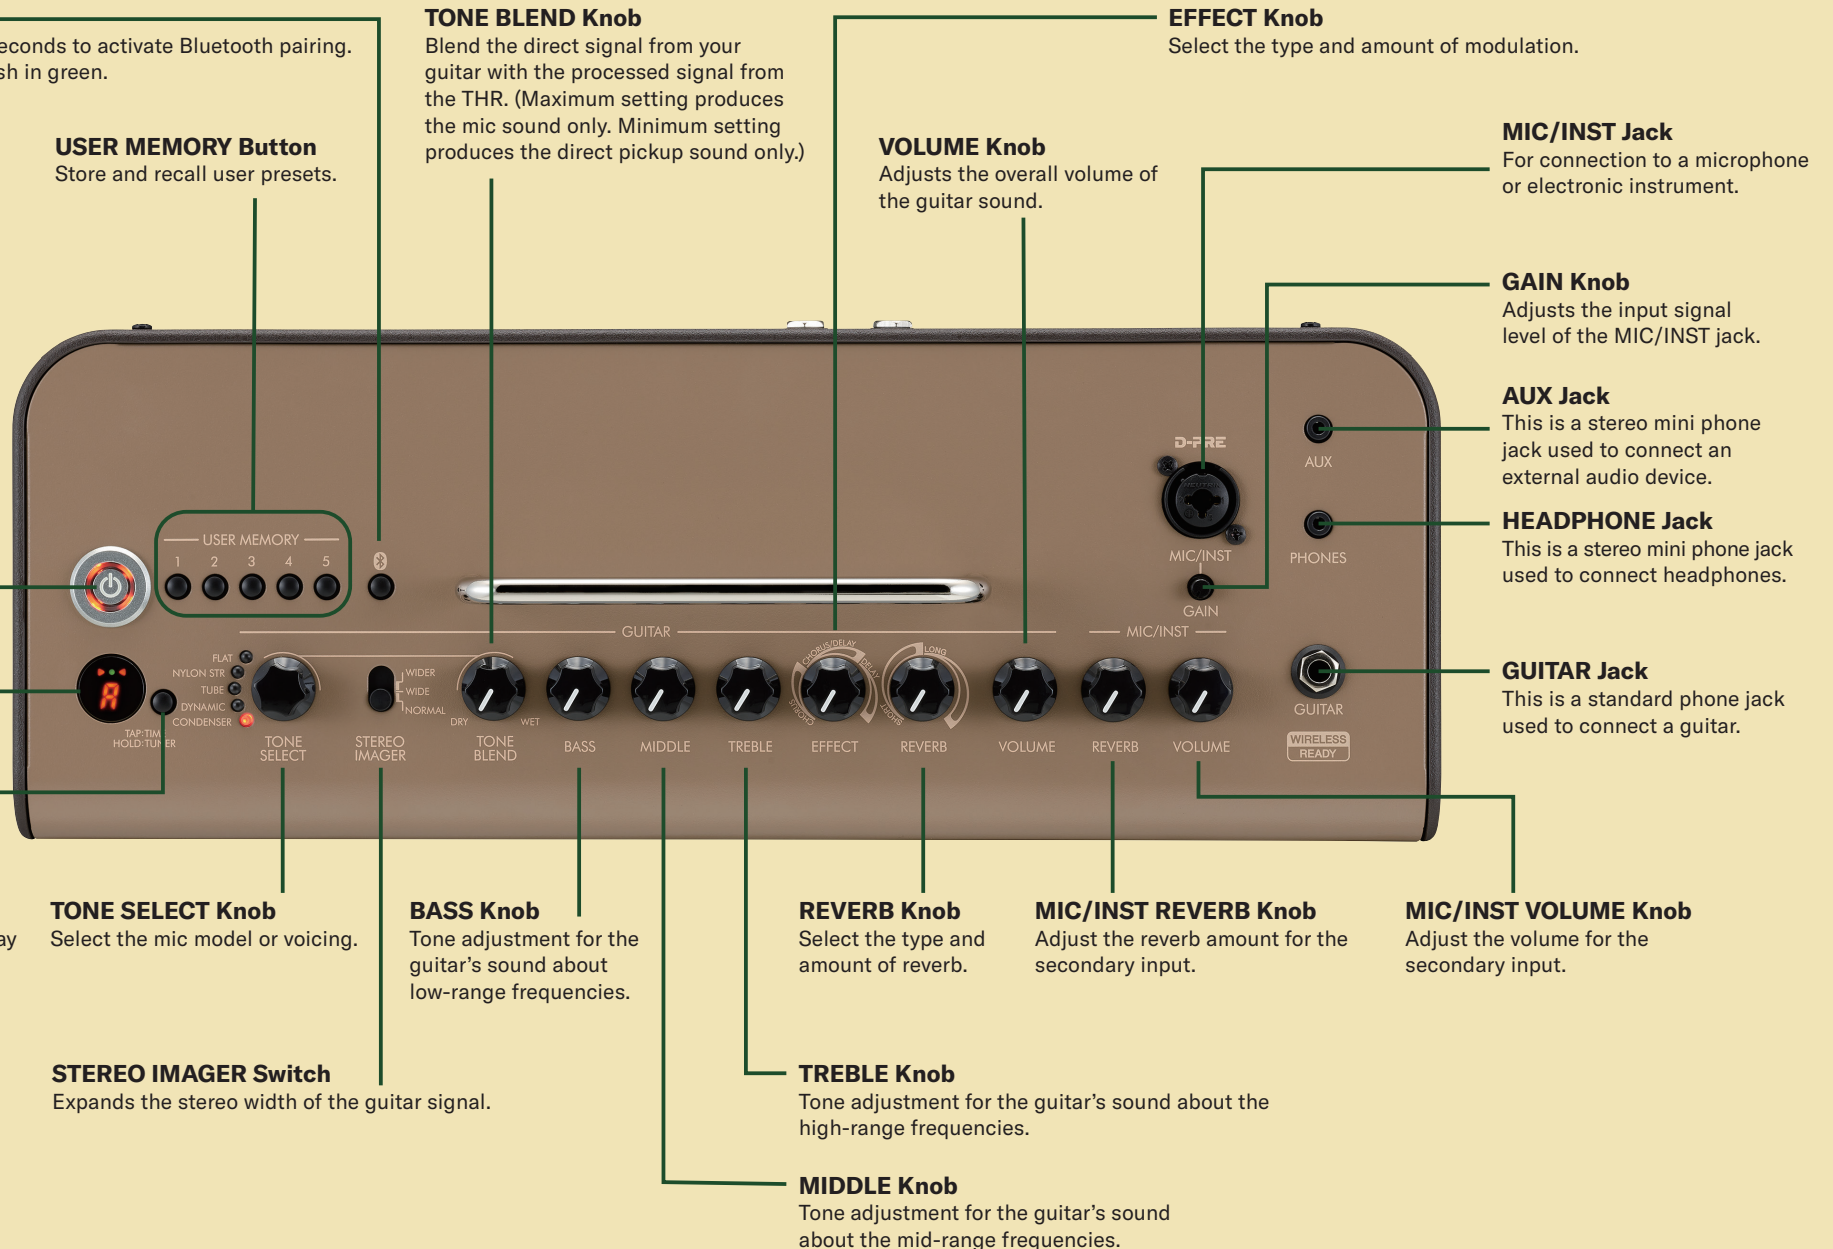

THR5

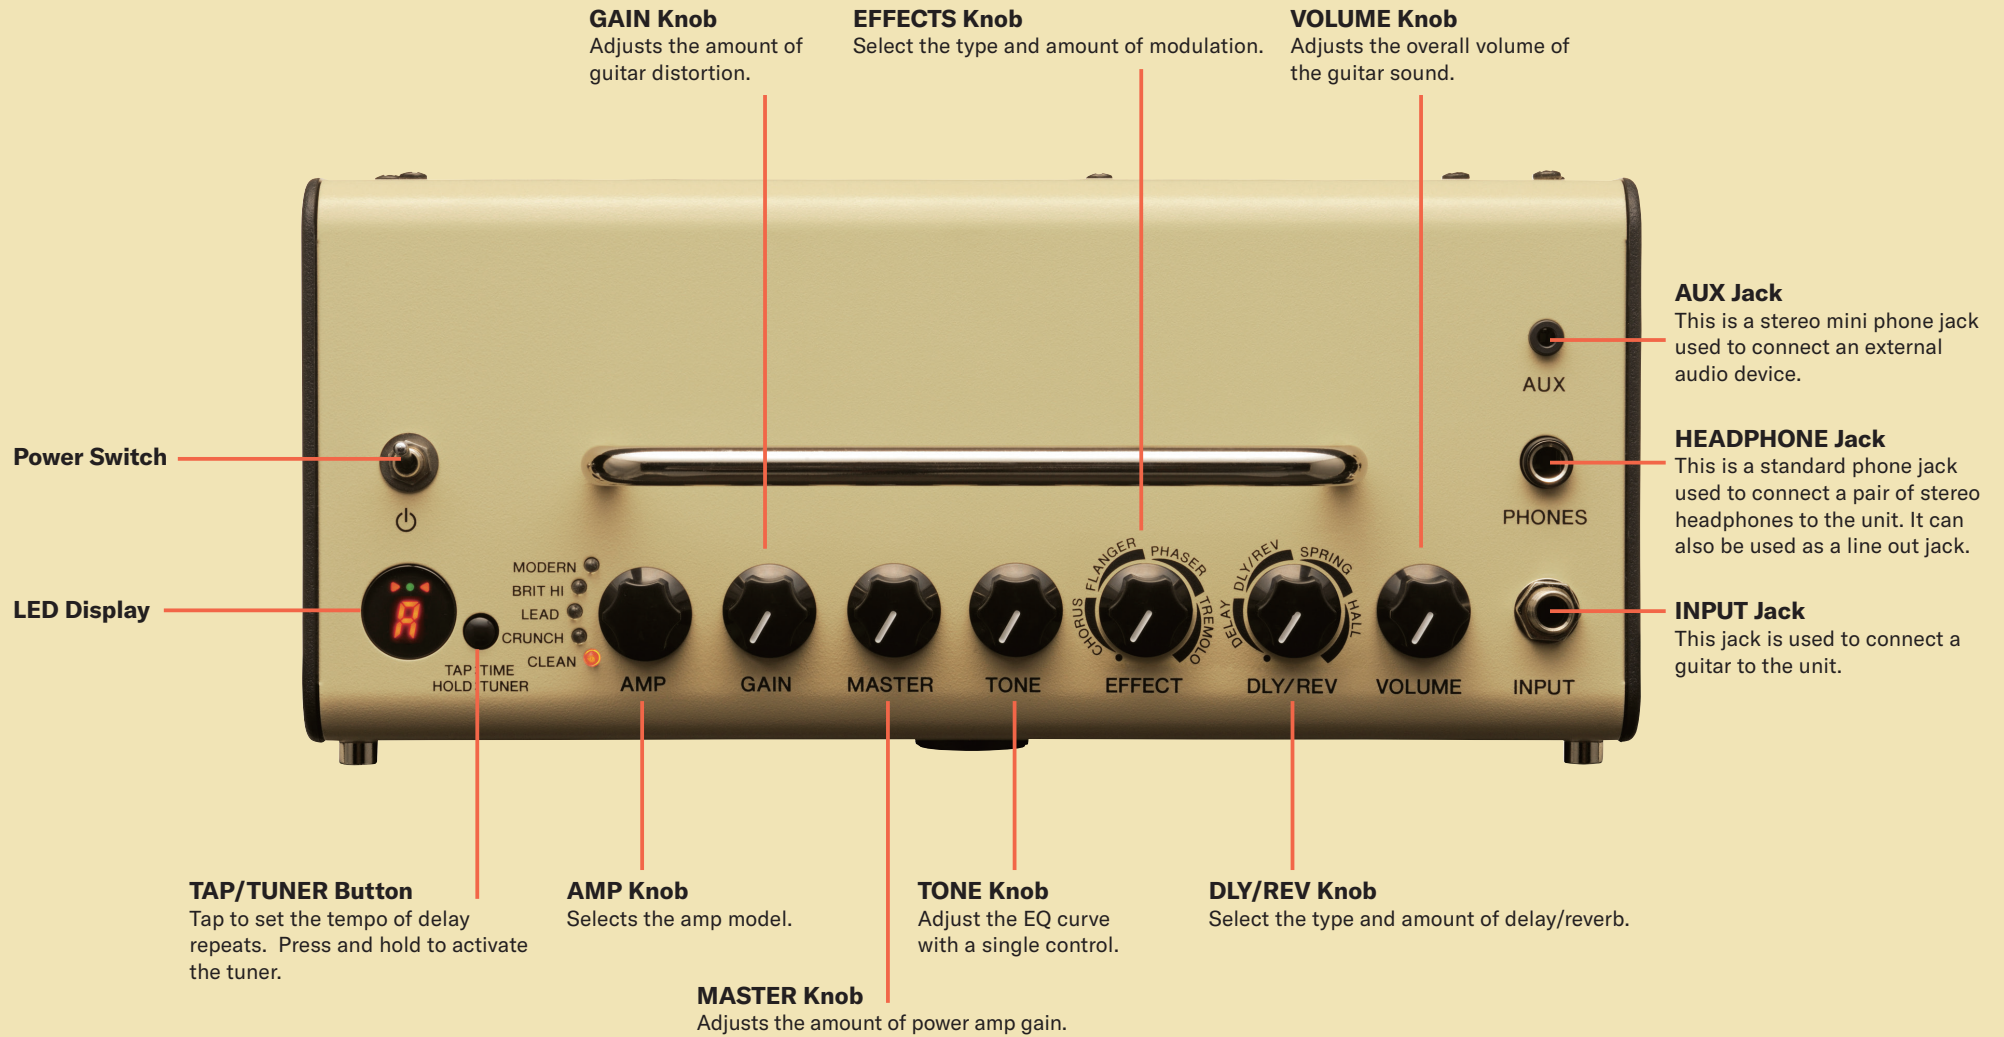

THR5A

