

Thank you for purchasing a Yamaha metronome.  
Before using the metronome, please read the instructions in this manual carefully for proper use and care.  
Please keep this manual handy for ready reference.

### Safety Precautions

Please read before using

**The precautions given below concern the proper and safe use of the instrument, and are to protect you and others from any damage or injuries. Please follow and obey these precautions.**

If children are using the instrument, a guardian should clearly explain these precautions to the child and make sure they are fully understood and obeyed. After reading this manual, please keep it in a safe place for future reference.

#### ■ About the Icons

⚠ This icon indicates points which should be paid attention to.

⊘ This icon indicates actions that are prohibited.

**⚠ CAUTION** Disobeying the points indicated with this mark may lead to damage or injury.

⊘ Do not remove the pendulum. There is a fear that children may swallow it.

⊘ Do not remove the pendulum shaft from the stopper except when using the metronome. You may be injured by the end of the shaft.

⊘ Do not place the metronome on unstable surfaces. It may fall, resulting in damage or injury.

#### ■ Precautions for using the metronome

⊘ Do not place or use the metronome in dirty or humid places.

⊘ Do not remove the bottom of the case.

⚠ Do not leave the metronome on unstable location, on a high shelves, or similar. If the metronome falls, it may be damaged.

⚠ Do not expose the metronome to direct sunlight as this will discolor and deform it.

⚠ To clean the case, wipe it with a cloth dipped in a solution of neutral detergent. Do not use volatile solvents such as paint thinner or benzene.

If the metronome does not operate, please consult the retailer from whom it was purchased.

#### ■ How to use

1) After taking the metronome out of the box, remove the black stopper from the bottom of the case as shown in Illustration "A-①". (The stopper protects the pendulum from any shocks during shipping)

2) Pull the upper portion of the lid toward you and pull the lid up to remove it. (See Illustration "A-②")

3) Turn the winder clockwise until the spring is fully wound. Then, place the metronome on a level surface.

4) Set the tempo.

- Slide the tip of the pendulum shaft to the side to release it from the pendulum support.
- Move the pendulum up or down to set its top to the desired tempo on the speed indication panel.

\* For example, if the music indicates "M.M. ♩ = 72", set the top of the pendulum to "72".

5) To set the beat, set the beat selector to "2", "3", "4", or "6". The metronome will ring at the first stroke of duple, triple, quadruple or sextuple time, respectively.

\* To silence the beat sound, set the dial to "0".

6) Check that the metronome is on a level surface, and move the pendulum shaft gently sideways to start the pendulum movement.

7) After use, keep the pendulum shaft in the pendulum support and close the lid.

\* To close the lid, set the lower portion of the lid in the case and push the upper portion until it clicks into position. (Refer to figure A-② and follow, in reverse order, the procedures for removing the lid.)

#### ■ Names of parts

