


RX-V665/HTR-6260 Zone 2 Hookup Example

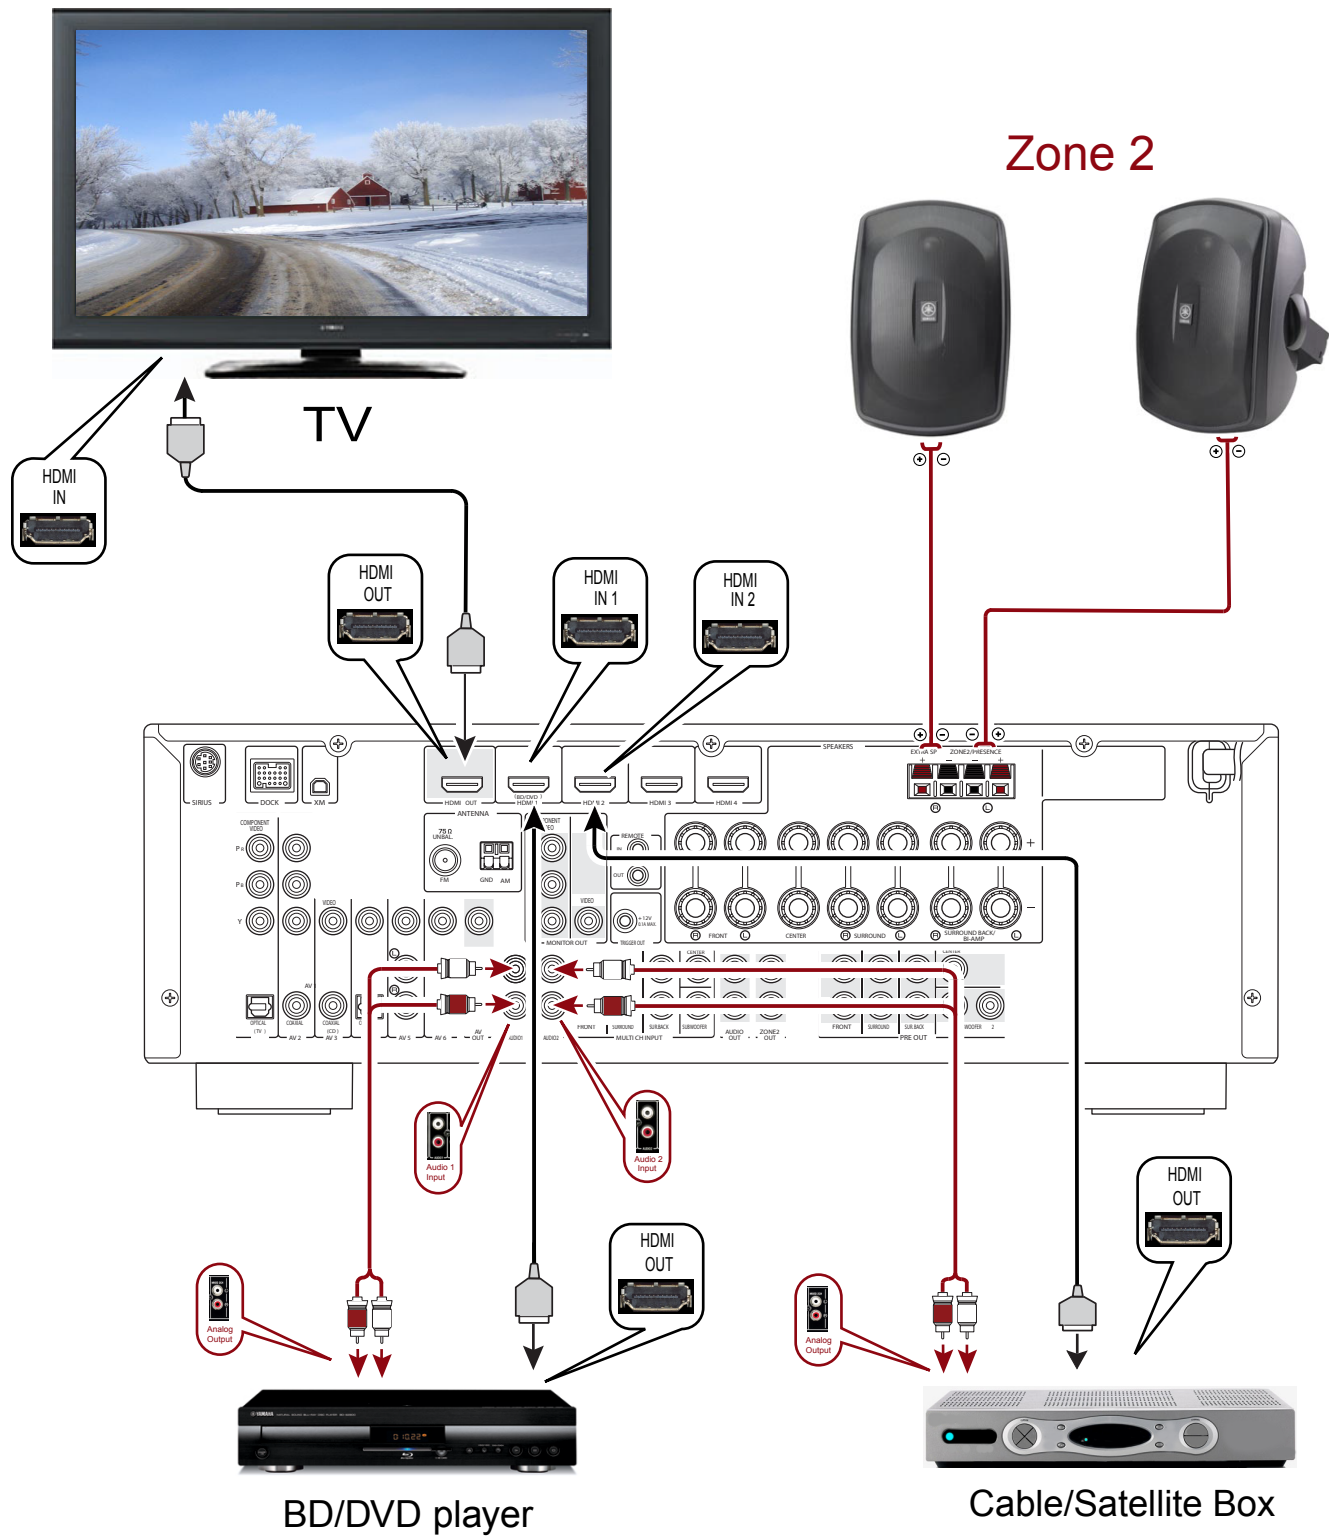

NOTE:
To select the BD/DVD player as a source for Zone 2, the Audio 1 input on the receiver must be selected in Zone 2.

NOTE:
To select the Cable/Satellite Box as a source for Zone 2, the Audio 2 input on the receiver must be selected in Zone 2

Zone 2 setup on the HTR-6260 using the Internal Power Amp

The **HTR-6260 Extra Speaker Terminals** can power one set of speakers for *Zone 2* or **Presence** speakers. If the **Extra Speaker Terminals** are utilized then the **HTR-6260** cannot be set for 7.1 (Surround Back terminals.) or Bi Amp (Surround Back terminals.)

Setting the **Extra Speaker Terminals**

Note: The **HTR-6260** remote control will be used to access the **Setup Menu** of receiver.

1. Press the **Setup** button on the remote control to enter the **Setup Menu**.
2. **Setup, Speaker Setup** will come up on the receiver **LED Screen**.
3. Press the **Enter** Button on the remote control.
4. Sp Set, **1 Auto Setup** will come up on the receiver **LED Screen**.
5. **Arrow** down until **2 Manual Setup** comes up in the receiver **LED Screen**.
6. Press the **Enter** Button on the remote control.
7. **Manual Setup, A) Config** will come up on the receiver **LED Screen**.
8. Press the **Enter** Button on the remote control.
9. **SP Set, A) Config** will come up on the receiver **LED Screen**.
10. Press the **Enter** Button on the remote control.
11. **Config, Extra.....None** will come up on the receiver **LED Screen**.
12. Use the **Left/Right Arrow** buttons on the remote to change the **Extra** to: **Extra.....Zone2**.
13. Use the **Return** and **Setup** buttons on the remote to exit the **Setup Menu**.
14. **Extra Speaker** setup is complete.

To control **Zone 2** using the **HTR-6260** remote the switch at the upper most left hand corner of the remote must be set to **Zone 2**. Once the remote has been set to **Zone 2** the following commands will be available:

1. Selecting the input source (**AV5-6, AUDIO1-2, and V-AUX**) of **Zone 2**.
2. Adjusting the volume of **Zone 2** (when a **Zone 2** speaker is connected to the **EXTRA SP** jack).
3. Tuning into **FM** or **AM** when "**TUNER**" is selected as the input source of **Zone 2** (see page 29 of the owner's manual).
4. Tuning into **XM Satellite Radio** when "**XM**" is selected as the input source of **Zone 2** (see page 31) (U.S.A. model only).
5. Tuning into **SIRIUS Satellite Radio** when "**SIRIUS**" is selected as the input source of **Zone 2** (see page 35) (U.S.A. model only).
6. Playing back music stored on your iPod stationed in a **Yamaha iPod** universal dock (such as **YDS-10, YDS-11 and YDS-12** sold separately) connected to the **DOCK** terminal.

Note: Only **Analog** signals can be sent to **Zone 2**. If you want to output the sound from **Zone 2**, connect an external component to **AV 5-6** or **Audio 1-2** by analog connection.

Important Safety Notice:

The EXTRA SP Speaker Terminals of this unit should not be connected to a Passive Loudspeaker Selector Box or more than one Loudspeaker per Channel. Connection to a Passive Loudspeaker Selector Box or Multiple Speakers per channel could create an abnormally low impedance load resulting in amplifier damage.