 


ATS-1520 Quick Start Guide



Supplied items


Before assembling and connecting, make sure you have received all of the following items. If anything is missing, please call 888-892-6242, 8AM to 5PM PST Monday through Friday.




Sound bar (ATS-1520)



Mounting template
(Use when attaching the sound bar to a wall.)

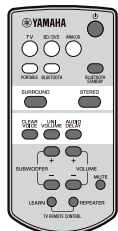


Remote control

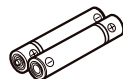


Two AAA batteries
(Install the batteries in the remote control.)



Optical cable
1.5 m (4.9 ft)


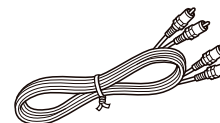


RCA stereo cable
1.5 m (4.9 ft)

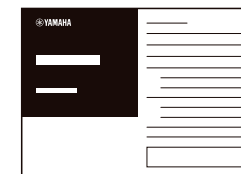

Owner's Manual

Placement

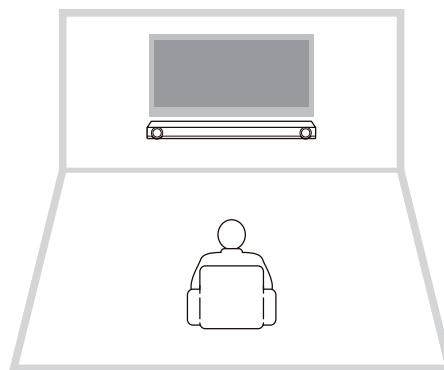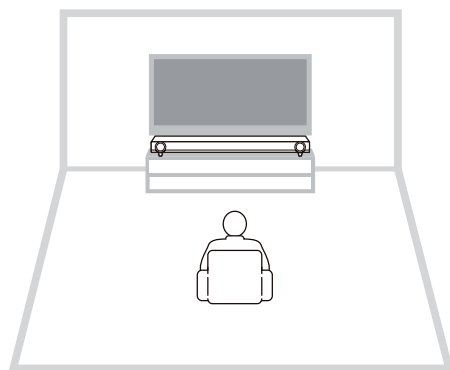

Place the sound bar in front of or below your TV, either with or without a stand, at least 2" away from your TV.

The sound bar may also be mounted on a wall, using the included mounting template and commercially available screws. Refer to the Owner's Manual for additional mounting instructions.

NOTE

- Be careful not to stack this unit with any other components, as vibration may cause system disruption in other components.

Continued to the reverse side



Connections

1. **Connect the TV and sound bar with the optical cable (supplied).**
Remove the cap of the optical cable and check the direction of the plug.





2. **Connect the power cable of the sound bar to an AC wall outlet.**

3. **Turn on the TV and set the volume to minimum.**
4. **Disable the TV's built-in speaker output (if available).**

HINT

If a setting to disable the speaker output is not available on your TV, you may disable it by connecting headphones to the headphone jack on the TV. For details, refer to the instruction manual of the TV.

Sound bar

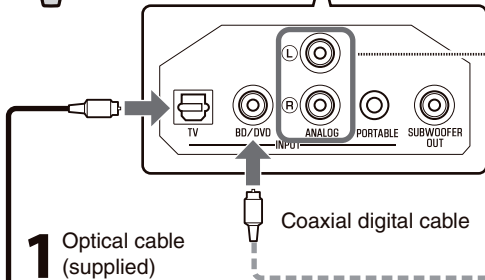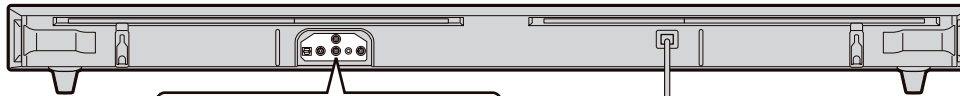

HINT

If your TV is not equipped with an optical audio output jack, connect your TV to the ANALOG jack with the RCA stereo cable (supplied).


2

Connect to an AC wall outlet. Leave the unit powered off until all connections are complete.

HINT

In a standard setup, all source devices are connected to your TV and audio is output to the sound bar via a single optical cable.

However, if sound from a playback device cannot be output from the TV, connect the playback device to the sound bar directly, using the supplied RCA stereo cable, or an optional digital coaxial cable.

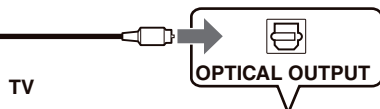

TV



Set top box or playback device
(such as a Blu-ray Disc™ player)

3, 4

 

Watching TV

For details, refer to the Owner's Manual.

1. **Press to turn on the sound bar.**
2. **Press the TV key to select TV as the input source.**
3. **Select the desired input source on the TV.**
4. **Press the VOLUME (+/-) keys to adjust the volume.**

Playback of a *Bluetooth*® device

You can connect a *Bluetooth* device, such as a smartphone or digital music player, with the sound bar wirelessly. For details, refer to the Owner's Manual.

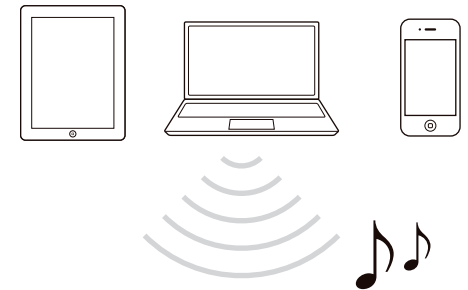

... and more features!

For details about the other useful features, refer to the Owner's Manual.

- Clear voice
- UniVolume
- TV remote control learning function
- TV Remote Repeater

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yamaha Corporation is under license.

Blu-ray Disc is a trademark of the Blu-ray Disc Association.