 


About DTX500 Version 1.10

The Owner's Manual included in the DTX500 is for firmware version 1.10. This leaflet provides supplemental information for DTX500 version 1.10.

To check the version number:

Press the power switch while holding down the [SHIFT] button.



Version Number

Trigger Setup List (page 12 of Owner's Manual)

Trigger Setup parameters of the DTX500 version 1.10 are shown in Table 1. For users of the DTX500 series Drum Set, set the Trigger Setup to "1: Medium" or "2: Dynamic". In addition, you can set suitable pad types for your drum set as shown in Table 2. For details, see "Trigger Setup Edit" on page 34 of the Owner's Manual.

Table 1

No.	Name		Features
1	Medium	DTX500 series Drum Sets	Normal Setting
2	Dynamic		Wide dynamic range. The setting is designed for maximum expressive control, allowing performance subtleties over a wide dynamic range. Excessive vibration however, may result in crosstalk (sound being produced by other pads).
3	SP Med	for DTXPRESS IV Special Drum Set	Refer to page 12 of the Owner's Manual
4	SP Dyna		
5	STD Med	for DTXPRESS IV Standard Drum Set	
6	STD Dyna		
7	DT10/20	-	
8 -11	UserTrg	-	

* In the default setting, "1: Medium" is selected.

Table 2

Set Name	DTX500K	DTX520K	DTX540K	DTX550K
Pad type for a snare pad	SN-3	SN-4	SN-4	SN-1
Pad type for a tom pad	TM-3	TM-3	TM-4	TM-3

Pad types (page 35 of Owner's Manual)

Pad types of the DTX500 version 1.10 are defined as follows.

KICK XP125W/125/80S/80/65/60
 SN-1 XP120SD/120T/100SD/100T
 SN-2 TP120SD/100
 SN-3 TP65S/65
 SN-4 XP80/70
 SN-5 XP120SD/120T/100SD/100T/80/70/TP65S/65
 TM-1 XP120SD/120T/100SD/100T
 TM-2 TP120SD/100
 TM-3 TP65S/65
 TM-4 XP80/70
 TM-5 XP80/70/TP65S/65
 CY-1 PCY155/150S/135/100/65 *
 CY-2 PCY155/150S/135/100/65 *
 CY-3 PCY155/150S/135/100/65 *
 CY-4 PCY130SC
 CY-5 PCY130S/130
 CY-6 PCY65S
 HH-1 RHH135/PCY100/TP65
 HH-2 RHH130

DT Snare DT series drum trigger (for snare pad)
 DT HiTom DT series drum trigger (for small toms)
 DT LoTom DT series drum trigger (for large toms)
 DT Kick DT series drum trigger (for bass drum)
 misc 1-6 Other manufacturer's pads 1 to 6

NOTE

- SN-1, 2, 3, 4, and 5 are used as snare pads.
 TM-1, 2, 3, 4, and 5 are used as tom pads.
 CY-1, 2, 3, 4, 5, and 6 are used as cymbal pads.
 HH-1 and 2 are used as hi-hat pads.
- * These pad types are different in the sensitivity settings among the three sections (the Bow, Edge, and Cup sections in a 3-zone cymbal pad). You can change these as desired.
 The "CY-1" setting features the same sensitivity settings for all three sections.
 In the "CY-2" setting, the sensitivity of the Edge section is fairly lower than that of the other sections.
 In the "CY-3" setting, the sensitivity of the Cup section is fairly lower than that of the other sections.