

Read Me First

Use this guide to make sure all connections are properly done prior to powering the unit ON.

YMC-700/YMC-500 Quick Start Guide

Start

Items used for setup in this guide

Supplied items

- YMC-700/YMC-500 (this unit)
- Power cable
- Remote control
- IR flasher x2

Required items

- TV with an HDMI connection
- HDMI cable from this unit to TV
- Source devices (Cable box, DVD, etc.)
- HDMI and/or Audio/Video cables from source devices
- Speakers and speaker cables
- Subwoofer and subwoofer cable

For operation and installation details, refer to the owner's manual of each source device item.

1 On the Connection Planning Chart [A], write down the source devices (except TV) that you will connect in order of most frequently used (from left to right) as follows.

A Connection Planning Chart
Use this chart to find the best possible connections.

The device you will use most frequently

Device 1	Device 2	Device 3
Cable box	DVD	Game
VIDEO 1 9 pt	VIDEO 2 6 pt	VIDEO 3 3 pt
AUDIO 1 3 pt	AUDIO 2 2 pt	AUDIO 3 1 pt

2 View the output jacks available on each source device and then fill in the check box.

Example: A cable box

A Connection Planning Chart
Use this chart to find the best possible connections.

The device you will use most frequently

Device 1	Device 2	Device 3
Cable box	DVD	Game
VIDEO 1 9 pt	VIDEO 2 6 pt	VIDEO 3 3 pt
AUDIO 1 3 pt	AUDIO 2 2 pt	AUDIO 3 1 pt

3 Choose the best connections available for your source device as follows:

- When there is a check mark on the HDMI jack, circle the top HDMI 1, HDMI 2, or HDMI 3. If the top input has already been selected by another device, select the next one.
- If there are NO check marks in any of the HDMI jacks, then make sure to select a video jack with an audio jack.

A Connection Planning Chart
Use this chart to find the best possible connections.

The device you will use most frequently

Device 1	Device 2	Device 3
Cable box	DVD	Game
VIDEO 1 9 pt	VIDEO 2 6 pt	VIDEO 3 3 pt
AUDIO 1 3 pt	AUDIO 2 2 pt	AUDIO 3 1 pt

4 Write down the point (pt) of the circled item(s). If two items (AUDIO 1 to 3 and VIDEO 1 to 3) are circled, add both points for the VIDEO and AUDIO. Refer to the following examples.

A Connection Planning Chart
Use this chart to find the best possible connections.

The device you will use most frequently

Device 1	Device 2	Device 3
Cable box	DVD	Game
VIDEO 1 9 pt	VIDEO 2 6 pt	VIDEO 3 3 pt
AUDIO 1 3 pt	AUDIO 2 2 pt	AUDIO 3 1 pt

5 Write down the names of the devices to the corresponding columns of "Connection Diagrams [B]" to the numbers you wrote in [4].

B Connection Diagrams

15 pt, 12 pt, 9 pt, 6 pt, 3 pt, 14 pt, 11 pt, 8 pt, 5 pt, 2 pt, 13 pt, 10 pt, 7 pt, 4 pt, 1 pt

6 Refer to "Connection Diagrams [B]" and then connect the cables from the source devices to this unit as indicated. See page 6 about further connections (iPod dock, LAN, etc.)

7 Use the HDMI out of this unit to your TV. Use an HDMI cable to connect this unit to your TV's HDMI input.

8 Connect the supplied IR flashers to the REMOTE OUT 1 and 2 jacks on the back of this unit, then attach the IR Flasher to the remote control sensor on the front of the devices as follows. (See P. 8 for details) This will allow this unit to control the other source devices attached.

9 Connect speakers to the SPEAKERS terminals. If speakers have color coded terminals, match the colors. If the speakers are not color coded on the terminals, then match + and -.

C, SL, and SR speakers are used for 5.1-channel speaker layout.

10

- Connect the power cable to this unit and plug it to a wall outlet.
- Turn all connected devices ON including this unit, subwoofer and TV. Make sure to select the appropriate HDMI input on the TV to display neoHD "Initial Setup" screen.
- Follow the setup process of this unit by using the "Initial Setup" on screen guide to complete the basic configuration. (See P. 10)

A Connection Planning Chart

Use this chart to find the best possible connections.

The source device you will use most frequently

	Device 1	Device 2	Device 3	Device 4	Device 5	Device 6
Write down the device you want to connect	Device name Brand Model No.					
HDMI	<input type="checkbox"/> HDMI① 15 pt	<input type="checkbox"/> HDMI① 15 pt	<input type="checkbox"/> HDMI① 15 pt	<input type="checkbox"/> HDMI① 15 pt	<input type="checkbox"/> HDMI① 15 pt	<input type="checkbox"/> HDMI① 15 pt
Best HDMI	<input type="checkbox"/> HDMI② 14 pt	<input type="checkbox"/> HDMI② 14 pt	<input type="checkbox"/> HDMI② 14 pt	<input type="checkbox"/> HDMI② 14 pt	<input type="checkbox"/> HDMI② 14 pt	<input type="checkbox"/> HDMI② 14 pt
	<input type="checkbox"/> HDMI③ 13 pt	<input type="checkbox"/> HDMI③ 13 pt	<input type="checkbox"/> HDMI③ 13 pt	<input type="checkbox"/> HDMI③ 13 pt	<input type="checkbox"/> HDMI③ 13 pt	<input type="checkbox"/> HDMI③ 13 pt
Video	<input type="checkbox"/> VIDEO① 9 pt	<input type="checkbox"/> VIDEO① 9 pt	<input type="checkbox"/> VIDEO① 9 pt	<input type="checkbox"/> VIDEO① 9 pt	<input type="checkbox"/> VIDEO① 9 pt	<input type="checkbox"/> VIDEO① 9 pt
Better COMPONENT VIDEO	<input type="checkbox"/> VIDEO② 6 pt	<input type="checkbox"/> VIDEO② 6 pt	<input type="checkbox"/> VIDEO② 6 pt	<input type="checkbox"/> VIDEO② 6 pt	<input type="checkbox"/> VIDEO② 6 pt	<input type="checkbox"/> VIDEO② 6 pt
Standard COMPOSITE	<input type="checkbox"/> VIDEO③ 3 pt	<input type="checkbox"/> VIDEO③ 3 pt	<input type="checkbox"/> VIDEO③ 3 pt	<input type="checkbox"/> VIDEO③ 3 pt	<input type="checkbox"/> VIDEO③ 3 pt	<input type="checkbox"/> VIDEO③ 3 pt
Audio	<input type="checkbox"/> AUDIO① 3 pt	<input type="checkbox"/> AUDIO① 3 pt	<input type="checkbox"/> AUDIO① 3 pt	<input type="checkbox"/> AUDIO① 3 pt	<input type="checkbox"/> AUDIO① 3 pt	<input type="checkbox"/> AUDIO① 3 pt
Better COAXIAL	<input type="checkbox"/> AUDIO② 2 pt	<input type="checkbox"/> AUDIO② 2 pt	<input type="checkbox"/> AUDIO② 2 pt	<input type="checkbox"/> AUDIO② 2 pt	<input type="checkbox"/> AUDIO② 2 pt	<input type="checkbox"/> AUDIO② 2 pt
Better OPTICAL	<input type="checkbox"/> AUDIO③ 1 pt	<input type="checkbox"/> AUDIO③ 1 pt	<input type="checkbox"/> AUDIO③ 1 pt	<input type="checkbox"/> AUDIO③ 1 pt	<input type="checkbox"/> AUDIO③ 1 pt	<input type="checkbox"/> AUDIO③ 1 pt
Standard AUDIO L/R						




*The numbers of pts are used in the Initial Setup procedure.

B Connection Diagrams

H: HDMI V: VIDEO A: AUDIO

15 pt, 12 pt, 9 pt, 6 pt, 3 pt, 14 pt, 11 pt, 8 pt, 5 pt, 2 pt, 13 pt, 10 pt, 7 pt, 4 pt, 1 pt

Use the following cables for connections.

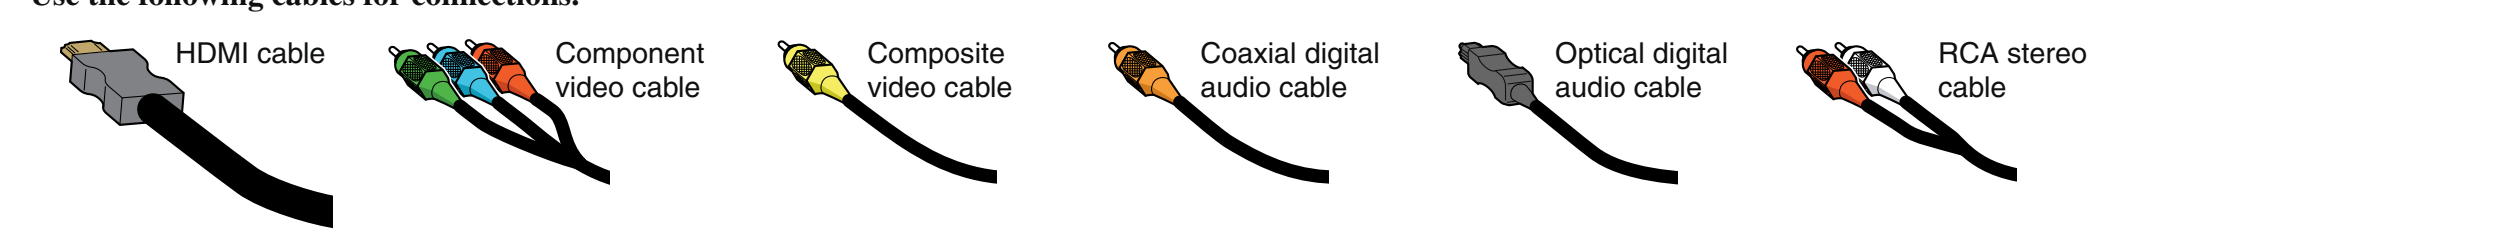

Begin the Initial Setup