



The diagram shows a horizontal control panel with four main controls. From left to right: a small circular button labeled 'POWER'; a slider control labeled 'MASTER VOLUME' with 'MIN' and 'MAX' markings; a rectangular button with a circle inside labeled 'DEMO'; and a pill-shaped button labeled 'VOICE'.


The diagram shows a horizontal control panel with four main sections. From left to right: a small circle labeled 'POWER'; a slider control labeled 'MASTER VOLUME' with 'MIN' and 'MAX' markings; a toggle switch labeled 'DEMO'; and a rectangular button labeled 'VOICE'.

[illegible]


P-60 Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters.



Tune Up: in about 0.2Hz steps (Press any highlighted key)

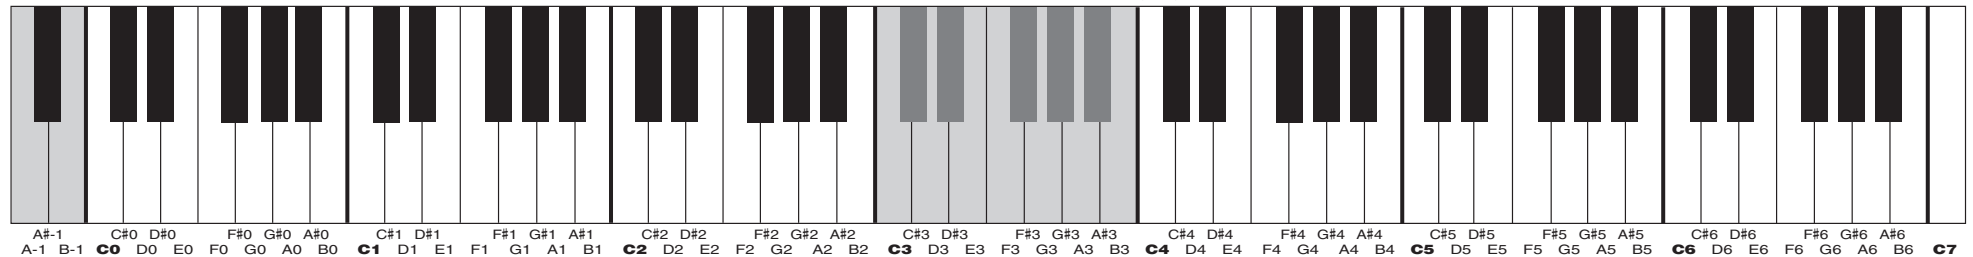

Tune Down: in about 0.2Hz steps (Press any highlighted key)

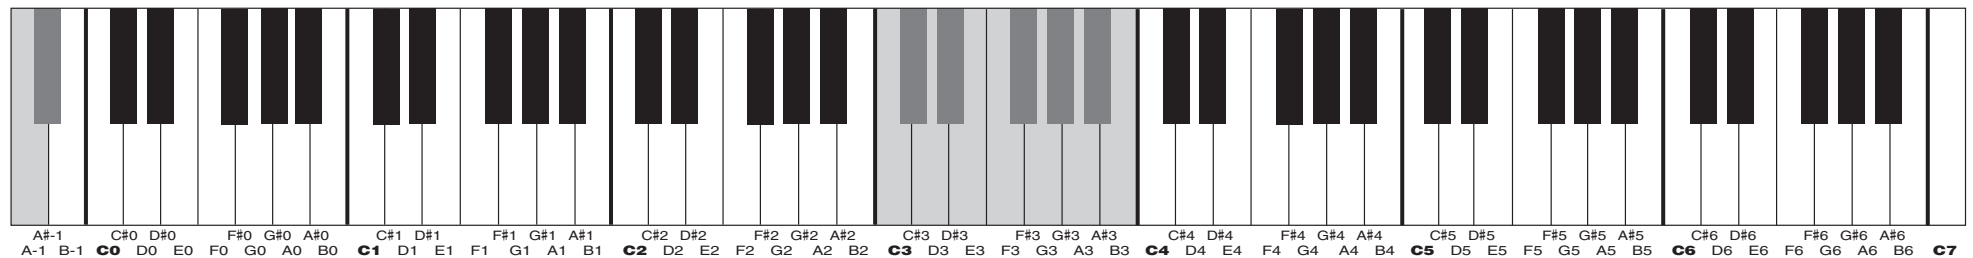

Standard pitch : 440.0 Hz (Press any highlighted key)

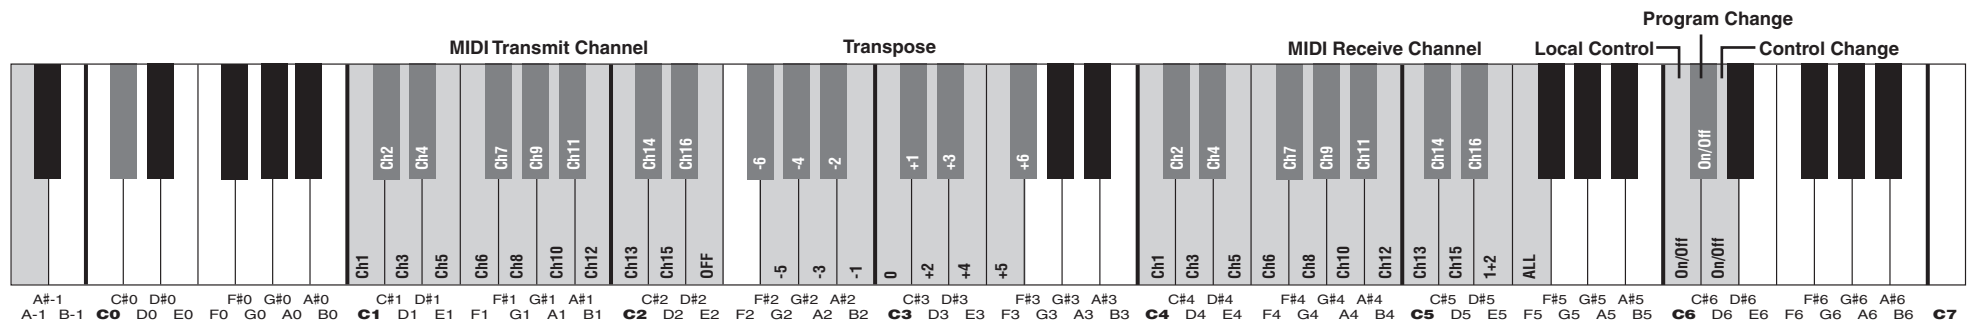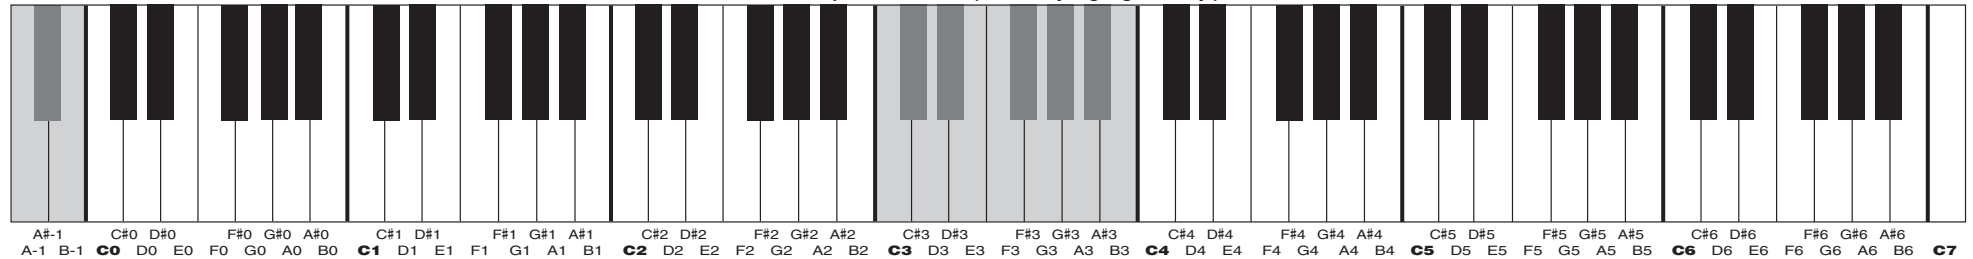

This document is printed on recycled chlorine free (ECF) paper with soy ink.

Auf Recycling-Umweltpapier mit Sojatinte gedruckt.

Ce document a été imprimé sur du papier recyclé non blanchi au chlore avec de l'encre d'huile de soja.

Este documento se ha impreso reciclado en papel sin cloro alguno, con tinta de soja.

M.D.G., Pro Audio & Digital Musical Instrument Division, Yamaha Corporation

©2002 Yamaha Corporation

WA58560 210APAP2.3-01A0 Printed in Japan