



 
LC4 **MUSIC LAB**

Wi-Fi Kit Installation Guide

Contents

What's Included	1
Setup Instructions	2
Notes	3
Troubleshooting Guide	4


What's Included

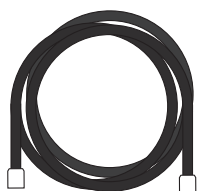


Ethernet cable



 
Stereo 1/8" to
RCA Y-cable



Pre-configured Apple
Airport Express

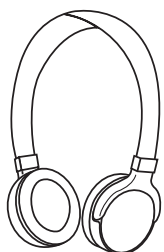 


Wireless stereo
headphones

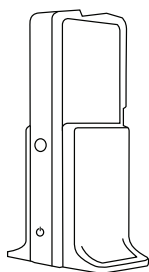 

Wireless headset
transmitter

 5. Connect the iPad Wi-Fi to the Airport Express network named “LC4LAB.” This network is private (not publically visible) so not just anyone will be able to find and join it. To do this, click on the Settings icon on your iPad. Next, select Wi-Fi from the Settings menu. Select “Other.” Enter the network name “LC4LAB” (case sensitive) and choose security type WPA2 Personal. When prompted, enter the case-sensitive password: YamahaLC4.

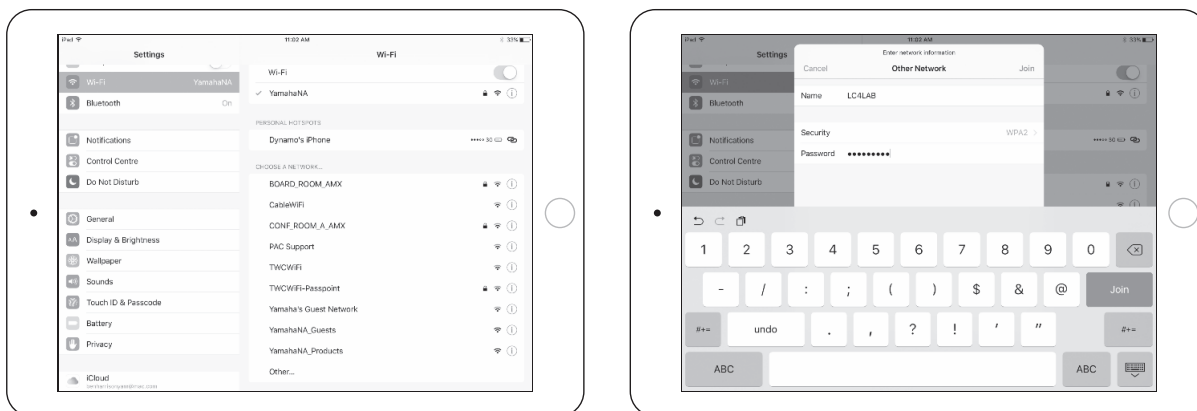

Once connected, open the LC4 Controller app and enjoy wireless operation of your music lab!

Notes

- It is recommended that you close any other apps running on your iPad when using the LC4 Controller app.
- When connected to the “LC4LAB” network, you will not have an internet connection unless the Airport Express is connected to the Internet already (see Airport Express owner’s manual for more information).

Troubleshooting Guide

Symptom	Solution
My LC4 is not detected by the app.	Ensure that Airport Express is connected properly to the LC4 Hub via the Ethernet port.
	Ensure that the iPad is connected to the wireless network called "LC4LAB."
LC4 Controller app connects without an error but isn't working properly.	Close the app, restart the LC4 lab system (power off and back on from the hub) and then restart the app.
"LC4LAB" network does not show in available networks on iPad Wi-Fi setting.	This is normal. The network is hidden and will not appear on this list. Choose "Other" from the networks list, enter "LC4LAB" for the network name, select WPA2 as the security type and enter "YamahaLC4" (case sensitive) for the password.
I can't connect to the "LC4LAB" network.	Verify that the correct security setting is selected (WPA2) and that the password is entered correctly ("YamahaLC4").
	Contact Yamaha customer support at 800-854-1569.
I can't hear anything in the wireless headphones.	Ensure that the input on the headphone transmitter/base station is connected to the Phone output 2 of the teacher's instrument box using the supplied 1/8" to 1/8" cable.
	Refer to the user manual for the wireless headphones to verify setup and operation procedures.