

# RX-V567/HTR-5063 How to program remote control codes For TV Control Key Operations



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

- 1 Use the remote codes listed in this document to find your TV manufacturer code.
- 2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



- 3 Press the TV Power button on the bottom of the remote.



- 4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

# List of remote control codes

<b>TV</b>		Axion	0156	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elin	0277, 0320, 0323, 0342, 0349, 0350
A.R. Systems	0320	Baird	0282	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elite	0320, 0340, 0350
Acme	0342	Bang & Olufsen	0180, 0339	Contec/Cony	0012, 0058	Elman	0341
Acura	0323, 0343	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Continental Edison		Elta	0277, 0323, 0343
ADC	0337	Bastide	0282, 0342			Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Baur	0320, 0349	Cosmel	0323, 0343	Emprex	0154
Advent	0158	Bazin	0282	Craig	0058, 0179	Envision	0008, 0026, 0050
Adventura	0057	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Crosley	0010, 0037, 0171, 0339	Epson	0155, 0206, 0359
Adyson	0277, 0282, 0342	Belcor	0008	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	Erres	0320, 0349, 0350
Agashi	0277, 0282	Bell & Howell	0019, 0054	CS Electronics	0277, 0340, 0342	ESA	0051
Agazi	0337	Benq	0097, 0242, 0361	CTC Clatronic	0341	ESC	0282
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Beon	0320, 0349, 0350	CTX	0205	Etron	0343
Aim	0320	Best	0161	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Eurofeel	0282
Aiwa	0078, 0379	Bestar	0161, 0320, 0350	CXC	0058, 0179	Euro-Feel	0337
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Binatone	0282, 0342	Cybertron	0340	Euroline	0349
Akiba	0320, 0340	Blue Sky	0320, 0340	Cytron	0152	Euroman	0161, 0277, 0282, 0320, 0337, 0342, 0350
Akura	0320, 0323, 0337, 0340	Blue Star	0348	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Europhonic	0277, 0282, 0320, 0341, 0342, 0350
Alaron	0277	Boots	0282, 0342	Dainichi	0277, 0340	Expert	0321
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	BPL	0320, 0348	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Exquisit	0320
Albatron	0140	Bradford	0058, 0179	Dantax	0161, 0349	Fenner	0323, 0343
Alcyon	0171	Brandt	0322, 0345	Dawa	0320	Ferguson	0322, 0345, 0349
Alleron	0059	Brilliant	0182	Daytron	0007, 0008, 0026, 0323, 0343	Fidelity	0277, 0320, 0342, 0346
Allorgan	0282	Brinkmann	0320	De Graaf	0346	Filex	0282
Allstar	0320, 0350	Brionvega	0320, 0339, 0349, 0350	Decca	0282, 0320, 0342, 0349, 0350	Finlandia	0346
America Action	0179	Britannia	0277, 0282, 0342	Dell	0145, 0245	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
AMOi	0276	Brockwood	0008	Denver	0358, 0362	FIRST LINE	0342, 0343, 0350
Amplivision	0161, 0282, 0321, 0342	Broksonic	0109, 0179	Desmet	0320, 0349, 0350	Firstline	0277, 0282, 0320, 0323
Amstrad	0320, 0323, 0337, 0340, 0343	Bruno	0339	Diamant	0320	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Amtron	0058	BTC	0340	Diamond	0277	Flint	0320, 0350
Anam	0179, 0343	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	DiamondVision	0135, 0143	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Anam National	0052, 0058	Capsonic	0337	Dimensia	0049	Formenti/Phoenix	0277
Anglo	0323, 0343	Carena	0320	Disney	0219	Fortress	0336, 0339
Anitech	0171, 0320, 0323, 0337, 0343	Carnivale	0050	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Fraba	0161, 0320
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	Carrefour	0344	Dream Vision	0461, 0498	Friac	0161
AOC	0008, 0026, 0050, 0053	Carver	0010	DTS	0323, 0343	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Apex	0039, 0111, 0217	Cascade	0320, 0323, 0343	Dual	0282, 0320, 0342	Fujitsu	0059, 0069, 0074, 0075, 0282
Arcam	0277, 0282	Casio	0367	Dual-Tec	0342, 0343	Fujitsu General	0282
Arcam Delta	0342	Cathay	0320, 0349, 0350	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Aristona	0320, 0349, 0350	CCE	0183, 0282	Durabrand	0031, 0051, 0179, 0215	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337
Arthur Martin	0321	Celebrity	0055, 0107	Dux	0349	Futuretech	0058, 0179
ASA	0339, 0347	Celera	0039	Dwin	0178	Galaxi	0320, 0351
Asberg	0171, 0320, 0350	Centurion	0320, 0349, 0350	Dynatron	0320, 0349, 0350	Galaxis	0161, 0320
Astra	0343	Century	0339	Dynex	0228, 0231	Gateway	0176, 0177, 0241
Asuka	0277, 0282, 0337, 0340, 0342	CGE	0161, 0171	Elbe	0161, 0168, 0282, 0320	GBC	0323, 0343, 0344
Atlantic	0277, 0320, 0342, 0349, 0350	Changhong	0039	Elcit	0339	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209
Atori	0323, 0343	Chimei	0273	Electa	0348	Geant Casino	0321
Auchan	0321	Cimline	0323, 0343	ELECTRO TECH	0343	GEC	0282, 0320, 0342, 0347, 0349, 0350
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Citizen	0007, 0008, 0026, 0050, 0058	Electroband	0055, 0107	Geloso	0323, 0343, 0346
AudioTon	0161, 0282, 0342	City	0323, 0343	Electrograph	0176	General Technic	0323, 0343
Audiovox	0058, 0179, 0194	Clarion	0179	Electrohome	0008, 0026, 0052, 0055		
Ausind	0171	Clarivox	0349	Element	0230		
Autovox	0171, 0282, 0337, 0339, 0342	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351				
Aventura	0051	CMS	0277				
Awa	0277, 0282	CMS Hightec	0282				
		Coby	0197				
		Colortyme	0008, 0026				
		Commercial Solutions	0021				
		Concerto	0008, 0026				
		Concorde	0323, 0343				

Genexxa	0320, 0340, 0347, 0350	Infinity	0010	Lifetec	0320, 0323, 0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349
GFM	0128, 0227	InFocus	0250, 0327, 0363, 0479, 0508	Lloyds	0323		
Giant	0282	Ingelen	0347	Loewe	0161, 0168, 0265, 0320, 0330, 0352		
Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe Opta	0339, 0349, 0350	Murphy	0277, 0342
GoldHand	0277	Initial	0153	Logik	0054	NAD	0026, 0031, 0111
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Luma	0320, 0323, 0346, 0349	Naonis	0346
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Lumatron	0282, 0320, 0346, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insighnia	0131, 0228, 0236, 0238	Lux May	0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Inteq	0030	Luxor	0008, 0026		
		Interactive	0161	LXI	0282, 0342, 0346	NEI	0320, 0349, 0350
		Interbuy	0323, 0343		0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	Net-TV	0176
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Neufunk	0320, 0323
		International	0277			New Tech	0343, 0350
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	New World	0340
Gorenje	0161, 0351			Magnadyne	0339, 0341, 0349	NewTech	0282, 0320, 0323
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnafon	0171, 0277, 0341, 0342	Nicamagic	0277, 0342
GPX	0129					Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Gradiente	0240	Isukai	0320, 0340	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nikko	0026, 0031, 0050
Graetz	0347	ITC	0282, 0342			Nobliko	0171, 0277, 0341, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITS	0277, 0320, 0340, 0348, 0350				
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347	Magnum	0337, 0343	Nokia	0347
Gronic	0282	ITV	0320, 0343, 0349	Majestic	0054	Norcent	0201
Grundig	0160, 0161, 0171, 0310, 0320	Janeil	0057	Mandor	0337	Nordic	0282
		JBL	0010	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordmende	0339, 0345, 0347, 0350
Grunpy	0058, 0059, 0179	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Nordvision	0349
Haier	0157, 0233	JCB	0055, 0107			Novatronic	0320
Halifax	0277, 0282, 0337, 0342	Jensen	0008, 0026	Marelli	0339	Oceanic	0321, 0347
Hallmark	0008, 0026, 0031	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Mark	0277, 0282, 0320, 0323, 0349, 0350	Okano	0161, 0320, 0351
Hampton	0277, 0282, 0342			Matsuda	0282	Olevia	0102, 0199, 0200, 0207, 0222
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	ONCEAS	0342
Hantarex	0320, 0323, 0343			Matsushita	0017	Onwa	0058, 0179
Hantor	0320	Kamosonic	0342	Maxent	0147, 0176	Opera	0320
Harman/Kardon	0010	Kamp	0277, 0342	Mediator	0320, 0349, 0350	Oppo	0130
Harvard	0058, 0179	Kapsch	0347	Medion	0320, 0337, 0343	Optimus	0017, 0019
Harwood	0320, 0323	Karcher	0161, 0320, 0342, 0343, 0349	Megapower	0140	Optoma	0144
Havermy	0178			Megatron	0026, 0031	Optonica	0178
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	MElectronic	0277, 0282, 0320, 0323	Orbit	0320, 0350
Hema	0282, 0323	KEC	0179			Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	Melvox	0321	Orline	0320
Higashi	0277			Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Osaki	0282, 0320, 0337, 0340, 0342
HiLine	0320	Kenwood	0008, 0026, 0050			Oso	0340
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KIC	0282	Memphis	0323, 0343	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
		Kingsley	0277, 0342	Mercury	0320, 0323	Pael	0277, 0342
		KLH	0039	Metz	0339	Palladium	0161, 0282, 0320, 0342, 0351
Hisawa	0321, 0340, 0348	Kloss Novabeam	0057, 0058	MGA	0008, 0026, 0031, 0050, 0053	Palsonic	0282
Hisense	0247	Kneissel	0161, 0168, 0320			Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kolster	0320, 0350	Micromaxx	0337, 0343	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
		Konka	0340	Microrstar	0337, 0343		
		Korpel	0320, 0349, 0350	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062		
		Korting	0161, 0339				
		Kosmos	0320	Minerva	0171		
		Koyoda	0343	Minoka	0320, 0350		
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mintek	0153		
				Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376		
Hornyphon	0320, 0350	Kyoto	0277, 0282				
Hoshai	0340	Lasat	0161	Mivar	0161, 0168, 0171, 0277, 0282, 0342		
Huanyu	0277, 0342	Lenco	0323, 0343	Monivision	0140		
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343	Montgomery Ward	0054		
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350				
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Motion	0171		
				Motorola	0052, 0178		
Hyundai	0141			MTC	0008, 0026, 0050, 0053, 0161, 0277	Philharmonic	0282, 0342
Iberia	0320	LG/GoldStar	0164	Multi System	0349	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226,
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Liesenk	0349				
ICeS	0277	Liesenkotter	0320				
Ilo	0148, 0153	Life	0337, 0343				
IMA	0058						
Imperial	0161, 0171, 0320, 0347, 0350, 0351						
Indiana	0320, 0349, 0350						

	0239, 0256, 0257,	Robotron	0339	Sonoko	0282, 0320, 0323,	Tesmet	0350
	0259, 0261, 0263,	Rowa	0277, 0282		0337, 0342, 0343,	Tevion	0337, 0343
	0267, 0280, 0281,	Royal Lux	0161		0349, 0350	Texet	0277, 0282, 0323,
	0287, 0296, 0299,	RTF	0339	Sonolor	0321, 0347		0342
	0301, 0303, 0305,	Runco	0030, 0050, 0062	Sontec	0161, 0320, 0349,	Thomson	0162, 0188, 0189,
	0313, 0319, 0320,	Saba	0298, 0322, 0339,		0350		0285, 0320, 0322,
	0324, 0333, 0339,		0345, 0347	Sony	0038, 0044, 0045,		0342, 0345, 0350
	0342, 0349, 0350,	Saisho	0282, 0323, 0337,		0047, 0055, 0104,	Thorn	0320, 0349
	0353, 0357, 0360,		0342, 0343		0105, 0107, 0110,	TMK	0008, 0026, 0031
	0380, 0383, 0452,	Salora	0346, 0347		0123, 0184, 0220,	TNCi	0030
	0459, 0460	Sambers	0171, 0341		0248, 0249, 0251,	Tokai	0282, 0320, 0350
Philips Magnavox	0011, 0032, 0033	Sampo	0007, 0008, 0026,		0252, 0254, 0326,	Tokyo	0277, 0342
Phoenix	0161, 0277, 0320,		0050, 0176		0343, 0344, 0371,	Tomashi	0348
	0339, 0349, 0350	Samsung	0004, 0005, 0006,	Sound & Vision	0374, 0457, 0475	Toshiba	0018, 0019, 0040,
Phonola	0277, 0320, 0339,		0007, 0008, 0012,	Soundesign	0340, 0341		0041, 0046, 0073,
	0349, 0350		0026, 0031, 0036,		0008, 0026, 0031,		0100, 0103, 0108,
Pilot	0007, 0008, 0050		0050, 0053, 0076,		0058, 0059, 0179		0109, 0111, 0121,
Pioneer	0008, 0026, 0094,		0077, 0079, 0114,	Soundwave	0320, 0349, 0350		0132, 0166, 0208,
	0095, 0161, 0320,		0124, 0125, 0126,	Squareview	0051		0210, 0214, 0217,
	0345, 0347, 0349,		0127, 0139, 0161,	SSS	0008, 0058, 0179		0260, 0268, 0282,
	0350, 0458		0183, 0185, 0190,	Standard	0282, 0320, 0323,		0283, 0293, 0304,
Plantron	0320, 0323, 0337,		0191, 0258, 0264,		0340, 0342, 0343,		0306, 0307, 0329,
	0350		0277, 0282, 0320,		0350		0344, 0355, 0454
Playsonic	0282		0323, 0334, 0337,	Starlite	0058, 0179, 0320,	Totevision	0007
Polaroid	0039, 0142, 0202,		0342, 0343, 0349,		0323, 0349	Towada	0282, 0347
	0234		0350, 0351, 0373,	Stenway	0348	Trakton	0282
Poppy	0323, 0343		0453, 0468	Stern	0346, 0347	Trans Continens	0282, 0320
Portland	0007, 0008, 0026,	Sandra	0277, 0282, 0342	Strato	0320, 0323	Transtec	0277
	0053	Sansui	0043, 0109, 0320,	Stylandia	0282	Trident	0282
Prandoni-Prince	0171, 0346		0350	Sunkai	0343	Triumph	0320
Precision	0282, 0342	Sanyo	0008, 0019, 0068,	Sunstar	0320, 0323	Uher	0161, 0171, 0320,
Prima	0157, 0243, 0323,		0070, 0071, 0099,	Sunwood	0320, 0323, 0343,		0347, 0350
	0343, 0347		0161, 0168, 0223,		0350	Ultravox	0277, 0320, 0339,
Princeton	0140		0237, 0277, 0282,	Superla	0277, 0282, 0342		0341, 0342
Prism	0023, 0056		0288, 0295, 0323,	Superscan	0013, 0178	Unic Line	0320
Profex	0323, 0343		0342, 0344, 0369,	SuperTech	0277, 0320, 0323	United	0349
Profi-Tronic	0320, 0350		0469	Supra	0323, 0343	Universum	0161, 0171, 0282,
Proline	0320, 0350	SBR	0320, 0349	Supre-Macy	0057		0320, 0337, 0349,
Proscan	0021, 0027, 0049	Sceptre	0235, 0244	Supreme	0055, 0107		0350, 0351
Prosonic	0161, 0277, 0282,	Schaub Lorenz	0347	Susumu	0340	Univox	0320
	0320, 0342, 0349	Schneider	0282, 0316, 0318,	Sutron	0323, 0343	Vector Research	0050
Protech	0282, 0337, 0341,		0320, 0333, 0340,	SVA	0151	Vestel	0282, 0320, 0346,
	0342, 0343, 0349,		0342, 0349, 0350,	Sydney	0277, 0282, 0342		0347, 0349, 0350,
	0350		0382	Sylvania	0008, 0009, 0010,		0351
Proton	0008, 0012, 0026,	Scotch	0026, 0031		0011, 0013, 0026,	Vexa	0320, 0323, 0343,
	0031	Scott	0008, 0012, 0026,		0048, 0050, 0051,		0349
Protron	0196		0031, 0058, 0059,		0128, 0227, 0253	Victor	0015, 0344, 0350
PROVIEW	0096, 0246		0149, 0179	Symphonic	0051, 0058, 0062,	VIDEOLOGIC	0277
Provision	0320, 0349	Sears	0008, 0010, 0019,		0128, 0179, 0215	Videologique	0277, 0282, 0340,
Pulsar	0008, 0030, 0062		0021, 0026, 0027,	Syntax	0199		0342
Pye	0256, 0320, 0349,		0031, 0049, 0051,	Syntax-Brilliant	0199	VideoSystem	0320, 0350
	0350, 0378		0059, 0111	Sysline	0349	Videotechnic	0277, 0282
Pymi	0323, 0343	SEG	0277, 0282, 0320,	Sytong	0277	Vidikron	0010
Quandra Vision	0321		0323, 0337, 0341,	Tandy	0178, 0282, 0336,	Vidtech	0008, 0026, 0031,
Quasar	0017, 0023, 0052,		0342, 0344, 0349,		0340, 0342, 0347		0053
	0056		0382	Tashiko	0277, 0282, 0342,	Viewsonic	0176, 0203, 0232,
Quelle	0282, 0320, 0337,	SEI	0320		0344, 0346		0364
	0342, 0349, 0350	SEI-Sinudyne	0339, 0341, 0347	Tatung	0052, 0177, 0282,	Viking	0057
Questa	0344	Seleco	0344, 0346, 0347		0320, 0342, 0349,	Viore	0148
Radialva	0320	Sencora	0323, 0343		0350	Visiola	0277, 0342
RadioShack	0019, 0021, 0031,	Sentra	0323	TCM	0337, 0343	Vision	0282, 0320, 0350
	0050, 0179, 0320	Serino	0277	Teac	0282, 0320	Vizio	0008, 0177, 0218,
RadioShack/Realistic		Sharp	0000, 0001, 0002,	Tec	0282, 0323, 0342,		0242, 0500, 0501,
	0007, 0008, 0012,		0003, 0007, 0008,		0343		0502, 0503, 0506
	0026, 0049, 0058		0012, 0026, 0060,	Technics	0017, 0023, 0056	Vortec	0320, 0349, 0350
Radiola	0282, 0320, 0349,		0088, 0089, 0091,	TechniSat	0274, 0496, 0497,	Voxson	0171, 0320, 0339,
	0350		0138, 0165, 0170,		0499		0346, 0347, 0350
Radiomarelli	0320, 0339		0178, 0198, 0229,	Techwood	0008, 0023, 0026,	Waltham	0282, 0320, 0342
Radiotone	0161, 0320, 0323,		0262, 0278, 0279,		0056	Wards	0008, 0009, 0010,
	0350		0291, 0308, 0312,	TEDELEX	0282		0026, 0031, 0048,
Rank	0344		0336, 0344, 0354,	Teknika	0007, 0008, 0010,		0049, 0050, 0053,
RCA	0008, 0021, 0024,		0370, 0449, 0450,		0012, 0026, 0053,		0054, 0059
	0025, 0026, 0027,		0451, 0464, 0474,		0054, 0058, 0059,	Watson	0320, 0349, 0350
	0042, 0049, 0052,		0476		0179	Watt Radio	0277, 0341, 0342
	0053, 0063, 0136,	Sheng Chia	0178	Teleavia	0345	Waycon	0111
	0225	Shogun	0008	Telecor	0282, 0320	Wega	0320, 0339, 0344
Realistic	0019, 0031, 0050,	Siarem	0320, 0339, 0341	Telefunken	0320, 0322, 0345,	Wegavox	0323
	0179	Sierra	0320, 0350		0350	Weltblick	0282, 0320, 0349,
Recor	0320	Siesta	0161	Telegazi	0320		0350
Redstar	0320	Signature	0054	Telemeister	0320	Westinghouse	0107, 0216, 0220
Reflex	0320	Silva	0277	Telesonic	0320	White Westinghouse	
Revovox	0161, 0320, 0349,	Silver	0344	Telestar	0320		0037, 0090, 0277,
	0350	Singer	0321, 0339, 0341	Teletech	0320, 0323, 0343,		0320, 0341, 0342,
Rex	0337, 0346, 0347	Sinudyne	0320, 0339, 0341,		0349		0349
RFT	0161, 0168, 0339		0349	Teleton	0282, 0342	Wincom	0101, 0106
Rhapsody	0277	Skantic	0347	Televideon	0277	Xrypton	0320
R-Line	0320, 0349, 0350	Solavox	0347	Televiso	0321		
Roadstar	0323, 0337, 0340,	Sonitron	0161, 0282	Tensai	0282, 0320, 0323,		
	0343				0340, 0343, 0350		

Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Yamishi	0282, 0320
Yokan	0320
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

---

## **Note:**

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.