

Using the Napster service

The Napster service is available in the U.S.A., Canada, Germany and the U.K. only. In other countries, Napster cannot be accessed from any device including this unit.

Napster is the ultimate music service for your Yamaha, offering unlimited on-demand streaming from a huge catalogue with new music added every day. With millions of songs at your fingertips, choose from the latest releases, charts and every possible genre. Discover new music and rediscover old favorites with playlists, radio stations and more. Play your Napster music wherever you are- on your Yamaha, your computer or other devices supported by Napster in the U.S.A., Canada, Germany and the U.K. Try unlimited music now with a free 14-day trial of Napster!

For more information, visit the website for each country.

- U.S.A.: www.napster.com
- Canada: www.napster.ca
- Germany: www.napster.de
- U.K.: www.napster.co.uk



- To use this function, this unit must be connected to the Internet. For detail on connections and network settings, refer to "Owner's Manual".
- If any error message appears on the front display, see "Error indications on the front display" in "Owner's Manual".
- The actual display may be partly different from display images used on this document depending on the model.

Napster account sign-in

If you have not signed in to your Napster account yet, the sign-in screen appears when you select "Napster". To start using the Napster service on this unit, follow the procedure below to sign in to your Napster account.

 


- If you want to sign in to your Napster account after free trial expired, select "Sign In" from the "Input" menu and then follow from step 4 of this procedure. For details on the "Input" menu, see "Configuring input sources (Input menu)" in "Owner's Manual".

1 Press NET repeatedly to select "Napster" as the input source.


The following screen is displayed on the TV if you have not signed in to your Napster account yet.

(U.S.A. and Canada models)

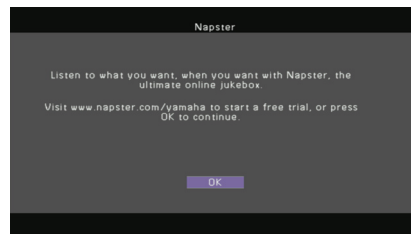

(U.K. and Europe models)

 Use the cursor keys to select your country and press ENTER.

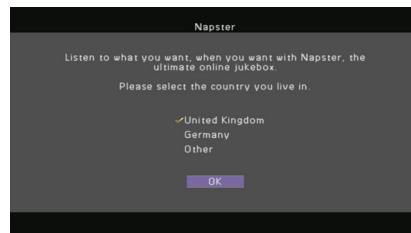

2 Read the on-screen description and press ENTER.

3 Use the cursor keys (Δ/▽) to select "Sign In" and press ENTER.

To get started with a 14-day free trial, select "Start Free Trial" and register for a trial account in the specified website.

4 Press ENTER to enter the user name entry screen.

5 Use the cursor keys and ENTER to enter your user name and select "OK".

 


- To clear the entry, select "CLEAR".

6 Press ENTER to enter the password entry screen.

7 Use the cursor keys and ENTER to enter your password and select “OK”.

The following screen appears if you have successfully logged into your account.

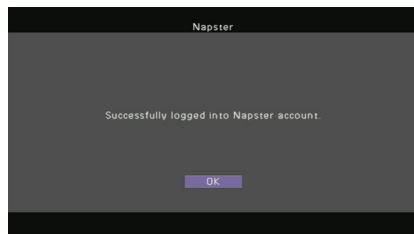

- If sign-in failed, the error screen appears. In this case, read the on-screen message and start all over again.

8 Press ENTER.

The browse screen is displayed on the TV.

Playback of Napster contents

Follow the procedure below to operate the Napster contents and start playback.

1 Press NET repeatedly to select “Napster” as the input source.

The browse screen is displayed on the TV.



My Napster

Select a song from the playlists you have created online.

Explore

Select a song or a Napster radio station from the lists organized by category (artist, album, etc.).

Search

 
Use the software keyboard to search the desired item (artist, album, etc.) by keyword.



- If playback of any Napster content is ongoing, the playback screen is displayed.


2 Use the cursor keys to select an item and press ENTER.

If a song or a radio station is selected, playback starts and the playback screen is displayed.

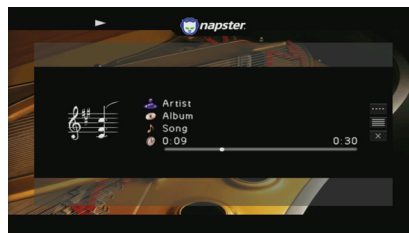

- To return to the previous screen, press RETURN.
- You can register your favorite items as shortcuts and access them directly by selecting the shortcut numbers. For details, see “Registering favorite items (shortcut)” in “Owner’s Manual”.

 Browse screen

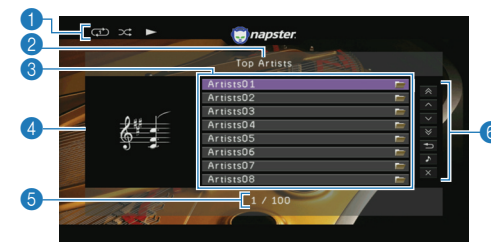

1 Status indicators

Display the current shuffle/repeat settings and playback status.

2 List name

3 Contents list

Displays the list of Napster contents. Use the cursor keys to select an item and press ENTER to confirm the selection.

4 Album image


5 Item number/total

6 Operation menu

Use the cursor keys to select an item and press ENTER to confirm the selection.

Menu	Function
1 Page Up	Moves to the previous/next page of the list.
1 Page Down	
10 Pages Up	Moves to 10 pages forward/backward.
10 Pages Down	
Return	Returns to the higher-level list.
Now Playing	Moves to the playback screen.
Screen Off	Closes the screen display and shows the background. Press one of the menu operation keys to redisplay it.

 ■ Playback screen

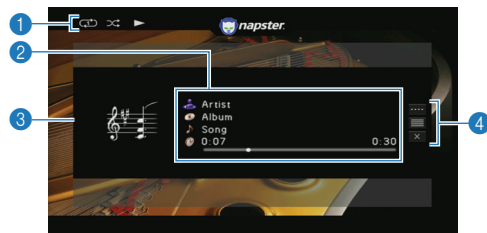

1 Status indicators

Display the current shuffle/repeat settings and playback status.

2 Playback information

Displays the artist name, album name, song title and elapsed/total time.
Use the cursor keys to select information to be scrolled.

3 Album image

4 Operation menu

Use the cursor keys to select an item and press ENTER to confirm the selection.
To close the submenu, press RETURN.

Menu	Submenu	Function
Play Control		Stops playback.
		Skips forward/backward.
Browse		Moves to the browse screen.
Screen Off		Closes the screen display and shows the background. Press one of the menu operation keys to redisplay it.



- You can also use the external device operation keys (▶, ■, ◀, ▶) on the remote control to control playback.

■ Shuffle/repeat settings

You can configure the shuffle/repeat settings for playback of Napster contents.



- The shuffle/repeat settings are shared by USB and network sources.

1 When “Napster” is selected as the input source, press OPTION.

2 Use the cursor keys to select “Shuffle” (Shuffle) or “Repeat” (Repeat) and press ENTER.



- To return to the previous screen during menu operations, press RETURN.
- Texts in parentheses denote indications on the front display.

3 Use the cursor keys (◀/▶) to select a setting and press ENTER.

Item	Setting	Function
Shuffle (Shuffle)	Off (Off)	Turns off the shuffle function.
	On (On)	Plays back songs in the current album in random order. “” appears in the TV screen.
Repeat (Repeat)	Off (Off)	Turns off the repeat function.
	Single (Single)	Plays back the current song repeatedly. “” appears in the TV screen.
	All (All)	Plays back all songs in the current album repeatedly. “” appears in the TV screen.

4 To exit from the menu, press OPTION.

■ Switching information on the front display

1 Press INFO.

Each time you press the key, the display item switches.

Display items

Song (song title), Artist (artist name), Album (album name), DSP Program (sound mode name), Audio Decoder (decoder name)

Removing the Napster account

Follow the procedure below to remove your Napster account from this unit.

1 Press ON SCREEN.

2 Use the cursor keys to select “Input” and press ENTER.

3 Use the cursor keys (◀/▶) to select “Napster” and press the cursor key (Δ).

4 Use the cursor keys (Δ/▽) to select “Remove Account” and press ENTER.

5 Use the cursor keys to select “OK” and press ENTER.

Your Napster account is removed from this unit.

6 To exit from the menu, press ON SCREEN.

Napster and the Napster logos are trademarks or registered trademarks of Napster, LLC.