

RX-V467/HTR-4063 How to program remote control codes For TV Control Key Operations



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

- 1 Use the remote codes listed in this document to find your TV manufacturer code.
- 2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



- 3 Press the TV Power button on the bottom of the remote.



- 4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

Genexxa	0320, 0340, 0347, 0350	Infinity	0010	Lifetec	0320, 0323, 0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349
GFM	0128, 0227	InFocus	0250, 0327, 0363, 0479, 0508	Lloyds	0323		
Giant	0282	Ingelen	0347	Loewe	0161, 0168, 0265, 0320, 0330, 0352		
Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe Opta	0339, 0349, 0350	Murphy	0277, 0342
GoldHand	0277	Initial	0153	Logik	0054	NAD	0026, 0031, 0111
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Luma	0320, 0323, 0346, 0349	Naonis	0346
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Lumatron	0282, 0320, 0346, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insignia	0131, 0228, 0236, 0238	Lux May	0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Inteq	0030	Luxor	0008, 0026		
		Interactive	0161	LXI	0282, 0342, 0346	NEI	0320, 0349, 0350
		Interbuy	0323, 0343		0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	Net-TV	0176
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Neufunk	0320, 0323
		International	0277			New Tech	0343, 0350
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	New World	0340
Gorenje	0161, 0351			Magnadyne	0339, 0341, 0349	NewTech	0282, 0320, 0323
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnafon	0171, 0277, 0341, 0342	Nicamagic	0277, 0342
GPX	0129					Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Gradiente	0240	Isukai	0320, 0340	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nikko	0026, 0031, 0050
Graetz	0347	ITC	0282, 0342			Nobliko	0171, 0277, 0341, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITS	0277, 0320, 0340, 0348, 0350				
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347	Magnum	0337, 0343	Nokia	0347
Gronic	0282	ITV	0320, 0343, 0349	Majestic	0054	Norcent	0201
Grundig	0160, 0161, 0171, 0310, 0320	Janeil	0057	Mandor	0337	Nordic	0282
		JBL	0010	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordmende	0339, 0345, 0347, 0350
Grunpy	0058, 0059, 0179	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Nordvision	0349
Haier	0157, 0233	JCB	0055, 0107			Novatronic	0320
Halifax	0277, 0282, 0337, 0342	Jensen	0008, 0026	Marelli	0339	Oceanic	0321, 0347
Hallmark	0008, 0026, 0031	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Mark	0277, 0282, 0320, 0323, 0349, 0350	Okano	0161, 0320, 0351
Hampton	0277, 0282, 0342			Matsuda	0282	Olevia	0102, 0199, 0200, 0207, 0222
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	ONCEAS	0342
Hantarex	0320, 0323, 0343			Matsushita	0017	Onwa	0058, 0179
Hantor	0320	Kamosonic	0342	Maxent	0147, 0176	Opera	0320
Harman/Kardon	0010	Kamp	0277, 0342	Mediator	0320, 0349, 0350	Oppo	0130
Harvard	0058, 0179	Kapsch	0347	Medion	0320, 0337, 0343	Optimus	0017, 0019
Harwood	0320, 0323	Karcher	0161, 0320, 0342, 0343, 0349	Megapower	0140	Optoma	0144
Havermy	0178			Megatron	0026, 0031	Optonica	0178
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	MElectronic	0277, 0282, 0320, 0323	Orbit	0320, 0350
Hema	0282, 0323	KEC	0179			Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	Melvox	0321	Orline	0320
Higashi	0277			Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Osaki	0282, 0320, 0337, 0340, 0342
HiLine	0320	Kenwood	0008, 0026, 0050			Oso	0340
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KIC	0282	Memphis	0323, 0343	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
		Kingsley	0277, 0342	Mercury	0320, 0323	Pael	0277, 0342
		KLH	0039	Metz	0339	Palladium	0161, 0282, 0320, 0342, 0351
Hisawa	0321, 0340, 0348	Kloss Novabeam	0057, 0058	MGA	0008, 0026, 0031, 0050, 0053	Palsonic	0282
Hisense	0247	Kneissel	0161, 0168, 0320			Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kolster	0320, 0350	Micromaxx	0337, 0343	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
		Konka	0340	Microrstar	0337, 0343		
		Korpel	0320, 0349, 0350	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062		
		Korting	0161, 0339				
		Kosmos	0320	Minerva	0171		
		Koyoda	0343	Minoka	0320, 0350		
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mintek	0153		
				Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376		
Hornlyphon	0320, 0350	Kyoto	0277, 0282				
Hoshai	0340	Lasat	0161	Mivar	0161, 0168, 0171, 0277, 0282, 0342		
Huanyu	0277, 0342	Lenco	0323, 0343	Monivision	0140		
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343	Montgomery Ward	0054	Panavision	0320
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350			Pathe Cinema	0161, 0168, 0277, 0321, 0342
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478			Pausa	0323, 0343
						Penney	0021, 0023, 0031, 0050, 0111
Hyundai	0141					Perdio	0277, 0320
Iberia	0320					Perfekt	0320
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	LG/GoldStar	0164			Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
		Liesenk	0349	Motion	0171		
		Liesenkotter	0320	Motorola	0052, 0178	Philharmonic	0282, 0342
ICeS	0277	Life	0337, 0343	MTC	0008, 0026, 0050, 0053, 0161, 0277	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226,
Ilo	0148, 0153			Multi System	0349		
IMA	0058						
Imperial	0161, 0171, 0320, 0347, 0350, 0351						
Indiana	0320, 0349, 0350						

	0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460		0339	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Tesmet	0350
		Robotron	0339			Tevion	0337, 0343
		Rowa	0277, 0282			Texet	0277, 0282, 0323, 0342
		Royal Lux	0161	Sonolor	0321, 0347		
		RTF	0339	Sontec	0161, 0320, 0349, 0350	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
		Runco	0030, 0050, 0062	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thorn	0320, 0349
		Saba	0298, 0322, 0339, 0345, 0347			TMK	0008, 0026, 0031
		Saisho	0282, 0323, 0337, 0342, 0343			TNCi	0030
		Salora	0346, 0347			Tokai	0282, 0320, 0350
		Sambers	0171, 0341			Tokyo	0277, 0342
Philips Magnavox	0011, 0032, 0033	Sampo	0007, 0008, 0026, 0050, 0176			Tomashi	0348
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Sound & Vision	0340, 0341	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Phonola	0277, 0320, 0339, 0349, 0350		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Soundesign	0008, 0026, 0031, 0058, 0059, 0179		
Pilot	0007, 0008, 0050		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Soundwave	0320, 0349, 0350		
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Squareview	0051		
			0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	SSS	0008, 0058, 0179		
Plantron	0320, 0323, 0337, 0350		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350		
Playsonic	0282		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Starlite	0058, 0179, 0320, 0323, 0349		
Polaroid	0039, 0142, 0202, 0234		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Stenway	0348	Totevision	0007
Poppy	0323, 0343		0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Stern	0346, 0347	Towada	0282, 0347
Portland	0007, 0008, 0026, 0053	Sandra	0277, 0282, 0342	Strato	0320, 0323	Trakton	0282
		Sansui	0043, 0109, 0320, 0350	Stylandia	0282	Trans Continens	0282, 0320
Prandoni-Prince	0171, 0346		0043, 0109, 0320, 0350	Sunkai	0343	Transtec	0277
Precision	0282, 0342	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Sunstar	0320, 0323	Trident	0282
Prima	0157, 0243, 0323, 0343, 0347		0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Sunwood	0320, 0323, 0343, 0350	Triumph	0320
Princeton	0140		0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Superla	0277, 0282, 0342	Uher	0161, 0171, 0320, 0347, 0350
Prism	0023, 0056		0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Superscan	0013, 0178	Ultravox	0277, 0320, 0339, 0341, 0342
Profex	0323, 0343		0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	SuperTech	0277, 0320, 0323	Unic Line	0320
Profi-Tronic	0320, 0350		0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Supra	0323, 0343	United	0349
Proline	0320, 0350	SBR	0320, 0349	Supre-Macy	0057	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Proscan	0021, 0027, 0049	Sceptre	0235, 0244	Supreme	0055, 0107	Univox	0320
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	Schaub Lorenz	0347	Susumu	0340	Vector Research	0050
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Sutron	0323, 0343	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Proton	0008, 0012, 0026, 0031	Scotch	0026, 0031	Sylvania	0151	Vexa	0320, 0323, 0343, 0349
Protron	0196	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179			Victor	0015, 0344, 0350
PROVIEW	0096, 0246		0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	Symphonic	0051, 0058, 0062, 0128, 0179, 0215	VIDEOLOGIC	0277
Provision	0320, 0349		0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	Syntax	0199	Videologique	0277, 0282, 0340, 0342
Pulsar	0008, 0030, 0062	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Syntax-Brilliant	0199	VideoSystem	0320, 0350
Pye	0256, 0320, 0349, 0350, 0378		0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Sysline	0349	Videotechnic	0277, 0282
Pymi	0323, 0343	SEG	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Sytong	0277	Vidikron	0010
Quandra Vision	0321		0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Vidtech	0008, 0026, 0031, 0053
Quasar	0017, 0023, 0052, 0056		0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Tashiko	0277, 0282, 0342, 0344, 0346	Viewsonic	0176, 0203, 0232, 0364
Quelle	0282, 0320, 0337, 0342, 0349, 0350	SEI	0339, 0341, 0347	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Viking	0057
Questa	0344	SEI-Sinudyne	0339, 0341, 0347			Viore	0148
Radialva	0320	Seleco	0344, 0346, 0347	TCM	0337, 0343	Visiola	0277, 0342
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Sencora	0323, 0343	Teac	0282, 0320	Vision	0282, 0320, 0350
		Sentra	0323	Tec	0282, 0323, 0342, 0343	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Serino	0277	Technics	0017, 0023, 0056	Vortec	0320, 0349, 0350
	0282, 0320, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	TechniSat	0274, 0496, 0497, 0499	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Radiola	0320, 0339		0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Techwood	0008, 0023, 0026, 0056	Waltham	0282, 0320, 0342
Radiomarelli	0161, 0320, 0323, 0350		0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	TEDELEX	0282	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
Radiotone	0344		0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Watson	0320, 0349, 0350
Rank	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	Sheng Chia	0178	Teleavia	0345	Watt Radio	0277, 0341, 0342
RCA	0019, 0031, 0050, 0179	Shogun	0008	Telecor	0282, 0320	Waycon	0111
		Siarem	0320, 0339, 0341	Telefunken	0320, 0322, 0345, 0350	Wega	0320, 0339, 0344
Realistic	0320	Sierra	0320, 0350	Telegazi	0320	Wegavox	0323
Recor	0320	Siesta	0161	Telemeister	0320	Weltblick	0282, 0320, 0349, 0350
Redstar	0320	Signature	0054	Telestar	0320	Westinghouse	0107, 0216, 0220
Reflex	0320	Silva	0277	Teletech	0320, 0323, 0343, 0349	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349
Revox	0161, 0320, 0349, 0350	Silver	0344	Teleton	0282, 0342	Wincom	0101, 0106
		Singer	0321, 0339, 0341	Televideon	0277	Xrypton	0320
Rex	0337, 0346, 0347	Sinudyne	0320, 0339, 0341, 0349	Televideo	0321		
RFT	0161, 0168, 0339		0320, 0339, 0341, 0349	Televisto	0282, 0320, 0323, 0340, 0343, 0350		
Rhapsody	0277	Skantic	0347	Tensai	0282, 0320, 0323, 0340, 0343, 0350		
R-Line	0320, 0349, 0350	Solavox	0347				
Roadstar	0323, 0337, 0340, 0343	Sonitron	0161, 0282				

Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Yamishi	0282, 0320
Yokan	0320
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

Note:

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.