

RX-V367/HTR-3063 How to program remote control codes For TV Control Key Operations

TRANSMIT LIGHT



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

1 Use the remote codes listed in this document to find your TV manufacturer code.

2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



 
3 Press the TV Power button on the remote.



4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

List of remote control codes

TV		Baird	0282	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elite	0320, 0340, 0350
A.R. Systems	0320	Bang & Olufsen	0180, 0339			Elman	0341
Acme	0342	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elta	0277, 0323, 0343
Acura	0323, 0343	Bastide	0282, 0342			Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
ADC	0337	Baur	0320, 0349	Contec/Cony	0012, 0058		
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Bazin	0282	Continental Edison	0345		
		Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Cosmel	0323, 0343	Emprex	0154
Advent	0158			Craig	0058, 0179	Envision	0008, 0026, 0050
Adventura	0057	Belcor	0008	Crosley	0010, 0037, 0171, 0339	Epson	0155, 0206, 0359
Adyson	0277, 0282, 0342	Bell & Howell	0019, 0054			Erres	0320, 0349, 0350
Agashi	0277, 0282	Benq	0097, 0242, 0361	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	ESA	0051
Agazi	0337	Beon	0320, 0349, 0350			ESC	0282
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Best	0161			Etron	0343
		Bestar	0161, 0320, 0350	CS Electronics	0277, 0340, 0342	Eurofeel	0282
Aim	0320	Binatone	0282, 0342	CTC Clatronic	0341	Euro-Feel	0337
Aiwa	0078, 0379	Blue Sky	0320, 0340	CTX	0205	Euroline	0349
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Blue Star	0348	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Euroman	0161, 0277, 0282
		Boots	0282, 0342			Euromann	0320, 0337, 0342, 0350
Akiba	0320, 0340	BPL	0320, 0348	CXC	0058, 0179	Europhon	0277, 0282, 0320, 0341, 0342, 0350
Akura	0320, 0323, 0337, 0340	Bradford	0058, 0179	Cybertron	0340		
		Brandt	0322, 0345	Cytron	0152	Expert	0321
Alaron	0277	Brilliant	0182	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Exquisit	0320
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	Brinkmann	0320			Fenner	0323, 0343
		Brionvega	0320, 0339, 0349, 0350	Dainichi	0277, 0340	Ferguson	0322, 0345, 0349
Albatron	0140	Britannia	0277, 0282, 0342	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Fidelity	0277, 0320, 0342, 0346
Alcyon	0171	Brockwood	0008			Filsai	0282
Alleron	0059	Broksonic	0109, 0179			Finlandia	0346
Allorgan	0282	Bruns	0339	Dantax	0161, 0349	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
Allstar	0320, 0350	BTC	0340	Dawa	0320	FIRST LINE	0342, 0343, 0350
America Action	0179	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Daytron	0007, 0008, 0026, 0323, 0343	Firstline	0277, 0282, 0320, 0323
AMOi	0276					Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Amplivision	0161, 0282, 0321, 0342	Candle	0008, 0026, 0050, 0057	De Graaf	0346		
Amstrad	0320, 0323, 0337, 0340, 0343	Capsonic	0337	Decca	0282, 0320, 0342, 0349, 0350	Flint	0320, 0350
		Carena	0320	Dell	0145, 0245	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Amtron	0058	Carnivale	0050	Denver	0358, 0362		
Anam	0179, 0343	Carrefour	0344	Desmet	0320, 0349, 0350	Formenti/Phoenix	0277
Anam National	0052, 0058	Carver	0010	Diamant	0320	Fortress	0336, 0339
Anglo	0323, 0343	Cascade	0320, 0323, 0343	Diamond	0277	Fraba	0161, 0320
Anitech	0171, 0320, 0323, 0337, 0343	Casio	0367	DiamondVision	0135, 0143	Friac	0161
		Cathay	0320, 0349, 0350	Dimensia	0049	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	CCE	0183, 0282	Disney	0219		
AOC	0008, 0026, 0050, 0053	Celebrity	0055, 0107	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Fujitsu	0059, 0069, 0074, 0075, 0282
		Celera	0039	Dream Vision	0461, 0498	Fujitsu General	0282
Apex	0039, 0111, 0217	Centurion	0320, 0349, 0350	DTS	0323, 0343	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Arcam	0277, 0282	Century	0339	Dual	0282, 0320, 0342		
Arcam Delta	0342	CGE	0161, 0171	Dual-Tec	0342, 0343	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337
Aristona	0320, 0349, 0350	Changhong	0039	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342		
Arthur Martin	0321	Chimei	0273	Durabrand	0031, 0051, 0179, 0215	Futuretech	0058, 0179
ASA	0339, 0347	Cimline	0323, 0343			Galaxi	0320, 0351
Asberg	0171, 0320, 0350	Citizen	0007, 0008, 0026, 0050, 0058	Dux	0349	Galaxis	0161, 0320
Astra	0343	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Dwin	0178	Gateway	0176, 0177, 0241
Asuka	0277, 0282, 0337, 0340, 0342			Dynatron	0320, 0349, 0350	GBC	0323, 0343, 0344
		City	0323, 0343	Dynex	0228, 0231	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209
Atlantic	0277, 0320, 0342, 0349, 0350	Clarion	0179	Elbe	0161, 0168, 0282, 0320		
		Clarivox	0349			Geant Casino	0321
Atori	0323, 0343	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Elcitra	0339	GEC	0282, 0320, 0342, 0347, 0349, 0350
Auchan	0321			ELECTRO TECH	0343		
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	CMS	0277	Electroband	0055, 0107	Geloso	0323, 0343, 0346
		CMS Hightec	0282	Electrograph	0176	General Technic	0323, 0343
AudioTon	0161, 0282, 0342	Coby	0197	Electrohome	0008, 0026, 0052, 0055	Genexxa	0320, 0340, 0347, 0350
Audiovox	0058, 0179, 0194	Colortyme	0008, 0026				
Ausind	0171	Commercial Solutions	0021	Element	0230		
Autovox	0171, 0282, 0337, 0339, 0342	Concerto	0008, 0026	Elin	0277, 0320, 0323, 0342, 0349, 0350	GFM	0128, 0227
		Concorde	0323, 0343			Giant	0282
Aventura	0051						
Awa	0277, 0282						
Axon	0156						

Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe	0161, 0168, 0265, 0320, 0330, 0352	Naonis	0346
GoldHand	0277	Initial	0153	Loewe Opta	0339, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Logik	0054	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Luma	0320, 0323, 0346, 0349	NEI	0320, 0349, 0350
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insignia	0131, 0228, 0236, 0238	Lumatron	0282, 0320, 0346, 0349, 0350	Net-TV	0176
Gorenje	0161, 0351	Inteq	0030	Lux May	0350	Neufunk	0320, 0323
GPM	0340	Interactive	0161	Luxman	0008, 0026	New Tech	0343, 0350
GPX	0129	Interbuy	0323, 0343	Luxor	0282, 0342, 0346	New World	0340
Gradiente	0240	Interfunk	0161, 0320, 0339, 0347, 0349, 0350	LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	NewTech	0282, 0320, 0323
Graetz	0347	International	0277	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Nicamagic	0277, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Grandin	0340, 0343, 0348, 0349	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnadyne	0339, 0341, 0349	Nikko	0026, 0031, 0050
Gronic	0282	ITC	0282, 0342	Magnafon	0171, 0277, 0341, 0342	Noblisko	0171, 0277, 0341, 0342
Grundig	0160, 0161, 0171, 0310, 0320	ITS	0277, 0320, 0340, 0348, 0350	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nokia	0347
Grunpy	0058, 0059, 0179	ITT	0343, 0347	Majestic	0337, 0343	Norcent	0201
Haier	0157, 0233	ITV	0320, 0343, 0349	Mandor	0337	Nordic	0282
Halifax	0277, 0282, 0337, 0342	Janeil	0057	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordmende	0339, 0345, 0347, 0350
Hallmark	0008, 0026, 0031	JBL	0010	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Nordvision	0349
Hampton	0277, 0282, 0342	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Marelli	0339	Novatronic	0320
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Jensen	0008, 0026	Mark	0277, 0282, 0320, 0323, 0349, 0350	Oceanic	0321, 0347
Hantarex	0320, 0323, 0343	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Masuda	0282	Okano	0161, 0320, 0351
Hantor	0320	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	Olevia	0102, 0199, 0200, 0207, 0222
Harman/Kardon	0010	Kamosonic	0342	Matsushita	0017	ONCEAS	0342
Harvard	0058, 0179	Kamp	0277, 0342	Maxent	0147, 0176	Onwa	0058, 0179
Harwood	0320, 0323	Kapsch	0347	Mediator	0320, 0349, 0350	Opera	0320
Havermy	0178	Karcher	0161, 0320, 0342, 0343, 0349	Medion	0320, 0337, 0343	Oppo	0130
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	Megapower	0140	Optimus	0017, 0019
Hema	0282, 0323	KEC	0179	Megatron	0026, 0031	Optoma	0144
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	MELectronic	0277, 0282, 0320, 0323	Optonica	0178
Higashi	0277	Kenwood	0008, 0026, 0050	Melvox	0321	Orbit	0320, 0350
HiLine	0320	KIC	0282	Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	Kingsley	0277, 0342	Memphis	0323, 0343	Online	0320
Hisawa	0321, 0340, 0348	KLH	0039	Mercury	0320, 0323	Osaki	0282, 0320, 0337, 0340, 0342
Hisense	0247	Kloss Novabeam	0057, 0058	Metz	0339	Oso	0340
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kolster	0161, 0168, 0320	MGA	0008, 0026, 0031, 0050, 0053	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Hornophon	0320, 0350	Konka	0340	Micromaxx	0337, 0343	Pael	0277, 0342
Hoshai	0340	Korpel	0320, 0349, 0350	Microrstar	0337, 0343	Palladium	0161, 0282, 0320, 0342, 0351
Huanyu	0277, 0342	Korting	0161, 0339	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062	Palsonic	0282
Hygashi	0277, 0282, 0342	Kosmos	0320	Minerva	0171	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
Hyper	0277, 0282, 0323, 0342, 0343	Koyoda	0343	Minoka	0320, 0350	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mintek	0153	Panavision	0320
Hyundai	0141	Kyoto	0277, 0282	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376	Pathe Cinema	0161, 0168, 0277, 0321, 0342
Iberia	0320	Lasat	0161	Mivar	0161, 0168, 0171, 0277, 0282, 0342	Pausa	0323, 0343
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Lenco	0323, 0343	Monivision	0140	Penney	0021, 0023, 0031, 0050, 0111
ICeS	0277	Lenoir	0323, 0342, 0343	Montgomery Ward	0054	Perdio	0277, 0320
Ilo	0148, 0153	Leyco	0320, 0337, 0349, 0350	Motion	0171	Perfekt	0320
IMA	0058	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Motorola	0052, 0178	Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
Imperial	0161, 0171, 0320, 0347, 0350, 0351	LG/GoldStar	0164	MTC	0008, 0026, 0050, 0053, 0161, 0277	Philharmonic	0282, 0342
Indiana	0320, 0349, 0350	Liesenk	0349	Multi System	0349	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339,
Infinity	0010	Liesenkotter	0320	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349		
InFocus	0250, 0327, 0363, 0479, 0508	Life	0337, 0343	Murphy	0277, 0342		
Ingelen	0347	Lifetec	0320, 0323, 0337, 0343	NAD	0026, 0031, 0111		
		Lloyds	0323				

	0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Saisho	0282, 0323, 0337, 0342, 0343	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
Philips Magnavox	0011, 0032, 0033	Salora	0346, 0347			Thorn	0320, 0349
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Sambers	0171, 0341			TMK	0008, 0026, 0031
Phonola	0277, 0320, 0339, 0349, 0350	Sampo	0007, 0008, 0026, 0050, 0176			TNCi	0030
Pilot	0007, 0008, 0050	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Sound & Vision	0340, 0341	Tokai	0282, 0320, 0350
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458			Soundesign	0008, 0026, 0031, 0058, 0059, 0179	Tokyo	0277, 0342
Plantron	0320, 0323, 0337, 0350			Squareview	0051	Tomashi	0348
Playsonic	0282			SSS	0008, 0058, 0179	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Polaroid	0039, 0142, 0202, 0234			Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Totevision	0007
Poppy	0323, 0343	Sandra	0277, 0282, 0342	Starlite	0058, 0179, 0320, 0323, 0349	Towada	0282, 0347
Portland	0007, 0008, 0026, 0053	Sansui	0043, 0109, 0320, 0350	Stenway	0348	Trakton	0282
Prandoni-Prince	0171, 0346			Stern	0346, 0347	Trans Continents	0282, 0320
Precision	0282, 0342	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Stylandia	0282	Transtec	0277
Prima	0157, 0243, 0323, 0343, 0347			Sunkai	0343	Trident	0282
Princeton	0140			Sunstar	0320, 0323	Triumph	0320
Prism	0023, 0056			Sunwood	0320, 0323, 0343, 0350	Uher	0161, 0171, 0320, 0347, 0350
Profex	0323, 0343			Superla	0277, 0282, 0342	Ultravox	0277, 0320, 0339, 0341, 0342
Profi-Tronic	0320, 0350			Superscan	0013, 0178	Unic Line	0320
Proline	0320, 0350	SBR	0320, 0349	SuperTech	0277, 0320, 0323	United	0349
Proscan	0021, 0027, 0049	Sceptre	0235, 0244	Supra	0323, 0343	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	Schaub Lorenz	0347	Supre-Macy	0057	Univox	0320
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Susumu	0340	Vector Research	0050
Proton	0008, 0012, 0026, 0031	Scotch	0026, 0031	Sutron	0323, 0343	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Protron	0196	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	SVA	0151	Vexa	0320, 0323, 0343, 0349
PROVIEW	0096, 0246			Sydney	0277, 0282, 0342	Victor	0015, 0344, 0350
Provision	0320, 0349	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	VIDEOLOGIC	0277
Pulsar	0008, 0030, 0062			Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Videologique	0277, 0282, 0340, 0342
Pye	0256, 0320, 0349, 0350, 0378			Syntax	0199	VideoSystem	0320, 0350
Pymi	0323, 0343	SEG	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Syntax-Brilliant	0199	Videotechnic	0277, 0282
Quandra Vision	0321			Sysline	0349	Vidikron	0010
Quasar	0017, 0023, 0052, 0056	SEI	0320	Sytong	0277	Vidtech	0008, 0026, 0031, 0053
Quelle	0282, 0320, 0337, 0342, 0349, 0350	SEI-Sinudyne	0339, 0341, 0347	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Viewsonic	0176, 0203, 0232, 0364
Questa	0344	Seleco	0344, 0346, 0347	Tashiko	0277, 0282, 0342, 0344, 0346	Viking	0057
Radialva	0320	Sencora	0323, 0343	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Viore	0148
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Sentra	0323	TCM	0337, 0343	Visiola	0277, 0342
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Serino	0277	Teac	0282, 0320	Vision	0282, 0320, 0350
Radiola	0282, 0320, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Tec	0282, 0323, 0342, 0343	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Radiomarelli	0320, 0339	Sheng Chia	0178	Technics	0017, 0023, 0056	Vortec	0320, 0349, 0350
Radiotone	0161, 0320, 0323, 0350	Shogun	0008	TechniSat	0274, 0496, 0497, 0499	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Rank	0344	Siarem	0320, 0339, 0341	Techwood	0008, 0023, 0026, 0056	Waltham	0282, 0320, 0342
RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	Sierra	0320, 0350	TEDELEX	0282	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
Realistic	0019, 0031, 0050, 0179	Siesta	0161	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Watson	0320, 0349, 0350
Recor	0320	Signature	0054	Teleavia	0345	Watt Radio	0277, 0341, 0342
Redstar	0320	Silver	0344	Telecor	0282, 0320	Waycon	0111
Reflex	0320	Singer	0321, 0339, 0341	Telefunken	0320, 0322, 0345, 0350	Wega	0320, 0339, 0344
Revovox	0161, 0320, 0349, 0350	Sinudyne	0320, 0339, 0341, 0349	Telegazi	0320	Wegavox	0323
Rex	0337, 0346, 0347	Skantic	0347	Telemeister	0320	Weltblick	0282, 0320, 0349, 0350
RFT	0161, 0168, 0339	Solavox	0347	Telesonic	0320	Westinghouse	0107, 0216, 0220
Rhapsody	0277	Sonitron	0161, 0282	Telestar	0320	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349
R-Line	0320, 0349, 0350	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Teletech	0320, 0323, 0343, 0349	Wincom	0101, 0106
Roadstar	0343	Sonolor	0321, 0347	Tensai	0282, 0320, 0323, 0340, 0343, 0350	Xrypton	0320
Robotron	0339	Sontec	0161, 0320, 0349, 0350	Tesmet	0350	Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Rowa	0277, 0282			Tevion	0337, 0343	Yamishi	0282, 0320
Royal Lux	0161			Texet	0277, 0282, 0323, 0342	Yokan	0320
RTF	0339						
Runco	0030, 0050, 0062						
Saba	0298, 0322, 0339, 0345, 0347						

Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

Note:

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.