

# disklavier™ E3

## Quick reference



Starting




Listening

# Starting

## Learning about the Control Unit


Buttons that you will use for playback and recording.

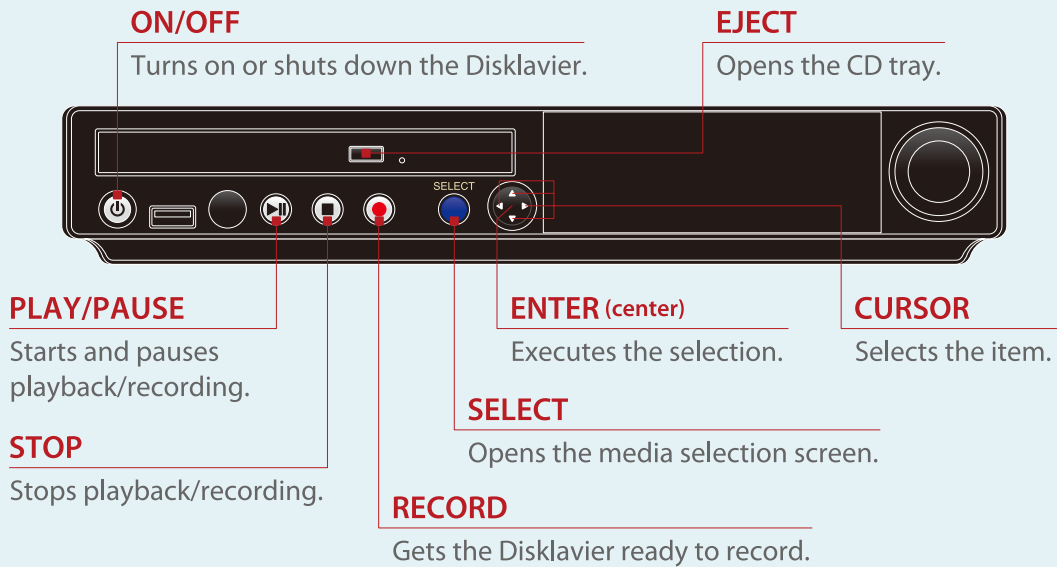

 **Learn More?** | ■ See page 2 on *Operation Manual*.

## Learning about Media

Media that you can use on the Disklavier.

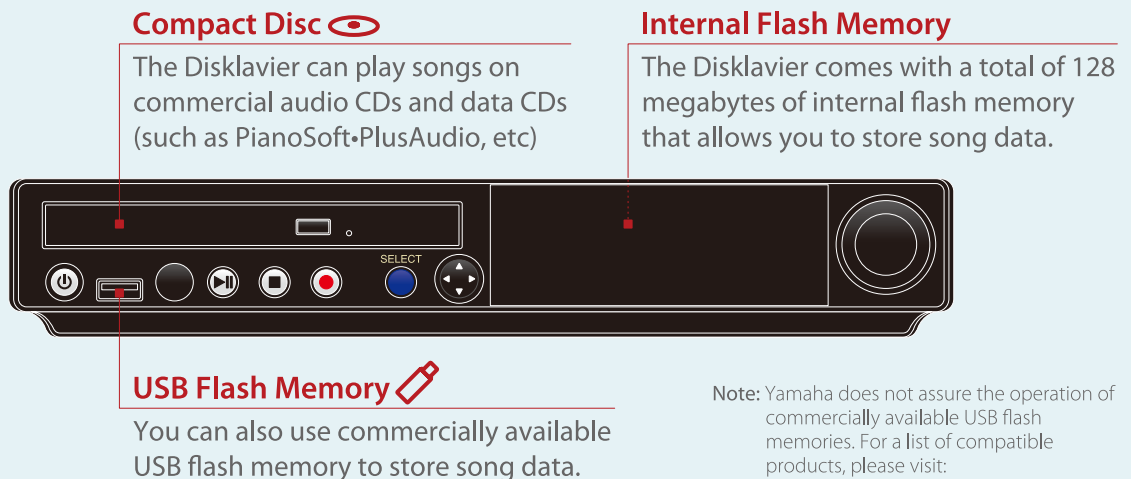

**Note:** Yamaha does not assure the operation of commercially available USB flash memories. For a list of compatible products, please visit: [www.yamaha.com/disklavier](http://www.yamaha.com/disklavier).


 **Learn More?** | ■ See page 14 on *Operation Manual*.



## Turning Your Disklavier On

1

Connect the Disklavier to mains.

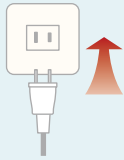

2

Turn your Disklavier on.

[ON/OFF]



PLEASE WAIT



Your Disklavier is now ready for use!



## When You Finish ...

Shut your Disklavier down.

[ON/OFF]



See you again




**Learn More?**

■ To put the Disklavier into the standby mode >> See page 13 on *Operation Manual*.

# Listening to a Song

## Listening to a CD included with the Disklavier


### 1 Load a CD.

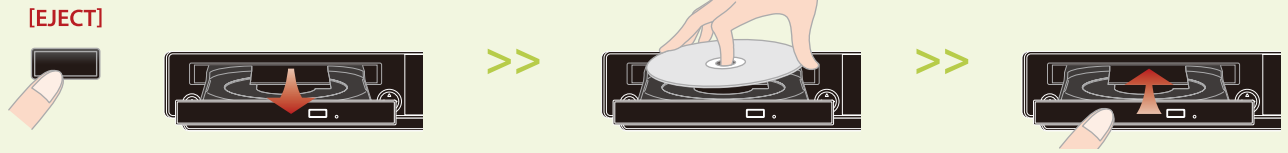


### 2 Select "CD" as the playback source.



### 3 Select an album.

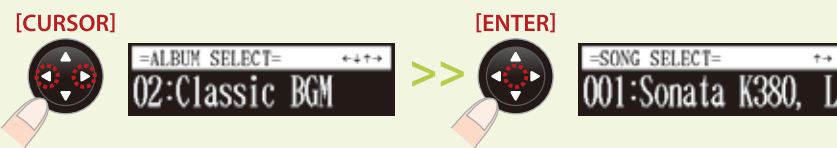

### 4 Select a song.

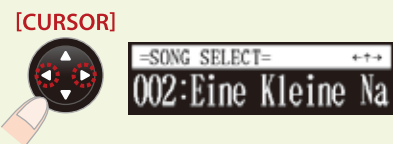





### 5 Start song playback.



### 6 Stop song playback.



#### Learn More?

-  To change the playback tempo
-  To play in a different key (Transposition)
-  To repeat playback
-  To use the timer



- >> See page 27 on *Operation Manual*.
- >> See page 27 on *Operation Manual*.
- >> See page 28 on *Operation Manual*.
- >> See page 34 on *Operation Manual*.



# Listening to a Free DisklavierRadio Channel

## Before operating...

Connect the Disklavier to a router or a modem equipped with a router that is connected to the Internet.

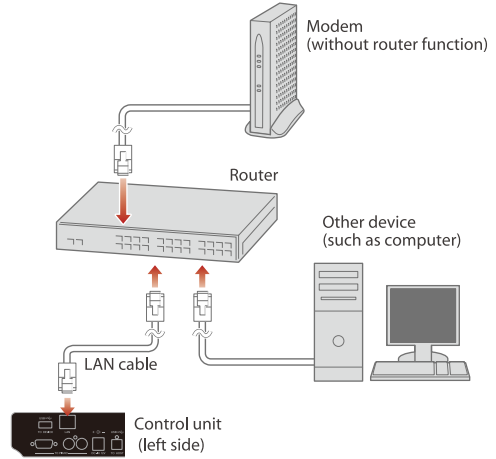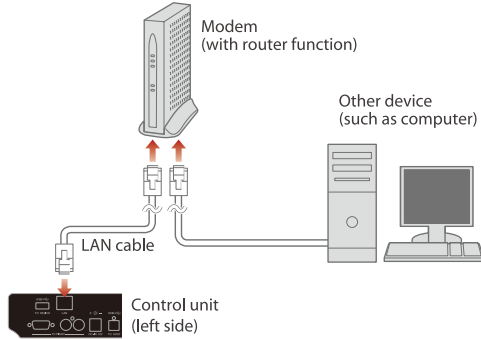

For more details on connections, see page 93 on *Operation Manual*.

## 1 Select "D-Radio" as the playback source.



## 2 Select a free channel.



Note: The free channel is "CH-01".

## 3 Turn the DisklavierRadio on!



## 4 Turn the DisklavierRadio off...



Learn More?

- To use a subscriber-only DisklavierRadio channel >> See page 92 on *Operation Manual*.
- To mute the DisklavierRadio >> See page 26 on *Operation Manual*.



# disklavier™ *E3*


## Quick reference




# Recording a Song

## Recording to Internal Memory


1 Select "Memory" as the destination.

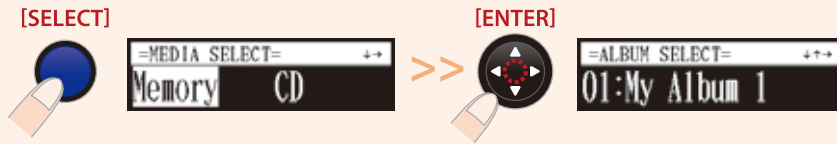

2 Start recording.

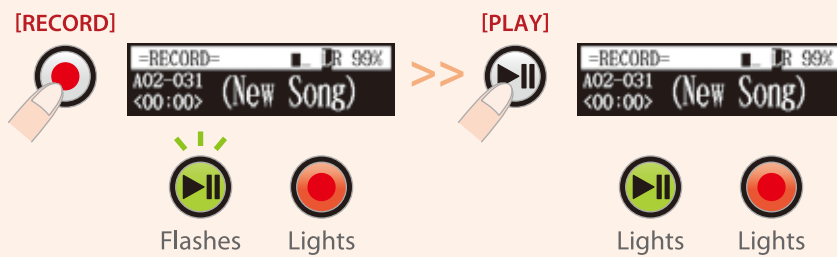

3 Start playing your song.

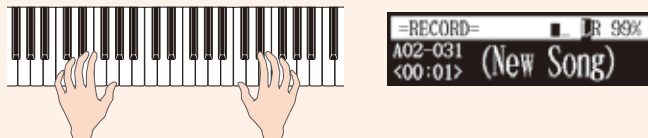

4 Stop recording.



## Listen to your performance right now?

[PLAY]



=Memory= LR SO V+00  
A02-031 PIANO031.MID  
<00:01>



### Learn More?


- To record along with the metronome >> See page 47 on *Operation Manual*.
- To record L and R parts separately >> See page 49 on *Operation Manual*.
- To record L and R parts with the split point set >> See page 51 on *Operation Manual*.
- To change the recording tempo >> See page 54 on *Operation Manual*.
- To manage albums >> See page 61 on *Operation Manual*.





# Recording to a USB Flash Memory

1 Insert a USB flash memory.

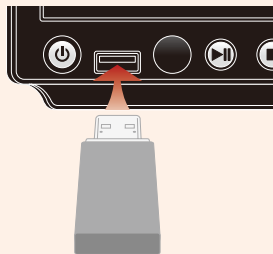


Note: Yamaha does not assure the operation of commercially available USB flash memories. For a list of compatible products, please visit: [www.yamaha.com/disklavier](http://www.yamaha.com/disklavier).


2 Select "USB1" as the destination.



3 Start recording.

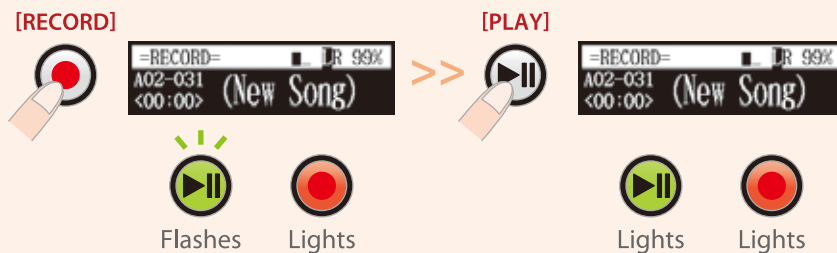

4 Start playing your song.

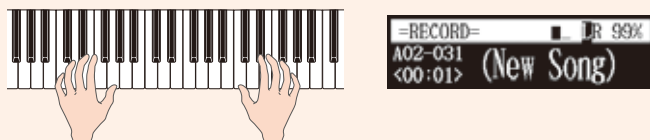

5 Stop recording.



## Listen to your performance right now?

[PLAY]



=USB1= LR SO V+00  
A02-031 PIANO031.MID  
<00:01>



### Learn More?

- To record along with the metronome >> See page 47 on *Operation Manual*.
- To record L and R parts separately >> See page 49 on *Operation Manual*.
- To record L and R parts with the split point set >> See page 51 on *Operation Manual*.
- To change the recording tempo >> See page 54 on *Operation Manual*.
- To manage albums >> See page 61 on *Operation Manual*.