 



YAMAHA ATS-2030 Quick Start Guide

Supplied items

Before assembling and connecting, make sure you have received all of the following items. If anything is missing, please call 888-892-6242, 8AM to 5PM PST Monday through Friday.



 
Sound bar (ATS-CU2030)




Mounting template
(Use when attaching the sound bar to a wall.)



 
Wireless subwoofer
(NS-WSW41)




Remote control

 

 
Two AAA batteries
(Install the batteries in the remote control.)



Optical cable
1.5 m (4.9 ft)

 

RCA stereo cable
1.5 m (4.9 ft)

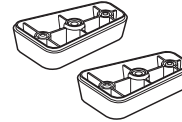


Stand x 2
(For sound bar)



Screw x 2
(For attaching the stand)





Owner's Manual

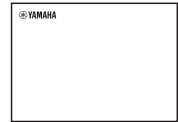

Quick Start Guide
(This sheet)

Placement

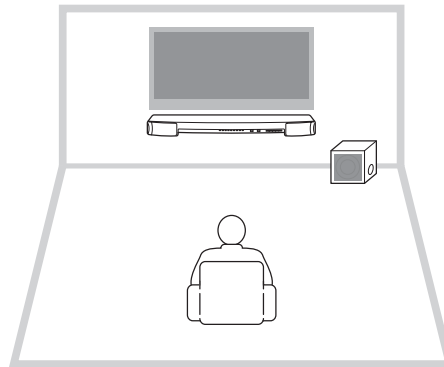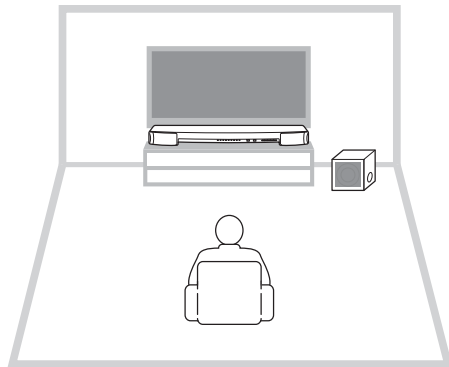

Place the sound bar in front of or below your TV, either with or without a stand, at least 2" away from your TV.

Place the subwoofer to the outside of the sound bar. To avoid echoes from the wall, face the front side of the subwoofer slightly inward.

The sound bar may also be mounted on a wall, using the included mounting template and commercially available screws. Refer to the Owner's Manual for additional mounting instructions.

NOTE

- Be careful not to stack the sound bar/subwoofer with any other components, as vibration may cause system disruption in other components.

Continued to the reverse side



Connections


 
1. **Connect the TV and sound bar with the optical cable (supplied).**

Remove the cap of the optical cable and check the direction of the plug.



2. **Connect the power cable of the sound bar and subwoofer to AC wall outlets.**

Sound bar (rear)

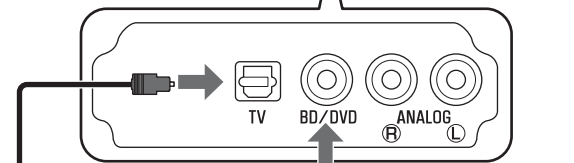


- 1 Optical cable (supplied)


Coaxial digital cable (commercially available)



TV

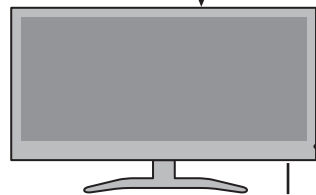

Coaxial digital audio output (orange)

 


- 3, 4 **Set top box or playback device (such as a Blu-ray Disc™ player)**

3. **Turn on the TV and set the volume to minimum.**
4. **Disable the TV speakers using the TV's audio settings menu (if available).**

HINT

If a setting to disable the speaker output is not available on your TV, you may disable it by connecting headphones to the headphone jack on the TV. For details, refer to the instruction manual of the TV.

Subwoofer (rear)

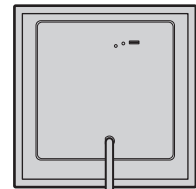

2

Connect to an AC wall outlet. Leave the unit powered off until all connections are complete.

2


Connect to an AC wall outlet.

HINT

If your playback device has a coaxial digital audio output, you can connect it to the BD/DVD input of the sound bar with a coaxial digital cable (commercially available).

Watching TV

For details, refer to the Owner's Manual.

1. **Press  to turn on the sound bar.**
The subwoofer turns on automatically simultaneously with the sound bar.
2. **Press the TV key to select TV as the input source.**
3. **Select the desired input source on the TV.**
4. **Press the VOLUME (+/-) keys to adjust the volume.**

Playback of a *Bluetooth*® device

You can connect a *Bluetooth* device, such as a smartphone or digital music player, with the sound bar wirelessly. For details, refer to the Owner's Manual.



... and more features!

For details about the other useful features, refer to the Owner's Manual.

- TV remote control learning function
- TV Remote Repeater
- Clear voice
- UniVolume

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yamaha Corporation is under license.

Blu-ray Disc is a trademark of the Blu-ray Disc Association.