


# Hooking up a Blu-ray/DVD player to the RX-V365/HTR-6230

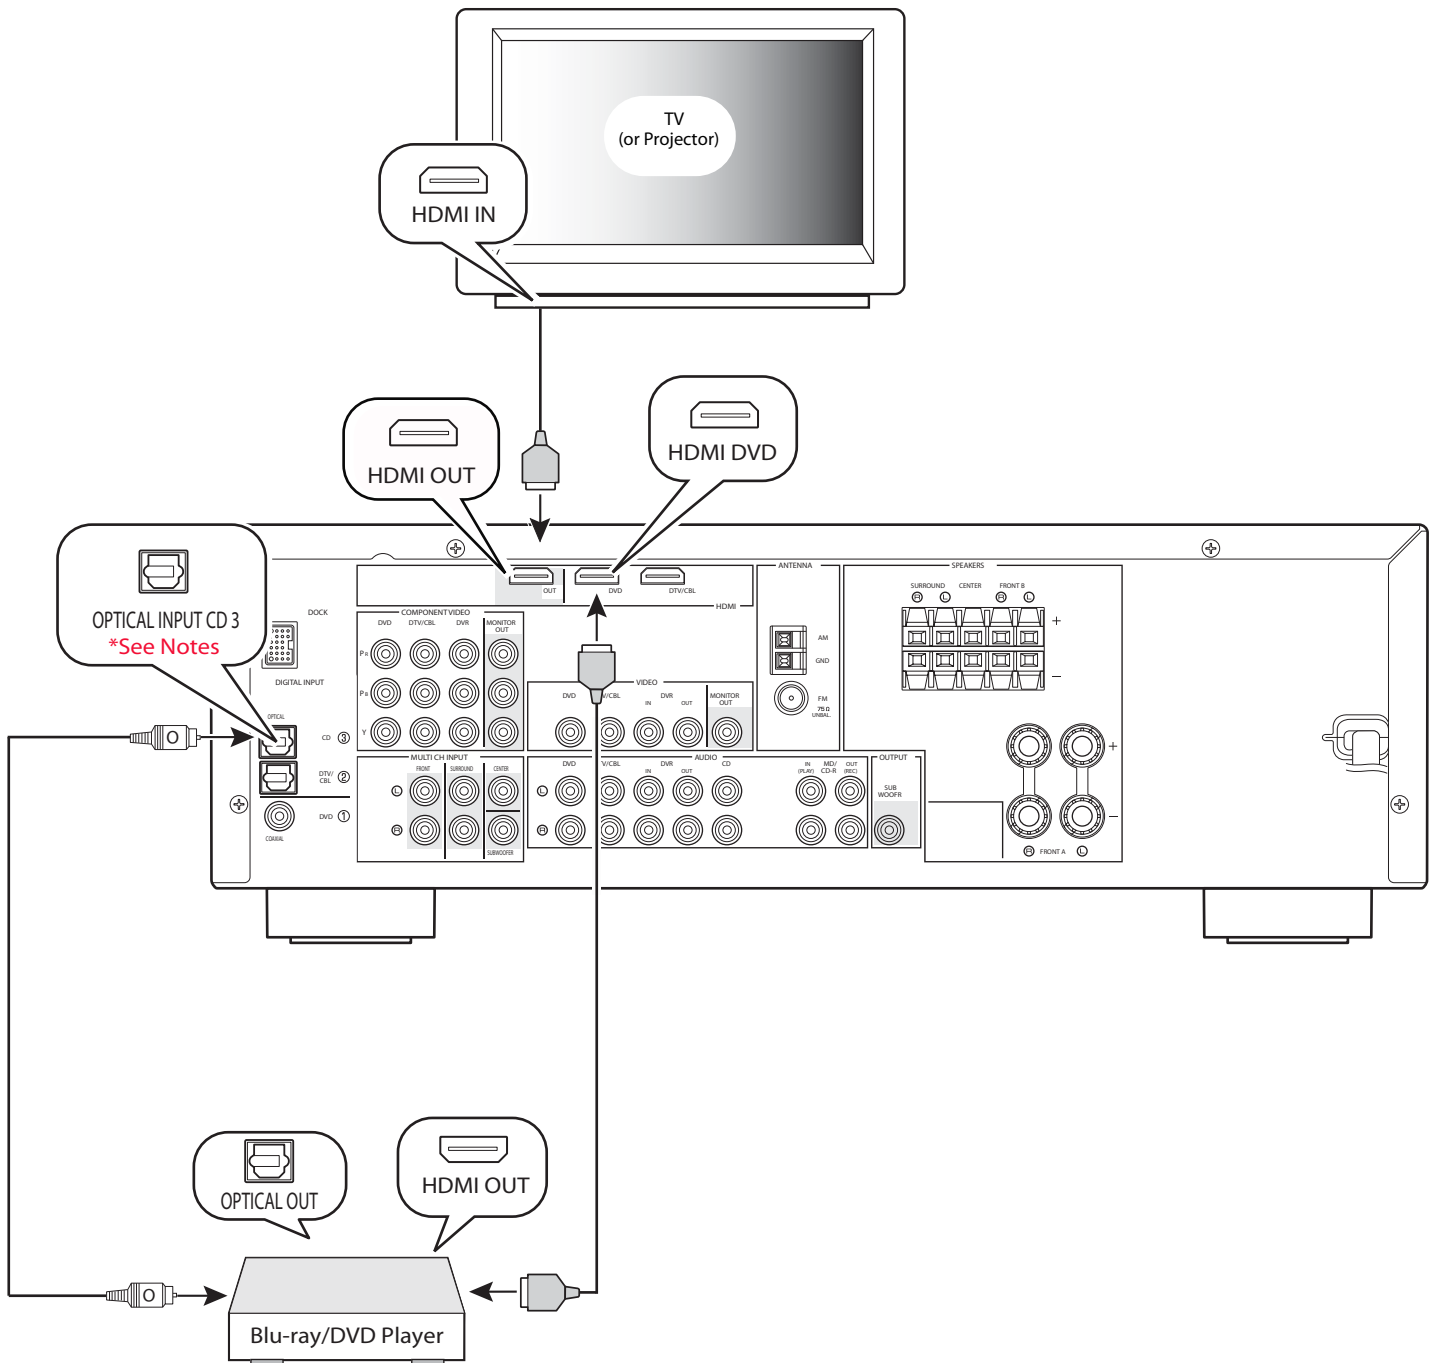

## Notes:

The Optical Input CD #3 will need to be associated to the DVD HDMI input. Please see page 2 of this document for detailed instructions on setting that feature up.

The **RX-V365/HTR-6230 Receiver** does support **HDMI Audio Decoding** and you will need to run **Separate Audio Cables** from the **Source** to the **Receiver** to get sound.

### Setting up DVD/Blu Ray Player

**Optical** out from the **Blu-ray/DVD player** to receiver **CD Optical #3** input. (You will need to reassign the **CD optical** input to **DVD**. See below.)

Changing the **Optical** input association from **CD** to **DVD**

Note: To do this you will need to be in **front** of the receiver and have the **Yamaha receiver remote**.

1. Press the **AMP** button on remote.
2. Press the **Menu** button on remote to bring up setup menu on the receiver LED screen front panel.
3. Use **Arrow** down button to scroll to **Manual Setup**.
4. Press the **Enter** button to go into **Manual Setup**.
5. Use **Arrow** down button to scroll to **2 Input Menu**.
6. Press **Enter** on remote to go into **Input Menu, A) Input Assign** will come up.
7. Press the **Enter** button on the remote to enter **A) Input Assign**.
8. **IN (1) (COAXIAL jack): DVD** will come up.
9. Use **Arrow** right button to change that to **V-AUX**. (You cannot select a specific item more than once.)
10. Use **Arrow** down button to scroll to **IN (3) (OPTICAL (CD) jack): CD**.
11. Use **Arrow** right button to change that to **DVD**.
12. Press **Menu** button on the remote to exit the Menu system.

Now when **DVD** is selected on the receiver it will look at the **CD Optical** input for digital audio.