

# Quick Operation Guide

While holding down the [DEMO], [METRONOME], or [VOICE] button, press the highlighted keys shown below to select voice demos etc, or set parameters.

## Voice Demo

## Preset Song (50 greats for the Piano)

## Voice (including the dual voice)

## Reverb Type

## Reverb Depth

## Dual Octave Setting

## Dual Balance

## Metronome Volume


## Metronome Time Signature

## Metronome Tempo


# Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters.


Tune Up: in about 0.2Hz steps (Press any highlighted key )

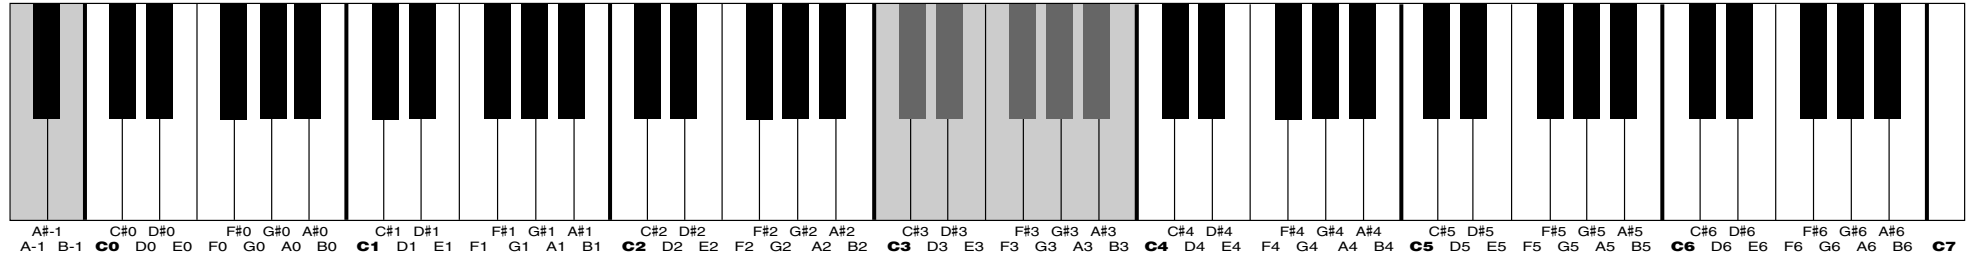

Tune Down: in about 0.2Hz steps (Press any highlighted key )

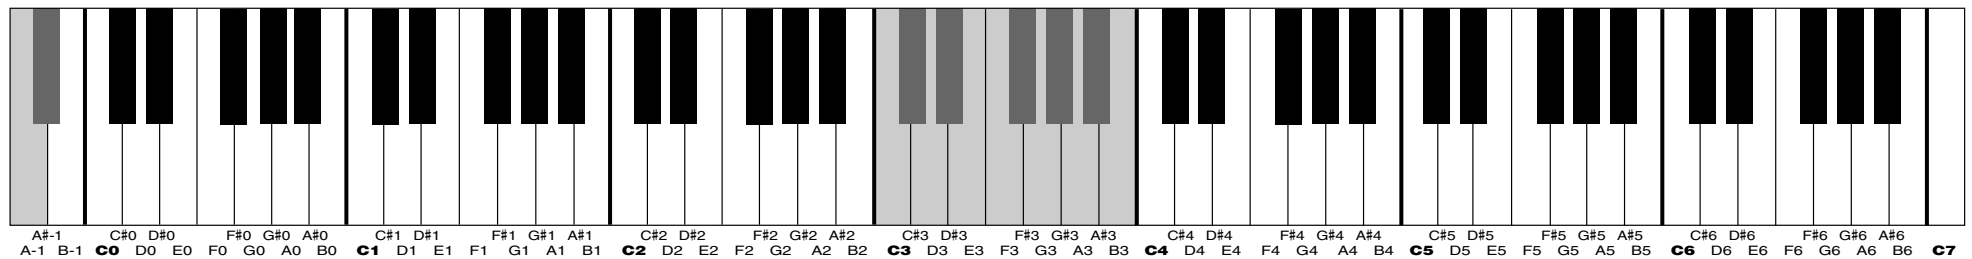

Standard pitch : 440.0 Hz (Press any highlighted key )

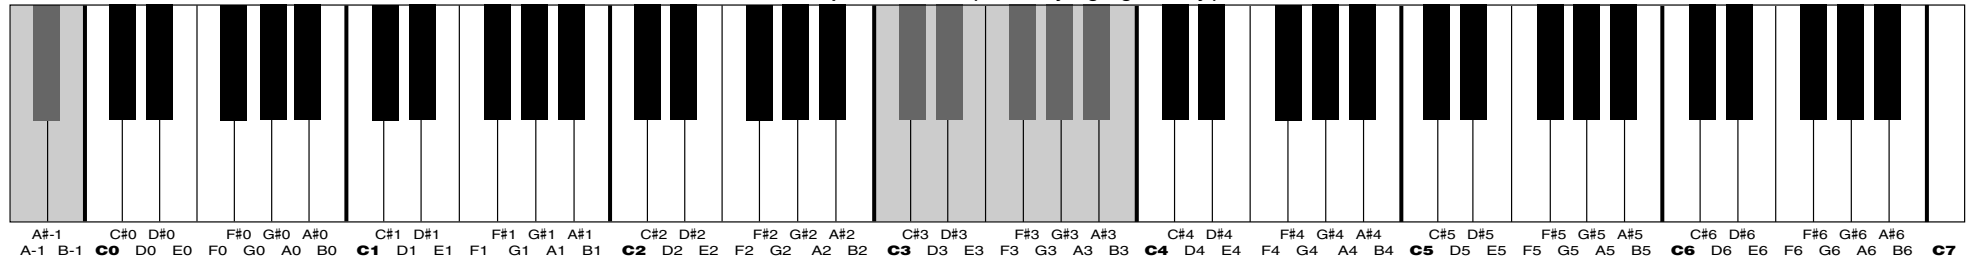

MIDI Transmit Channel

Transpose

MIDI Receive Channel

Program Change

Local Control

Control Change

