



PORTATONE

PSR-S9000

PSR-S7000

사용 설명서

()
Yamaha가

(:)

5 가

! 18 AWG : AWG 25' 가 ()

"가 " 가

Yamaha가

가

Yamaha

가

가 가

가

Yamaha

Yamaha

가

가

()

Yamaha

:

(가)

Yamaha



*



가

가

/AC

• (PSR-S900) (PA-300B/PA-300 Yamaha
가)

• (PSR-S700) (PA-301/PA-300B/PA-300 Yamaha
가)

• AC 가

• 가 가

• 가 가

• AC 가 가
가 Yamaha

가
Yamaha



가

/AC

AC

가

AC

가 가

가

• TV, 가
TV

가



- USER (27) USB 가 (USB
- / (43, 147, 162)
- / (118)
- (99)
- (51)
- MIDI (204)

가

USER (27 .81)
 USB (USB /)

Yamaha

가
 ()
 가
 5

가 가 Yamaha

가 "STANDBY"

가

AC

(4)
 (24)
 (66)
 (83)
 (210)

가 가

MIDI- (Voice), (Style), (Effect)
 Yamaha (Yamaha Manual Library)

Yamaha (Yamaha Manual Library)
<http://www.yamaha.co.jp/manual/>

- LCD PSR-S900
- MIDI / 가 /
- 가 /
- 가 /

Yamaha 가
 , MIDI , WAVE , 가
 가

- PSR-S900/S700 (Hamamatsu Museum of Musical Instruments)
- (PSR-S900) IVL Audio Inc. (No. 5231671, No. 5301259, No. 5428708 No. 5567901) 가
- Ricoh Co., Ltd.가
- ACCESS Co., Ltd. NF . NF Unisys Co., Ltd. 가 ACCESS
- LZW . NF
- NF , JPEG Group

Yamaha

Windows CD-ROM

Windows Accessory CD-ROM

AC

PSR-S900: PA-300B

*

PSR-S700: PA-301

*

*

. Yamaha .

PORTATONE 가	12
.....	14
.....	16
.....	16
.....	17
.....	18
.....	18
.....	18
.....	19
.....	19
(FDD)	22
USB (USB /)	23

.....	24
.....	26
.....	26
.....	27
.....	28
.....	30
.....	30
.....	36
.....	36
()	39
.....	40
.....	42
.....	43
.....	44
()	46
"Mary Had a Little Lamb"	46
.....	46
.....	52
.....	52
.....	53
.....	53
(HARMONY/ECHO)	54
()	55
()	56
(가)	57
(PSR-S900)	57
가	58
가	59

.....	61
(USB)	63
(PSR-S900)	63
.....	63
.....	65
.....	66
.....	66
-	67
()	68
.....	68
.....	69
/	72
.....	79
.....	79
.....	79
.....	80
.....	81
.....	81
,	83
.....	83
.....	84
(1, 2,)	84
(1 2)	85
(1)	86
.....	87
.....	87
.....	87
.....	87
/	89
(MIXING CONSOLE)	91
.....	91
-	99
.....	99
.....	103

.....	106
.....	106
.....	106
.....	107
.....	109
.....	110
.....	111
.....	111
.....	113
.....	114
.....	115
.....	118
.....	118
.....	118
.....	124
.....	132
.....	132
.....	133
.....	134
.....	135
.....	135
.....	136
.....	137
.....	138
.....	138
.....	140
.....	140
.....	141
.....	144
.....	145
.....	145
.....	147
.....	147
.....	162
.....	171
.....	171
.....	172

.....	172
.....	172
.....	173
.....	173
.....	173
.....	173
.....	174
.....	174
.....	175
.....	176
.....	178
.....	181
.....	182
.....	183
.....	184
.....	184
.....	187
.....	191
.....	193
.....	193
.....	193
.....	193
.....	193
.....	193
.....	194
.....	194
.....	194
.....	195
.....	198
.....	198
.....	198
.....	198
.....	199
.....	200
.....	201
.....	204
.....	204
.....	206
.....	207
.....	207
.....	208
.....	209
.....	209

•	18
•	18
•	/	17

PSR-S900/S700

•	24
•	36
-	36
-	() /	146
-	144
•	106
-	46
-	() /	108
-	111
•	52

•	(RIGHT1)	84
•	85
•	86
•	/	83
•	(PSR-S900).....	83
•	가	83
•	33
•	(RIGHT1, 2, LEFT) /	53
•	(RIGHT 1, 2, LEFT)	33

•	34
•	39

PSR-S900/S700

•	83
•	106
•	132
•	140
• 55 , 111	
•	138
•	138
•	51
•	/	89
•	MIDI	206
•	95
•	(PSR-S900).....	184
•	EQ	97

LCD

•	26
•	LCD 가	58
•	LCD	39
•	LCD (PSR-S900).....	58
•	TV (PSR-S900).....	194

•	50
•	()	50

•	/	89
•	53

•	55	,	111
•			51
•			135

•			99
•			103
•			118
•			43
-	MIDI	43	, 147
-			153
-			162
•			63
•			132
•			138
•			113
•	(PSR-S900)		184
•			95
•	EQ		97

•	PSR-S900/S700		87		
•			87		
•			93		
•	(,	,)	61
•	[TRANSPOSE]		93		
•	PITCH BEND		33		
•	MODULATION		33		

(PSR-S900)

•	58	,	194
•			60
•	가		58
•	TV 가		59
•			145
•			191
•			61
•			87


•	/		195
•			138
•			195
•	/	48	, 49


•			59
•	PSR-S900/S700		87
•	MIDI PSR-S900/S700		207

•	PSR-S900/S700		21
•	/ /		76
•			209


PORTATONE 가

소개

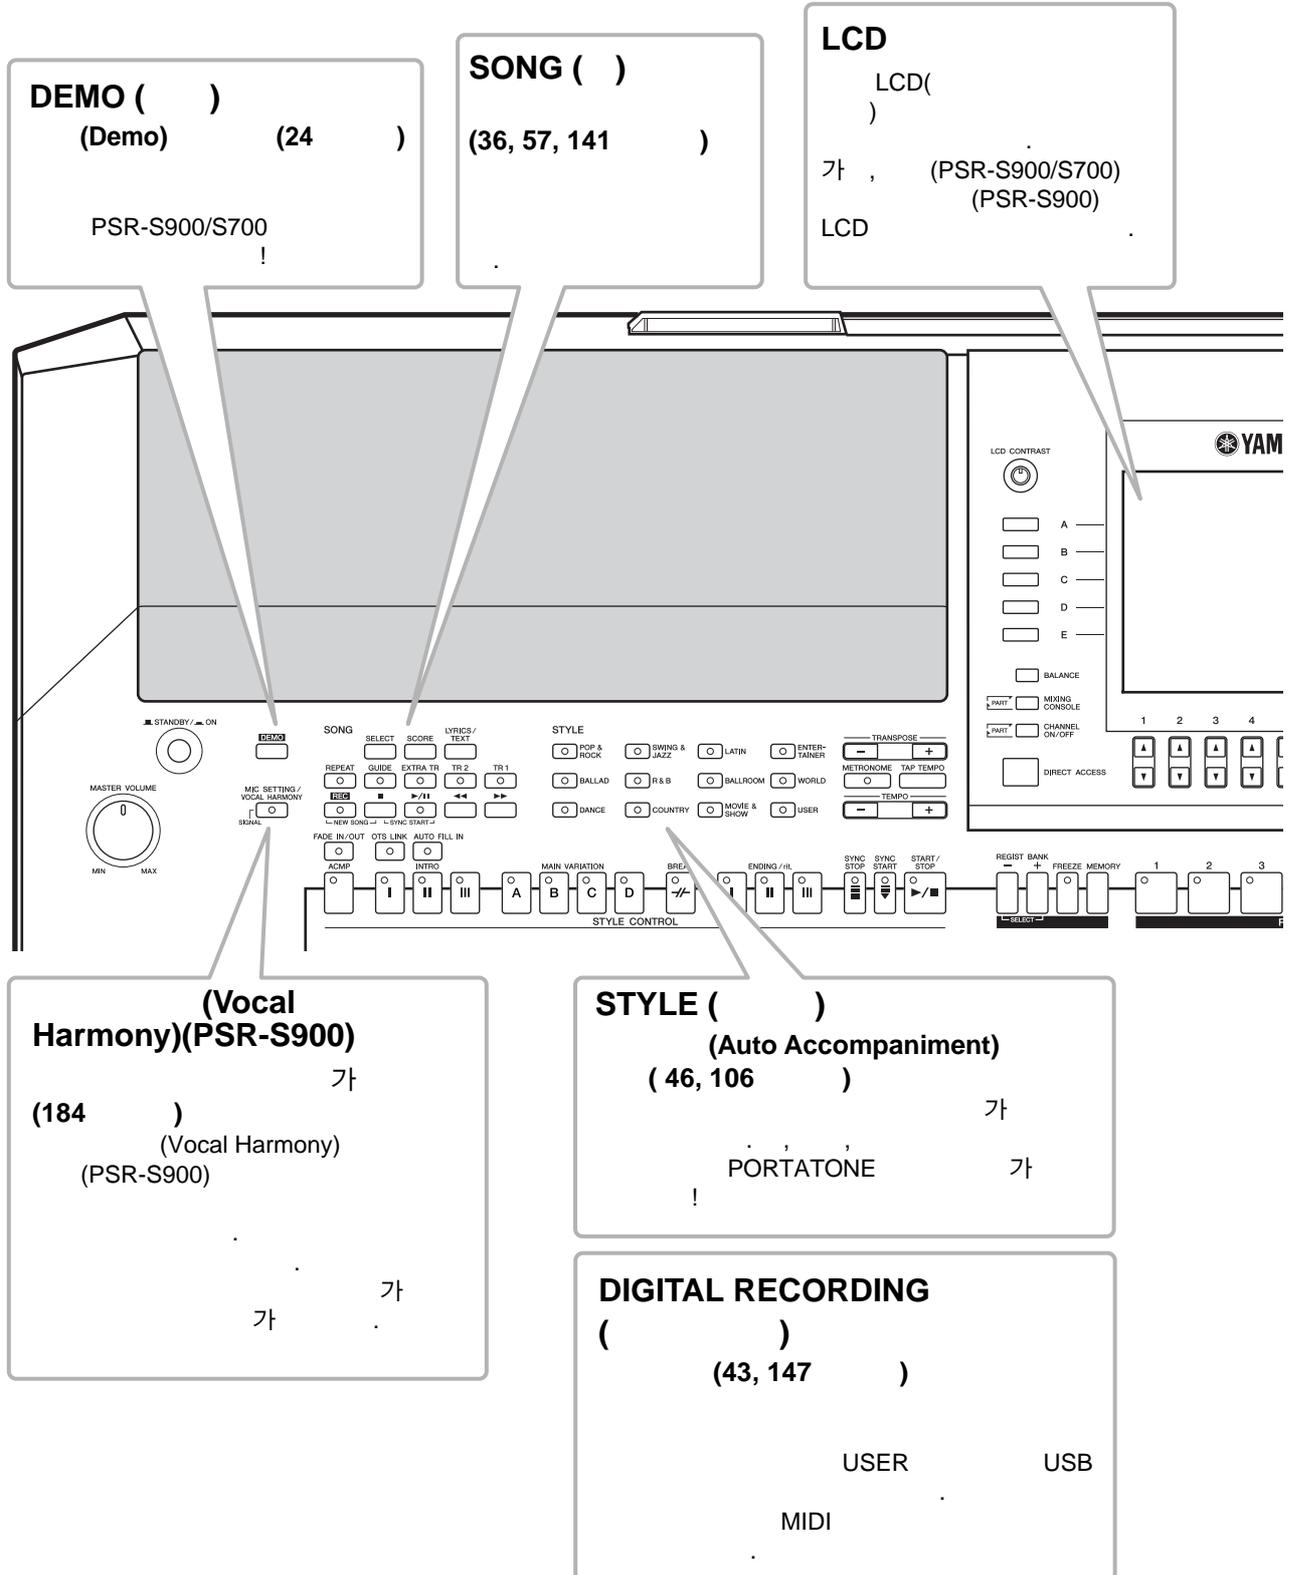


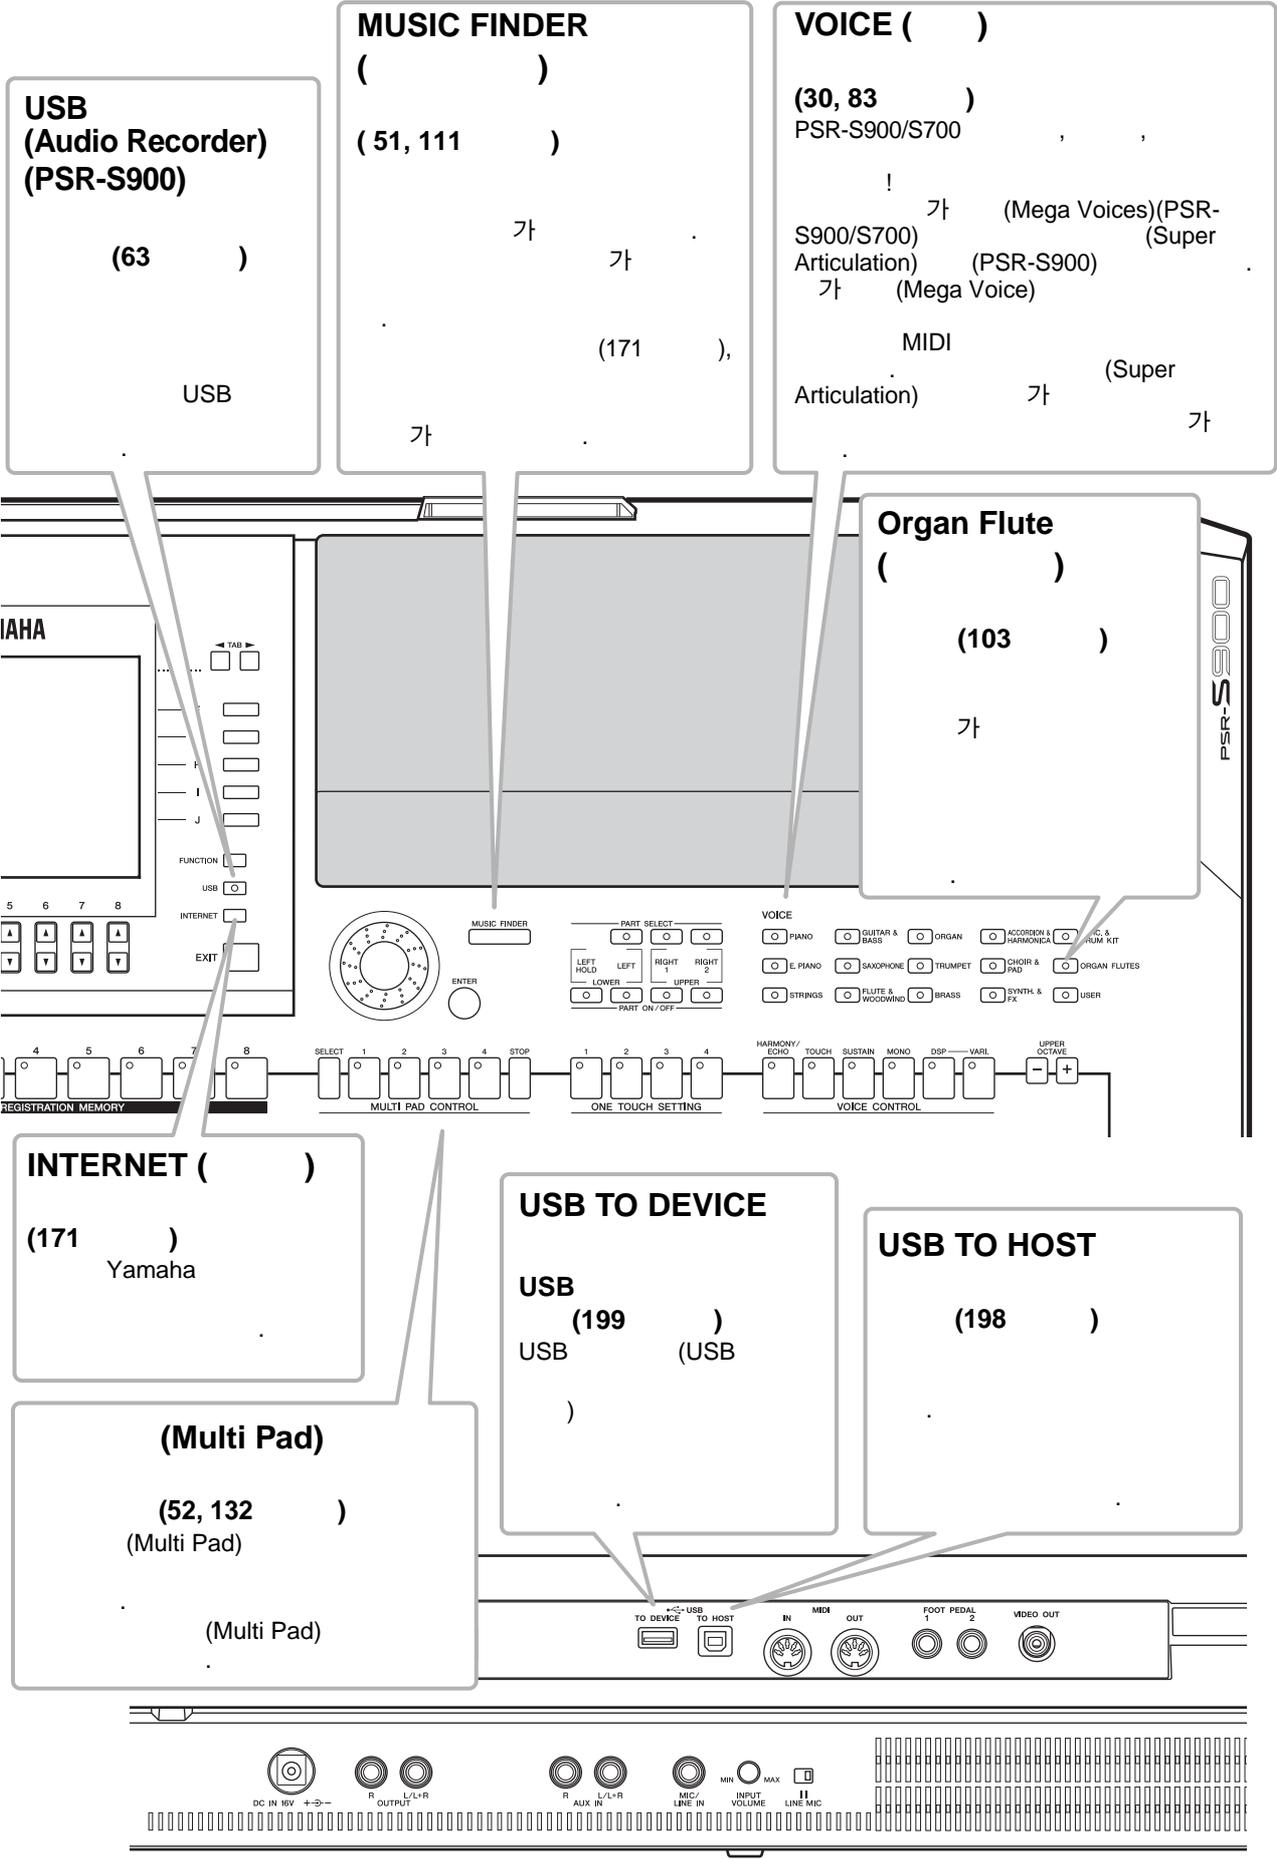


(Panel Control)

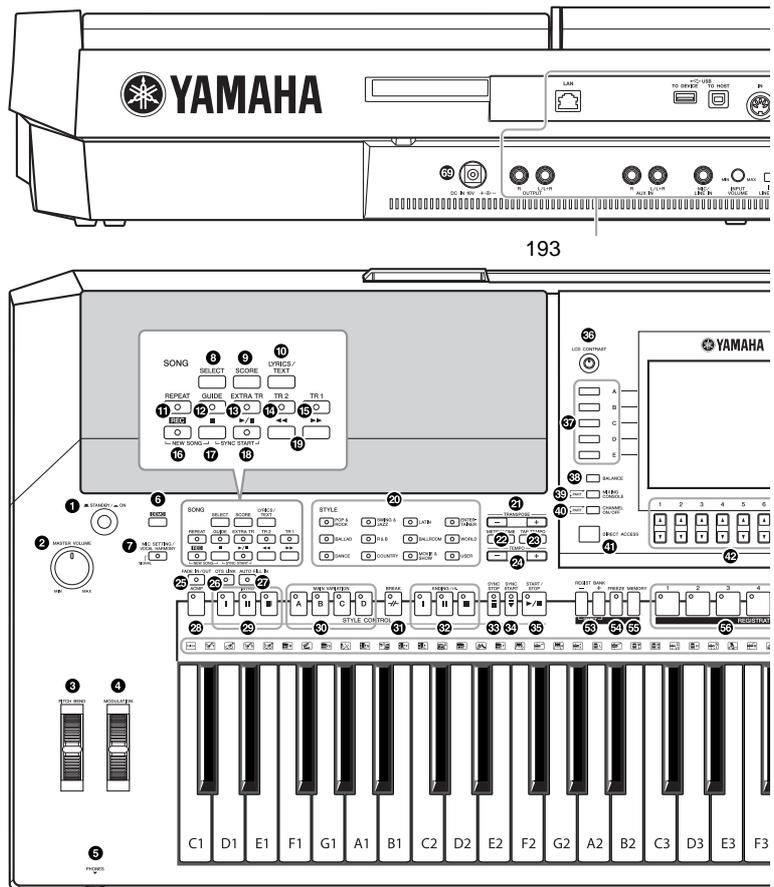

193

STANDBY/ON (/)	
1 [STANDBY/ON (/)]	17
VOLUME ()	
2 [MASTER VOLUME ()]	17
WHEEL ()	
3 [PITCH BEND ()]	33
4 [MODULATION ()]	33
PHONES ()	
5 [PHONES ()]	18
DEMO ()	
6 [DEMO ()]	24
MIC. ()	
7 [MIC SETTING/VOCAL HARMONY (/)] (PSR-S900)	59
SONG ()	
8 [SELECT ()]	36
9 [(SCORE)]	39
10 [LYRICS/TEXT (가 /)] (PSR-S900)	58
[LYRICS (가)] (PSR-S700)	58
11 [REPEAT ()]	42
12 [GUIDE ()]	40
13 [EXTRA TR]	147
14 [TR 2]	42
15 [TR 1]	40
16 [REC ()]	43
17 [■] (STOP ())	37
18 [▶/] (PLAY/PAUSE (/))	36
19 [◀◀]/[▶▶] (REW/FF (/))	142
STYLE ()	
20 [STYLE ()]	46
TRANSPOSE ()	
21 [-]/[+]	59
METRONOME ()	
22 [METRONOME ()]	34
TAP TEMPO ()	
23 [TAP TEMPO ()]	48
TEMPO ()	
24 [-]/[+]	34
FADE IN/OUT (/)	
25 [FADE IN/OUT (/)]	48
STYLE CONTROL ()	
26 [OTS LINK (OTS)]	51
27 [AUTO FILL IN ()]	49
28 [ACMP]	47
29 [INTRO ()][I]/[II]/[III]	48
30 [MAIN VARIATION ()][A]/[B]/[C]/[D]	49
31 [BREAK ()]	49
32 [ENDING ()/rit.][I]/[II]/[III]	49
33 [SYNC STOP ()]	49
34 [SYNC START ()]	48
35 [START/STOP (/)]	48

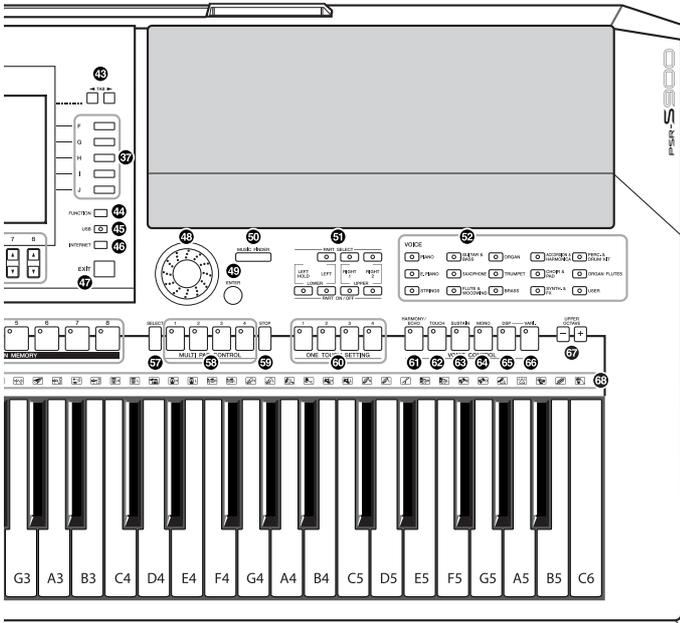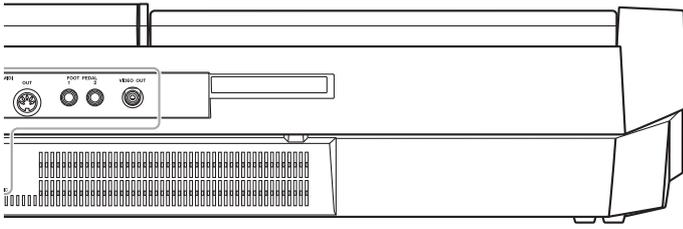

36	[LCD CONTRAST (LCD)]	19
37	[A] - [J]	26
38	[BALANCE ()]	41
39	[MIXING CONSOLE ()]	91
40	[CHANNEL ON/OFF (/)]	108, 146
41	[DIRECT ACCESS ()]	67
42	[1 ▲ ▼] - [8 ▲ ▼]	26
43	TAB [◀] [▶]	27
44	[FUNCTION ()]	28
45	[USB]	71
46	[INTERNET ()]	171
47	[EXIT ()]	27
48	DATA ENTRY ()	71
49	[ENTER ()]	71
MUSIC FINDER ()		
50	[MUSIC FINDER ()]	55
PART ()		
51	[PART SELECT ()], [PART ON/OFF (/)]	84
VOICE ()		
52	VOICE ()	30
REGISTRATION MEMORY ()		
53	REGIST BANK () [-]/[+]	136
54	[FREEZE ()]	138
55	[MEMORY ()]	135
56	[1] - [8]	135

MULTI PAD CONTROL ()		
57	[SELECT ()]	134
58	[1] - [4]	134
59	[STOP ()]	132
ONE TOUCH SETTING ()		
60	[1] - [4]	51
VOICE CONTROL ()		
61	[HARMONY/ECHO (/)]	53, 89
62	[TOUCH ()]	53
63	[SUSTAIN ()]	53
64	[MONO ()]	53
65	[DSP]	53
66	[VARI.]	53
UPPER OCTAVE ()		
67	UPPER OCTAVE () [-]/[+]	68
68	(Drum Kit)	(Data List)(5)
REAR PANEL ()		
69	DC IN ()	16

•	220
"	"
•	.
193	.



• (PSR-S900)
(PA-300B/PA-300
Yamaha)

• (PSR-S700)
(PA-301/PA-300B/PA-300
Yamaha)

• (PSR-S900/S700)
PSR-
S900/S700
PSR-S900/
S700
AC AC




PSR-S900/S700
, AC)! (가




가 "STANDBY ()"
가 . PSR-S900/
S700
AC

1 STANDBY/ON (/) STANDBY ()

2 AC

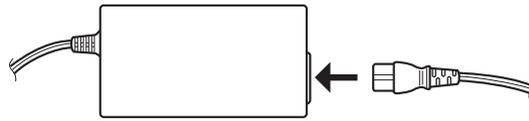


3 DC DC IN

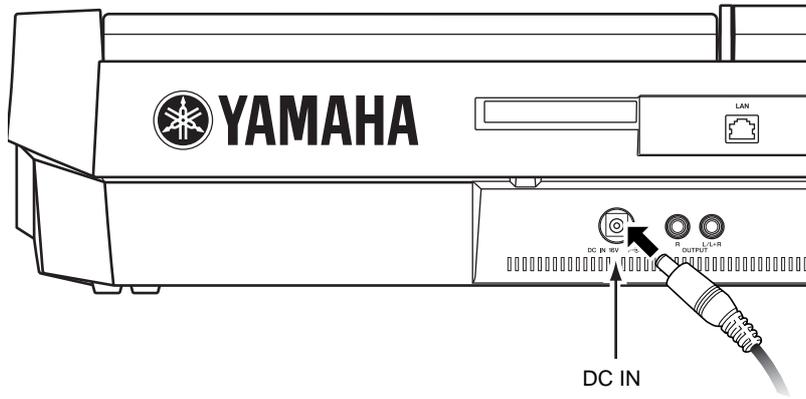

4 (AC) 가 가



참고
PSR-S900/S700

1 [STANDBY/ON (/)]
가

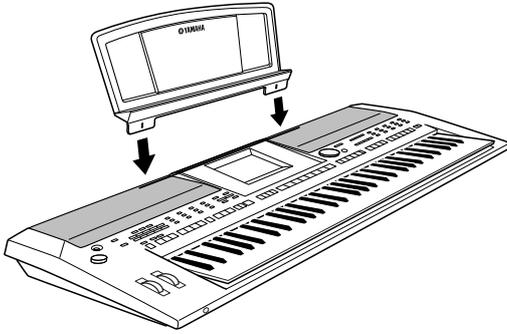

가 [STANDBY/ON (/)]


2 [MASTER VOLUME ()]

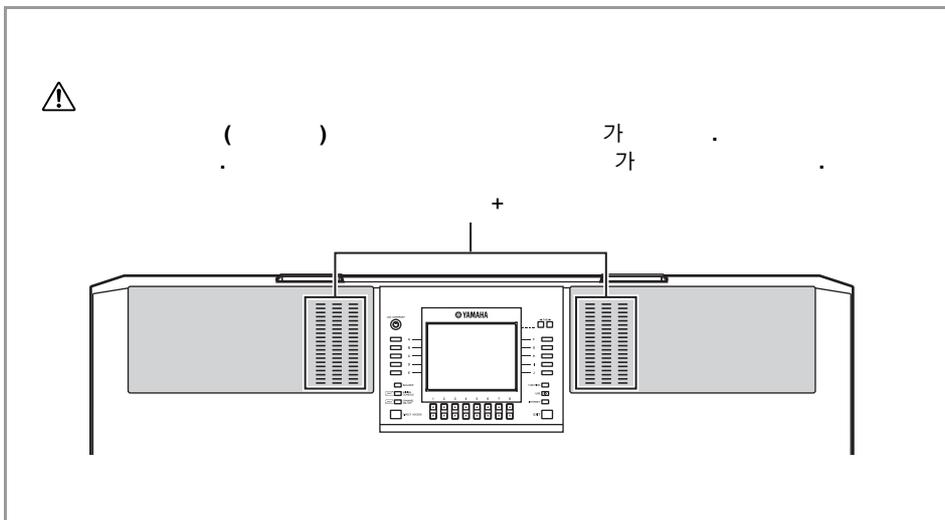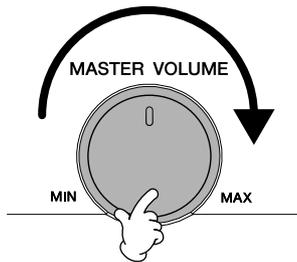


PSR-S900/S700
가

PSR-S900/S700

PSR-S900/S700
가


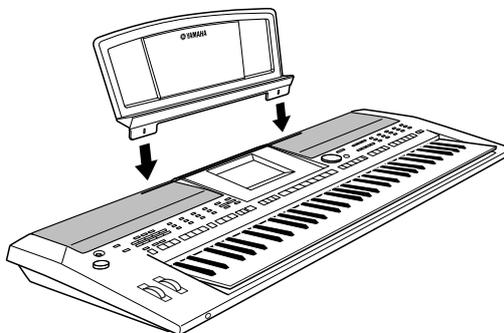


() [PHONES ()] 가 [PHONES



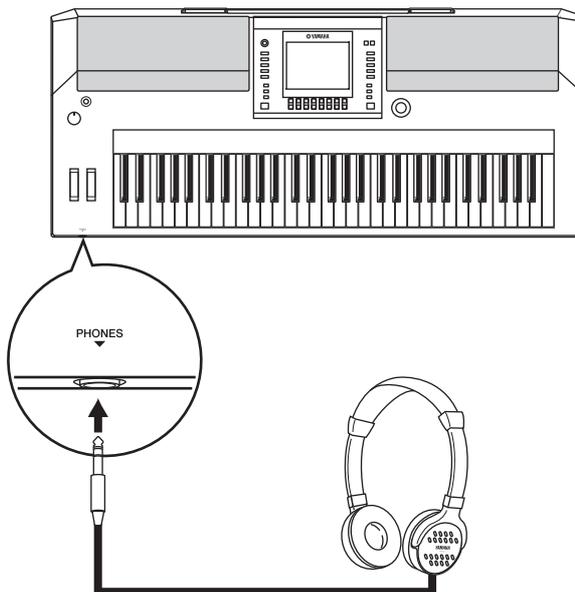


1 [FUNCTION] [J] UTILITY TAB [◀][▶] OWNER

2 [4 ▲ ▼]/[5 ▲ ▼]

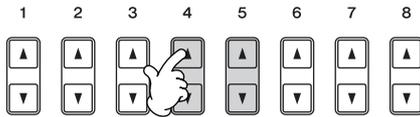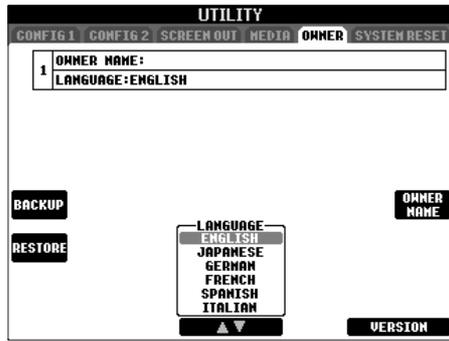

[LCD CONTRAST (LCD)]

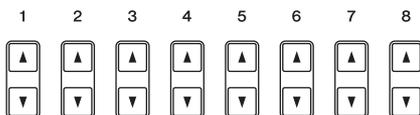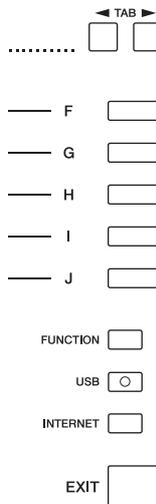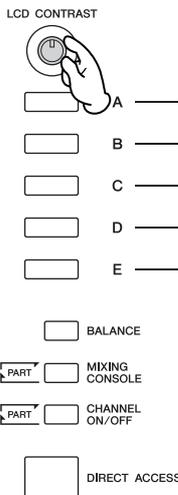


1

[FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 2


2

[2 ▲ ▼]

- A
- B
- C
- D
- E

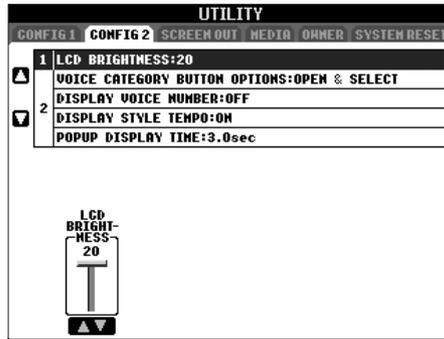

- F
- G
- H
- I
- J

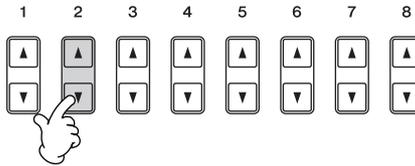

). (



(PSR-S900)

- 1 [FUNCTION] [J] UTILITY TAB [◀][▶] OWNER
- 2 [I] (OWNER NAME ())

77

[7 ▲ ▼]/[8 ▲ ▼] (VERSION ()) 1 . [EXIT ()]
 [8 ▲ ▼]

UD-FD01

소개

- 3.5" 2DD 2HD

72 가 가

참고

/

가 가

참고

가

가 가), (가 가 가 가 가 가

* 가 가



가


/

/ 가 가

1

Yamaha

가
 가
 가
 TV,
 가 ():
 가 " " ("
). " (). "

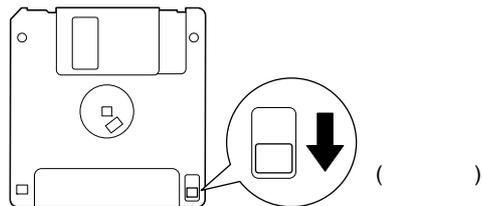

[USB TO DEVICE] 가
USB USB
. USB

참고 USB

USB

USB

- ROM 2 USB [USB TO DEVICE] USB
USB 가
USB USB 2
) USB
USB
• Yamaha USB 가 USB
Yamaha USB
Yamaha ()
<http://music.yamaha.com/homekeyboard/>

참고 CD-R/RW

USB

- USB 가 /
(Format)



가

USB

USB

- USB [USB TO DEVICE] 가

가 (



USB

가 (Save), (Copy) (Delete)
) USB

- 2 USB LAN) USB ()
가) USB
USB 가 USB
UBS

- USB 1.1 , USB 2.0
USB 1.1


()

가

. USB

소개



(Demo)
(Demo)

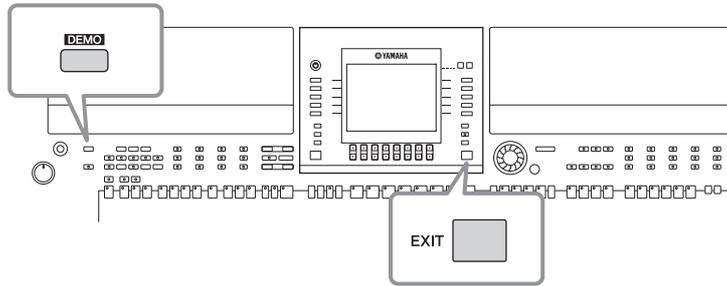

1

1 [FUNCTION] [J]UTILITY TAB[◀][▶] OWNER

2 [4 ▲ ▼]/[5 ▲ ▼]

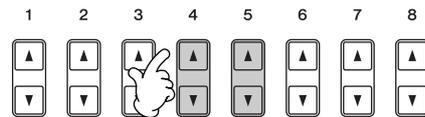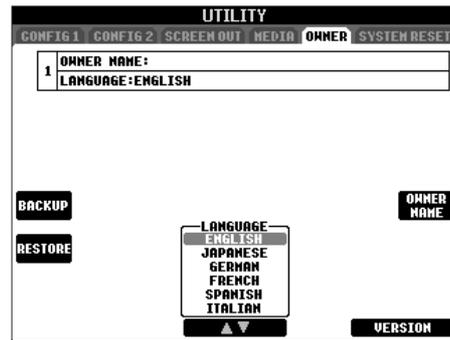

2 [DEMO ()] (Demo)
(Demo)




3 [EXIT ()] (Demo)
(Demo)가
MAIN ()



1 (Demo) [7 ▲ ▼]/[8 ▲ ▼] (Demo)

(Play Overview Demo (가 [J]))

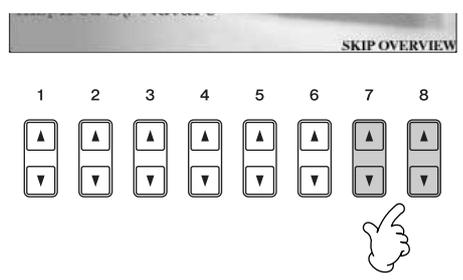

2 [A] - [H] (Demo)

(Demo)

[1 ▲ ▼] - [8 ▲ ▼]

3 [EXIT ()] (Demo)



(Quick Guide)

.3가

가

:

-
- 27
- 28

(Main)

(Main)

.) (Main)

참고 (Main)
68

1 [A] - [J]
[A] - [J]


[F]
(RIGHT 1) 가

2 [1 ▲ ▼] - [8 ▲ ▼]
[1 ▲ ▼] - [8 ▲ ▼]


[1 ▲]
(Song) (36)

3 [DIRECT ACCESS ()]
[EXIT ()]

(Main) 가
[DIRECT ACCESS ()]
()
[EXIT ()]

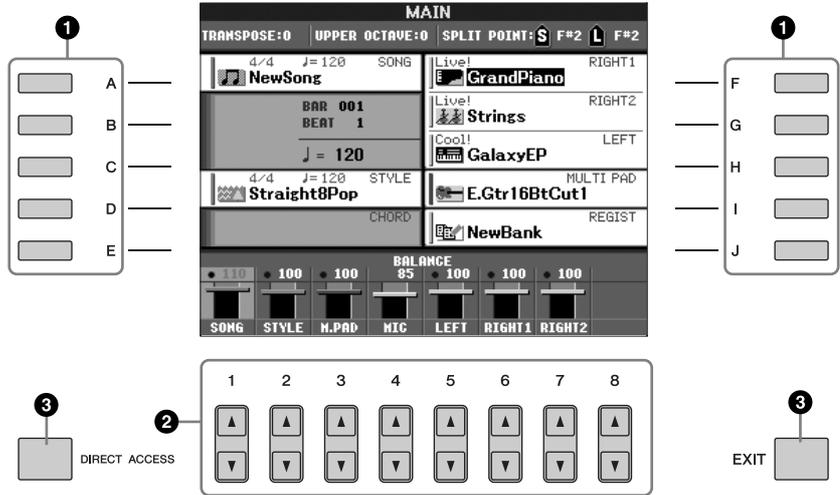

(File Selection) (Voice)(30)/ (Song) (36)/ (Style)(46)
 (Song Selection)

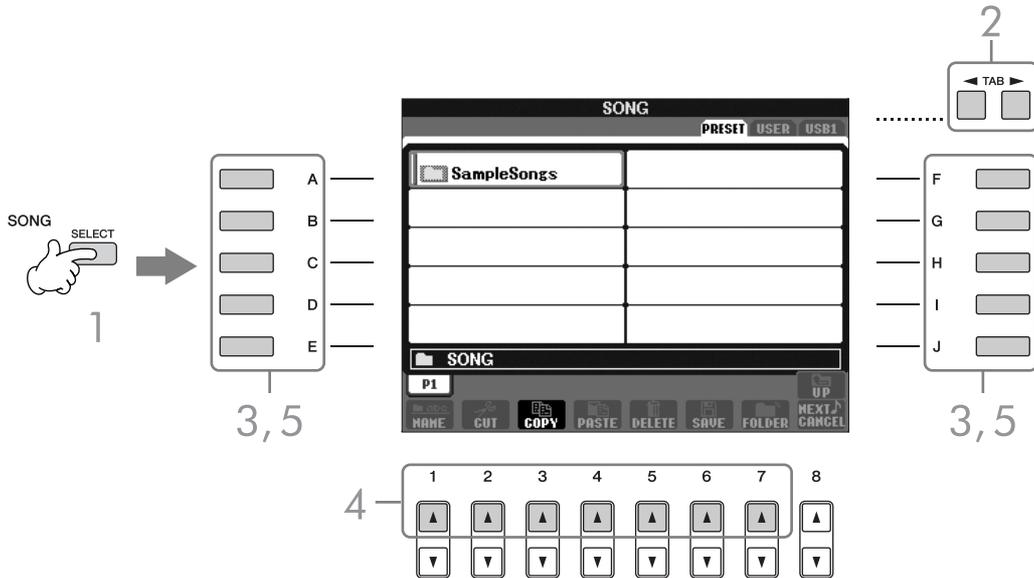

1 SONG () [SELECT ()] (Song Selection)


2 TAB () [◀][▶] (PRESET ()/USER ()/USB)

PRESET ()/USER ()/USB
 PRESET () 가
 USER () 가가
 [USB TO DEVICE] USB / USB

참고 USB / USB "USB"

3 ()

(Song) 가
 () [A] -
 [J]
 [8 ▲] (UP ())

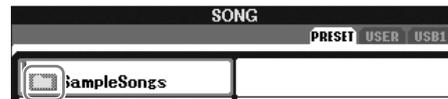

4 () 가)

10 (Song)
 [1 ▲] - [7 ▲]
참고 / / (Voice/Song/Style) "P1,
 P2 ..."

5 [A] - [J] (Song)

DATA ENTRY () (Song) [ENTER ()]



6 [EXIT ()]

(Function)

(Function)

1 [FUNCTION ()]

가

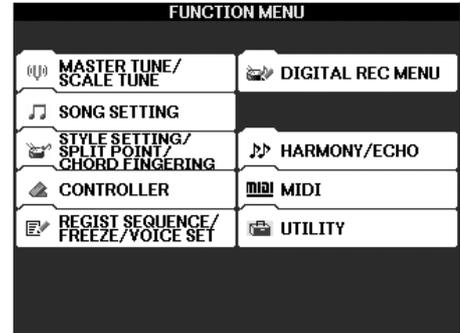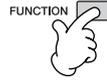


2 [D]

CONTROLLER ()

가



참고 PSR-S700
"2 S.ART" "2 VOLUME"

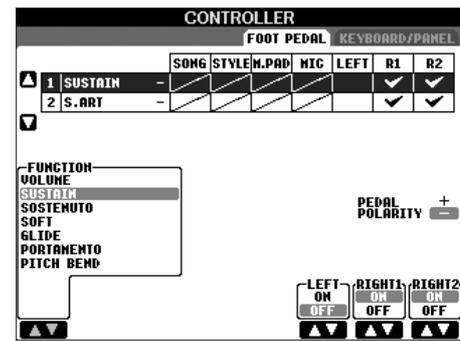

3 TAB () [◀][▶]


가

KEYBOARD/PANEL (/)

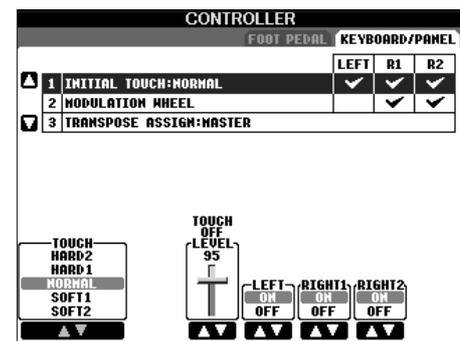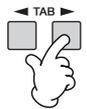

4 [A]

"1 INITIAL TOUCH"

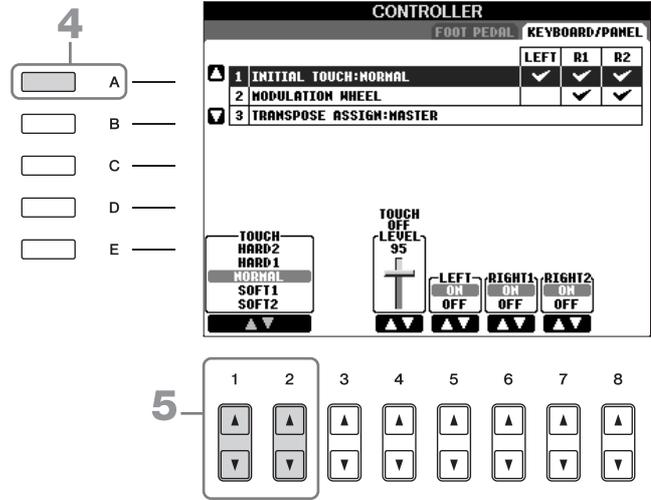


5 [1 ▲ ▼]/[2 ▲ ▼]

33


KEYBOARD/PANEL [A] 1 INITIAL TOUCH.

[FUNCTION] [D] CONTROLLER TAB [◀][▶]

(Voice)

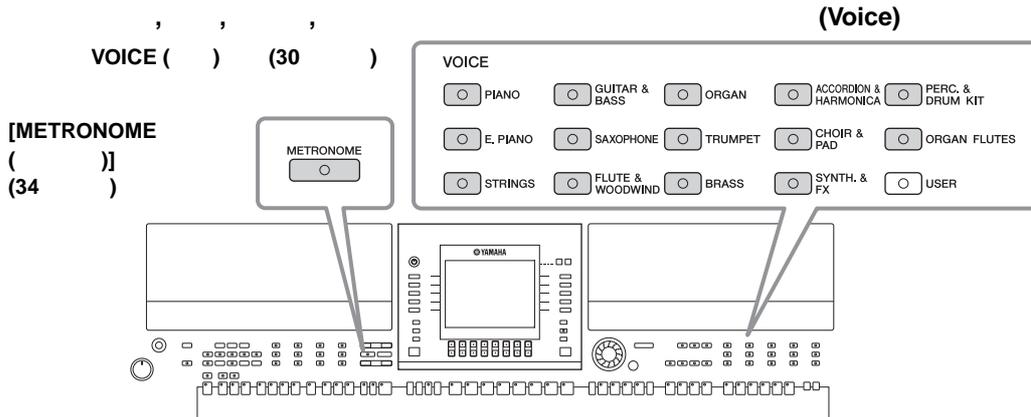

(Voice)

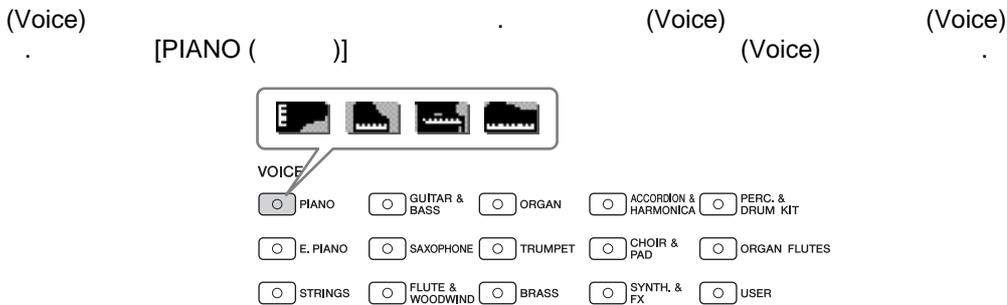

참고

Yamaha (Voice) (Data List) (Voice List) (5)

1 PART SELECT () [RIGHT1]


(Voice) RIGHT 1

(Voice)

(Voice)

34

PART ON/OFF (/) [RIGHT1]

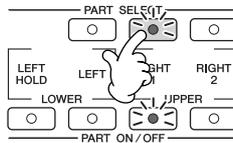

(Voice) (Voice) (VOICE ()) (VOICE ())

1

[FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 2

2

[B] (2 VOICE CATEGORY BUTTON OPTIONS ()) [1 ▲ ▼]/[2 ▲ ▼]

• **OPEN&SELECT ():** (Voice) () (Voice) OPEN&SELECT ()

• **OPEN ONLY ():** (Voice) (VOICE ())

2 VOICE ()

(Voice)

(Voice)

VOICE

- PIANO GUITAR & BASS ORGAN ACCORDION & HARMONICA PERC. & DRUM KIT
- E. PIANO SAXOPHONE TRUMPET CHOIR & PAD ORGAN FLUTES
- STRINGS FLUTE & WOODWIND BRASS SYNTH. & FX USER

3 [A] - [J]

(Voice)

- ▶ 참고 (Voice) (Preset Voice) 83
- [7 ▲] (INFORMATION ()) (Voice) (PSR-S900)
- [A] - [J] " " (Main)



4



(Voice)

(Voice)
(Voice)

- (Voice) (Voice Selection) VOICE () [USER]
- 1 (User) (Voice) 74
- 2 VOICE () [USER ()] (Voice Selection) [A] - [J]
- (Voice)
- (Voice) (Registration Memory) REGISTRATION MEMORY () [1] - [8]
- (Registration Memory) 135

(Voice) (Demo)

(Voice)

(Voice)

1 (Voice Selection) (31 3) [8▼] (DEMO ())
 (Voice) (Demo)

2 (Demo) [8▼] (DEMO ())

[PERCUSSION & DRUM KIT ()] (Drum Kit Voice) 가
 (Drum List) (5) (Data List)
 "Standard Kit 1" 가 (Drum Kit)
 (15).

"GM2" "GM&XG/"
1 PART SELECT () [RIGHT 1] (Voice)
2 [8▲] (UP ()) (Voice)
3 [2▲] 2
4 [E]/[F] "GM&XG"/"GM2"
5 [2▲] 2
6 [F] "SoundEffect"
7 [A] - [J]
8

GM/XG/GM2 (Voice)
 참고 (Voice) 204
 GM/XG/GM2 (Voice) " " 1 - 4

(Voice)
 (Voice) (84).
 •
 • (Voice)
 (Voice) (Voice)

(Voice) () 가)

1 [FUNCTION] [D] CONTROLLER TAB [◀][▶] KEYBOARD/PANEL [A] 1 INITIAL TOUCH

2 [1 ▲ ▼]/[2 ▲ ▼]
HARD 2 ... 가)
HARD 1 ... 가)
NORMAL...
SOFT 1....
SOFT 2.... 가)

참고 • 가)
• [5 ▼] - [7 ▼] (Touch)가 OFF
• [4 ▲ ▼] (Touch) OFF

PITCH BEND() (Pitch Bend) 가) (RIGHT 1, 2 LEFT). PITCH BEND ()


참고 • (Pitch Bend) 가 MIDI 1200 (1)
• [ACMP] PART ON/OFF [LEFT]가 "FULL KEYBOARD" 'AI FULL LEFT PITCH BEND (Chord Fingering)

1 (Pitch Bend Range) [MIXING CONSOLE] TAB [◀][▶] TUNE [H] PITCH BEND RANGE

2 [5 ▲ ▼]/[6 ▲ ▼]/[7 ▲ ▼] (Pitch Bend Range)
[5 ▲ ▼] LEFT (Pitch Bend Range)
[6 ▲ ▼] RIGHT1 (Pitch Bend Range)
[7 ▲ ▼] RIGHT2 (Pitch Bend Range)

(Modulation)

(Modulation) (RIGHT 1, 2 LEFT). MODULATION () (MIN) 가 (MAX) 가

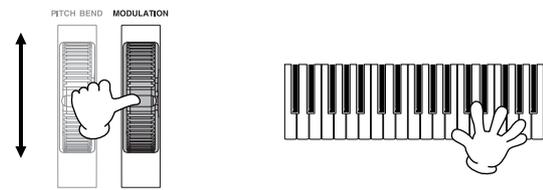

참고

- [ACMP] PART ON/OFF [LEFT]가 "FULL KEYBOARD" MODULATION

MODULATION () MIN (Chord Fingering) "FULL KEYBOARD" "AI FULL LEFT"

MODULATION ()		
1	[FUNCTION] [D] CONTROLLER TAB [◀][▶] KEYBOARD/PANEL [A]/[B] 2 MODULATION WHEEL	
2	[5 ▲ ▼]/[6 ▲ ▼]/[7 ▲ ▼]	MODULATION ()
[5 ▲ ▼]MODULATION ()	LEFT
[6 ▲ ▼]MODULATION ()	RIGHT1
[7 ▲ ▼]MODULATION ()	RIGHT2

(Metronome)



가 가 가

1 METRONOME ()

2 METRONOME ()



1 TEMPO () [-]/[+]

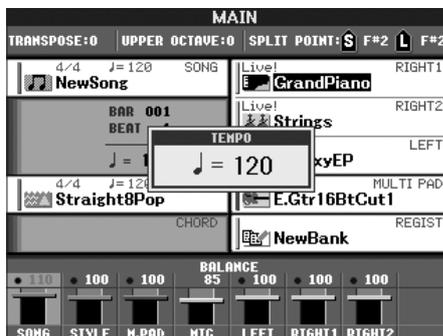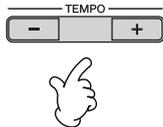

2 TEMPO () [-]/[+]

가

DATA ENTRY ()
TEMPO () [-]/[+]

참고 (Tempo)

4 가 5~500 가

3 [EXIT ()]

(Tempo)



1 [FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 2
 2 [B] (2 POPUP DISPLAY TIME ()) [7 ▲ ▼]/[8 ▲ ▼]




1 [FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 1 [B] 2 METORONOME

2 [2 ▲ ▼] - [7 ▲ ▼]

VOLUME ()	
SOUND ()	가
	Bell Off 가
	Bell On 가
TIME SIGNATURE ()	

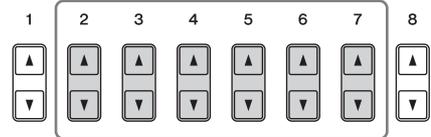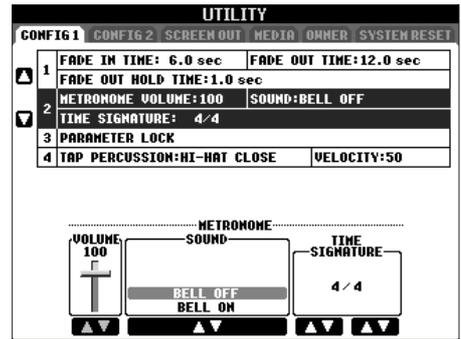

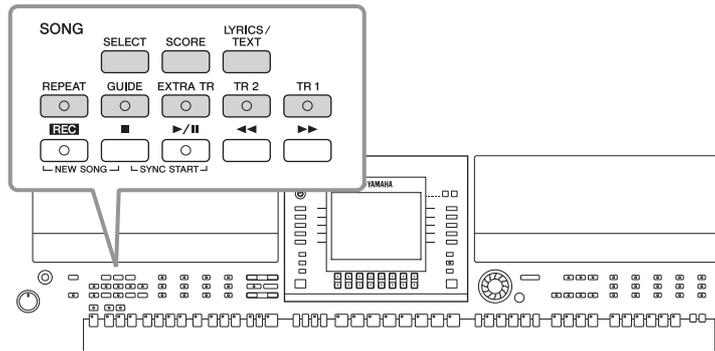

참고

" (Song)"

(Song)


(Song)

(Song)

1 SONG () [SELECT ()] (Song)



2 [A] (Sample Song)

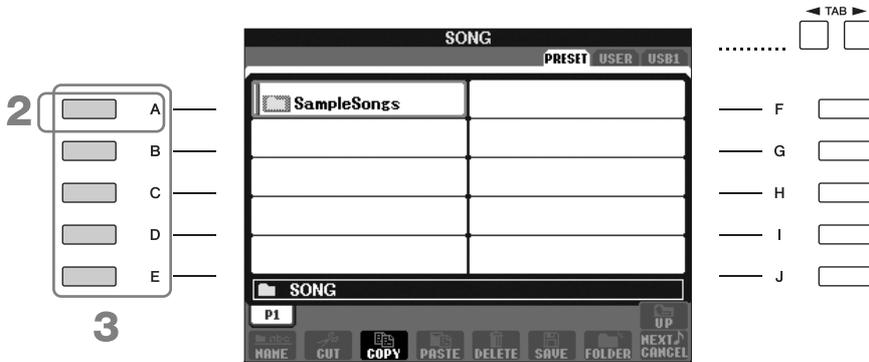


3 [A] - [E] (Song)

DATA ENTRY


[ENTER()]

[A] - [E] " " (Main)

4 SONG () [▶/||] (PLAY/PAUSE (/))

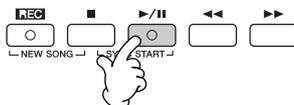

5 SONG () [] (STOP ())

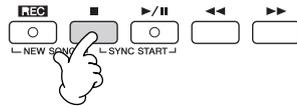

USER () (73)

1 SONG () [SELECT ()] (Song)

2 TAB () [◀][▶] USER ()



3 [A] - [J] (Song)

USB (Song) (73)



USB 23 "USB (USB /)"

1 USB [USB TO DEVICE]

2 SONG () [SELECT ()] (Song)

3 TAB () [◀][▶] 1 USB USB ("USB1"/"USB2")

"USB1"/"USB2"



4 [A] - [J] (Song)

[참고] [USB] USB
[USB] [A] SONG [A] - [J]

(Song)

(Song)

1 (Song)

2

[FUNCTION] [B] SONG SETTING

3 [H] (REPEAT MODE ()) "ALL ()"

4 SONG () [▶/||] (PLAY/PAUSE (/))
(Song)


5 SONG () [] (STOP ())

6 (Song) [H] 2 "OFF"

(Song) 16 MIDI

1 (Song) (Song) " (36 1-3)

2 [MIXING CONSOLE ()] MIXING CONSOLE ()

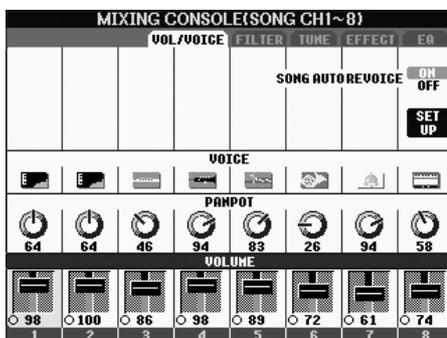


3 TAB () [◀][▶] VOL/VOICE (/)

4 "MIXING CONSOLE () (SONG () CH1-8)" [MIXING CONSOLE ()]

5 [E]/[J] "VOLUME ()"

6 [1 ▲ ▼] - [8 ▲ ▼]
 MIXING CONSOLE () (SONG () CH1-8) [MIXING CONSOLE ()]
 MIXING CONSOLE () MIXING CONSOLE () (SONG () CH9-16)

• "VOICE ()"

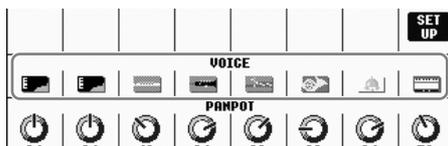

• (Song)



(SCORE)

(Song)

참고

•

(Song)

(Song)

가

•

(Song)

(Song)

147

1 (Song) (36)

2 [SCORE ()]

참고 (Song)

TAB () [◀|▶]

(196)

3 SONG () [▶/||] (PLAY/PAUSE (/))

" "

4 SONG () [] (STOP ())

1 [SCORE ()]

참고

(Song)

가

(Song)

2

●

[7 ▲ ▼]

●

[1 ▲ ▼]/[2 ▲ ▼]

●

•

1 [5 ▲ ▼] (NOTE ())

2 [8 ▲ ▼] (SET UP ())

3 [6 ▼] (NOTE NAME ())

"

(Fixed Do)"

4 [8 ▲] (OK ())

•

(PSR-S900)

[6 ▲ ▼] COLOR ()

참고

C: , D: , E: , F: , G: , A: , B:

●

가

(, 가 ,)

가

[1 ▲ ▼] - [4 ▲ ▼]

TEMPO ♩=76 SCORE: Beauty And The Be~ PAGE 1/7

LEFT ON RIGHT ON CHORD OFF LYRICS OFF NOTE OFF COLOR OFF SIZE SMALL SET UP

1	2	3	4	5	6	7	8
▲	▲	▲	▲	▲	▲	▲	▲
▼	▼	▼	▼	▼	▼	▼	▼

1 [8 ▲ ▼] (SET UP ())

2 [1 ▲ ▼] - [6 ▲ ▼]

LEFT CH/RIGHT CH (/)	/ (Song) AUTO MIDI
	(Song) MIDI [FUNCTION ()] [B] SONG SETTING () 1 - 16 MIDI (1 - 16) OFF (LEFT CH)
KEY SIGNATURE ()	(Song)
QUANTIZE ()	가
NOTE NAME ()	3가 " 1 NOTE () 가 ON
	A, B, C (C, D, E, F, G, A, B) FIXED DO () OWNER () LANGUAGE () (19). MOVABLE DO () , G "So" " " " (Fixed Do)"

3 [8 ▲] (OK ())

참고


(Song) (166)

가

(TRACK 1)

1 (Song) (36) [SCORE ()] (Score)

2 [GUIDE ()]

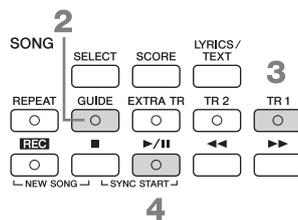

3 SONG () [TR 1]

[TR 1]

4 SONG [▶/II] (PLAY/PAUSE (/))

(Score)

참고

34

()
[TAP TEMPO ()]

(Song)

5 SONG () [] (STOP ())

6 [(GUIDE)]

(Song)

(Song)

1 [BALANCE ()]


2 (Song)

[1 ▲ ▼]

(RIGHT 1)

[6 ▲ ▼]

3 [EXIT ()]

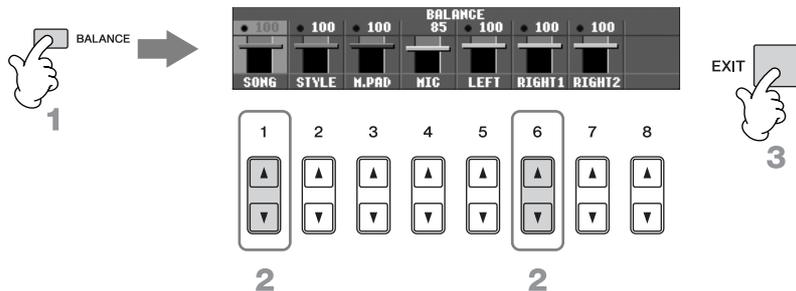

참고

84

(1, 2,)

"Follow Lights" 40

가

145

가

- Karao-Key

(Song)

- Vocal CueTIME (PSR-S900)

()

(TRACK 2)

1,2 40 " (TR 1) "

3 [TR 2]

[TR 2 (L)]

4 SONG () [▶/⏸] (PLAY/PAUSE (/))

5 SONG () [] (STOP ())

6 [GUIDE ()]

(Song) (Song)

(Song Repeat)

1 (Song) (36).

2 [REPEAT ()]

3 SONG [▶/⏸] (PLAY/PAUSE (/))
SONG [] (STOP ()) (Song)

4 SONG () [] (STOP ())

5 [REPEAT ()]

()

1 (Song) (36).

2 SONG () [▶/⏸] (PLAY/PAUSE (/))

3

() (A) [REPEAT ()] (B) [REPEAT
(lead-in:) A ~ B

참고 A (Song) 가

[] (STOP ()) A

4 SONG () [] (STOP ())

5 [REPEAT ()]

● (Song)

- 1 [▶▶] (Fast Forward()) A .
- 2 [REPEAT ()] A .
- 3 [▶▶] (Fast Forward()) B .
- 4 [REPEAT ()] B .

●A (Song)


A (Point) (Song) A (Point)

(Quick Recording)

가


1 [REC ()] [](STOP ())

(Song)

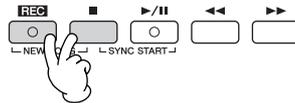

2 (Voice) (30) (Voice)

3 [REC ()]

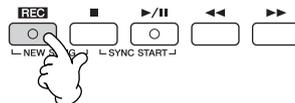


4


5 SONG ()[](STOP ())

가

[EXIT ()]

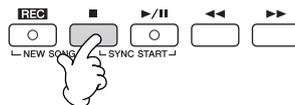

6 SONG ()[▶/||] (PLAY/PAUSE (/))

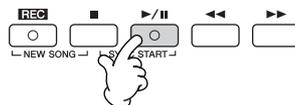

7

- 1 SONG () [SELECT ()] (Song)
- 2 TAB [◀][▶] (USER, USB) . USER ()
USB USB
- 3 [6 ▼] (SAVE ())
- 4 (77).
- 5 [8 ▲] (OK ())
[8 ▼] (CANCEL ())




(Song)

가 : "Song" changed. Save?/"Song" speichern?/"Song" modifiÈ. Sauv.?"Song"
cambiado. ¿ Guardar?/Salvare "Song"?
() . [G] (YES ()) (Song)
[H] (NO ())

USER USB
37

(Song)

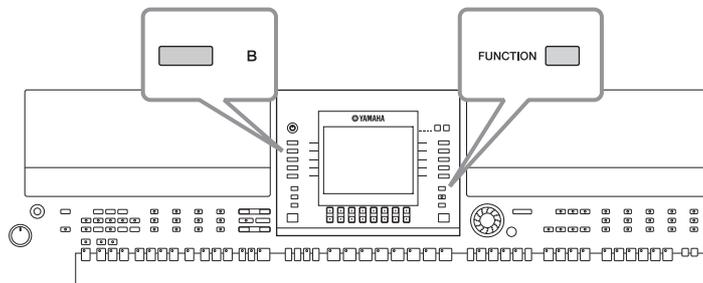

참고

(Song) (Main) (Song) 가 (Song) 가

1 (Song) (36).


"SampleSong" (Song)

2


[FUNCTION] [B] SONG SETTING

3 [8 ▲ ▼]

[P.A.T.] () .

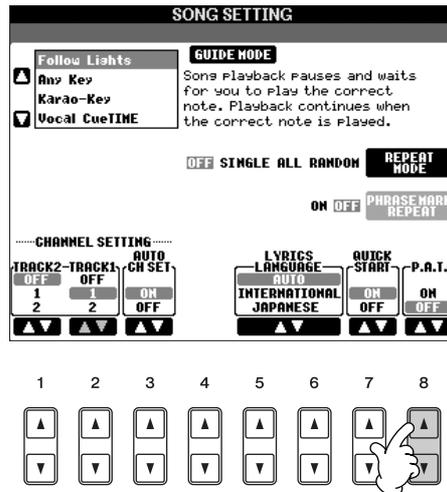


4 SONG () [▶/⏸] (PLAY/PAUSE (/)) .

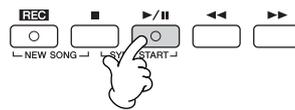

5

가 (Song)

● (1). ●

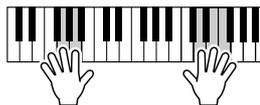


3

3가 (2). ●



3

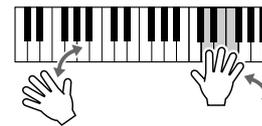


3

6 SONG () [] (STOP ()) .

7 [8 ▲ ▼]

[P.A.T.] () .

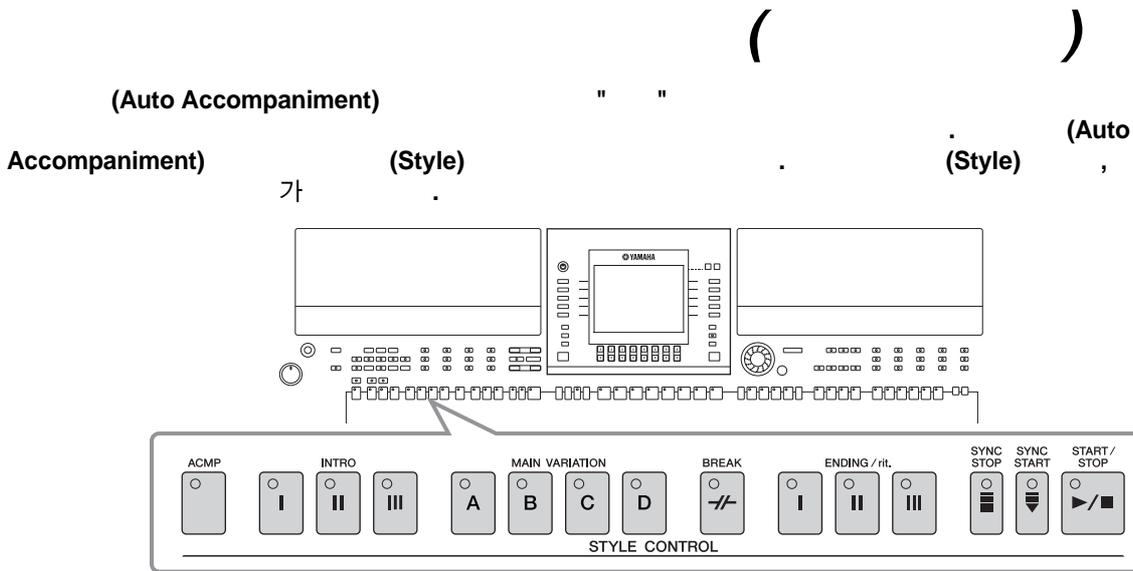

"Mary Had a Little Lamb"

MARY HAD A LITTLE LAMB

1 STYLE CONTROL () "COUNTRY ()"

STYLE

<input type="radio"/> POP & ROCK	<input type="radio"/> SWING & JAZZ	<input type="radio"/> LATIN	<input type="radio"/> ENTERTAINER
<input type="radio"/> BALLAD	<input type="radio"/> R & B	<input type="radio"/> BALLROOM	<input type="radio"/> WORLD
<input type="radio"/> DANCE	<input checked="" type="radio"/> COUNTRY	<input type="radio"/> MOVIE & SHOW	<input type="radio"/> USER


(Style)
 (Style) 가

1
 [FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 2

2 [B] (2 DISPLAY STYLE TEMPO ()) [5 ▲ ▼]/[6 ▲ ▼]


- ON: (Style) 가 (Display Style Tempo)
- OFF: (Style) 가

2 [A] - [J] (Style) "CountryPop"

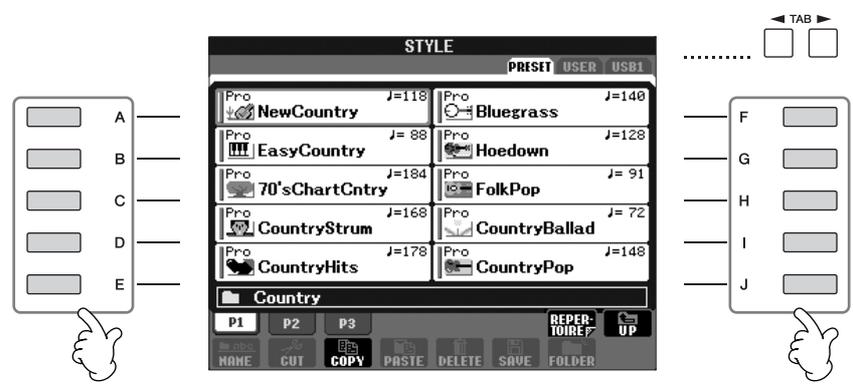

- (Style) (Preset Style)
 - 106 (Style) [7 ▲] (REPERTOIRE ()) (Style) 가
 - [A] - [J] " " 가 [EXIT ()]
- 56

3 [ACMP] (Auto Accompaniment)

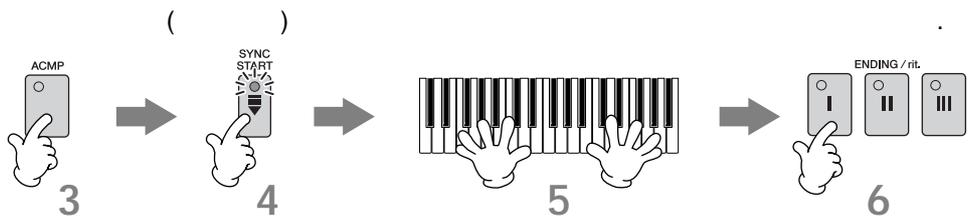

4 [SYNC START ()] (Auto Accompaniment)

5 가

- 참고 7가 (106)

6 " (Ending)" (46) [ENDING/rit.]

가
(Ending) (Style)

- **참고**
 - Yamaha (Data List) (Style List) (5)
 - ()
 - [TAP TEMPO ()]
 - ()
 - 110
 - / ()
 - 109


(Style)
(Style)

1 [BALANCE ()]

2 (Style) [2 ▲ ▼] (RIGHT 1) [6 ▲ ▼]

3 [EXIT ()]

가 , , /

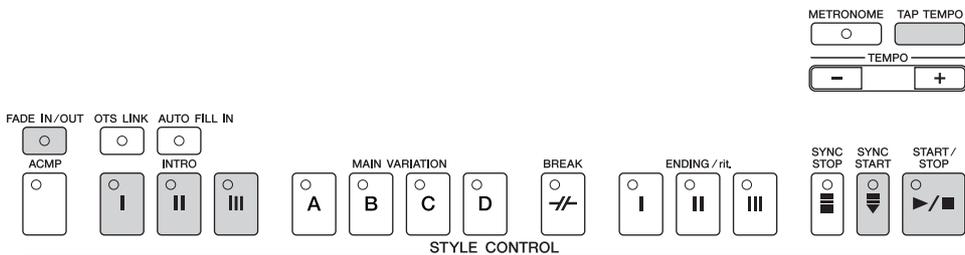

● / (Start/Stop)

STYLE CONTROL () [START/STOP (/)] (Style)

● (Intro)

(Song) (Style) 가
(Main) (" (Style) " " (Main)").
(Style) INTRO [I] - [III] STYLE CONTROL ()
[START/STOP (/)] (Style)

● (Sync Start)


(Style) [SYNC START ()]
(Style)

● (Fade In)


(Fade In) (Style)
(Style) [FADE IN/OUT (/)] STYLE CONTROL ()
[START/STOP (/)] (Style)

● (Style) [TAP TEMPO ()]
(4/4 4) (Style)


● **참고** ()
[FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 1 [B] 4 TAP

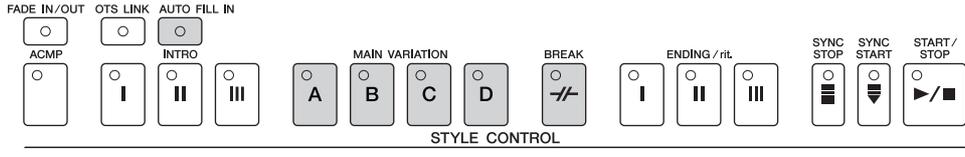

- (Song)
(Style) MAIN [A] - [D]
- (Fill In)
(Style) [AUTO FILL IN ()]
MAIN VARIATION () (A, B, C, D)
(AUTO FILL ()) (A, B, C, D)
[AUTO FILL IN ()]
가
- (Break)
(Style) [BREAK ()]
가

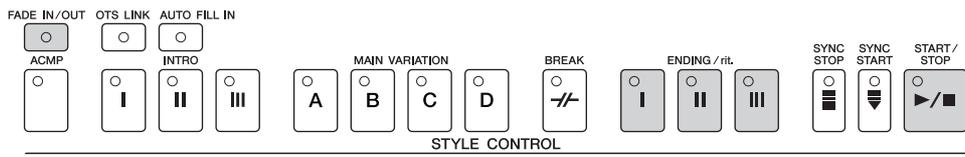

- / (Start/stop)
STYLE CONTROL () [START/STOP (/)] (Style)
 - (Ending)
(Song) (Style) 가
(Style) ENDING/rit. [I] - [III] ENDING/rit.
()
 - (Fade Out)
(Fade Out) (Style)
(Style) [FADE IN/OUT (/)]
- 108

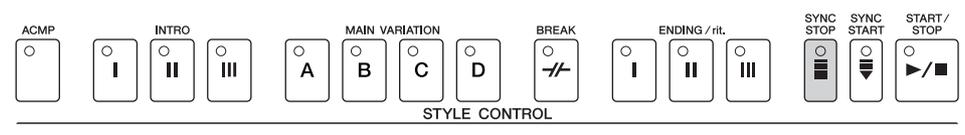

- (Sync Stop)
가 () (Style)
(Style) [SYNC STOP ()]
가
 - (Synchro Stop Window)
109 /
(Intro) (Main) () 가
(Intro) (Style)
- (110)

(INTRO/MAIN/ENDING)


-
-
- (Off) 가

LEFT ()

(Voice) LEFT (Voice)

1 PART ON/OFF (/) [LEFT ()]

2 [LEFT HOLD ()] (Left Hold)

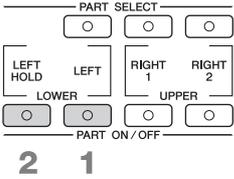


()

(Chord Tutor)

1

[FUNCTION] FINGERING [C] STYLE SETTING/SPLIT POINT/CHORD FINGERING TAB[◀][▶] CHORD

2 [6 ▲ ▼]

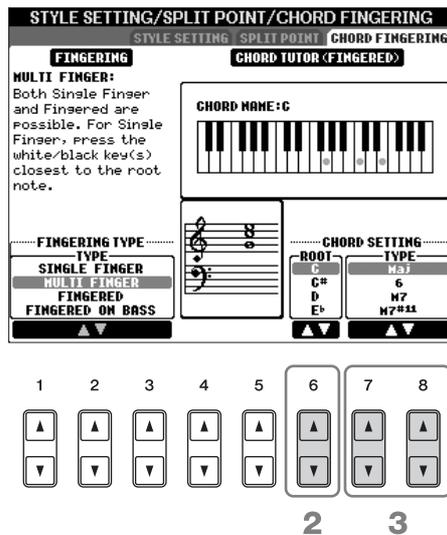

3 [7 ▲ ▼]/[8 ▲ ▼]

참고

(Fingered)


(107)

(One Touch Setting) (Style) 가 (Voice) (Style) (One Touch Setting) (Voice) .

1 (Style) (46) .

2 ONE TOUCH SETTING () [1] - [4]

(Style) (,
ACMP SYNC START
(Style) .

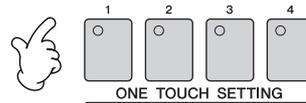

3 (Style) .

참고 (Parameter Lock) (, ,) " " (137) .

- (OTS)
OTS () (Main) (A - D)
. OTS [OTS LINK (OTS)]

참고 OTS 가 (109) .

- OTS
(One Touch Setting)
1 ((Voice), (Style),)


- 2 [MEMORY ()]
- 3 ONE TOUCH SETTING () [1] - [4]

(4)
1 ~ 4

- 4 [F] (YES ()) (Style) (Style)




(Style) OTS .

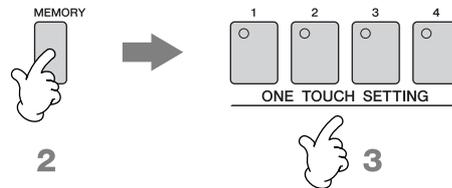


(Multi Pad)

(Multi Pad) 가
 (Multi Pad) (Bank) 4 . PSR-S900/S700
 (Multi Pad Bank)


1 MULTI PAD CONTROL () [SELECT ()] (Multi Pad Bank) (Bank)

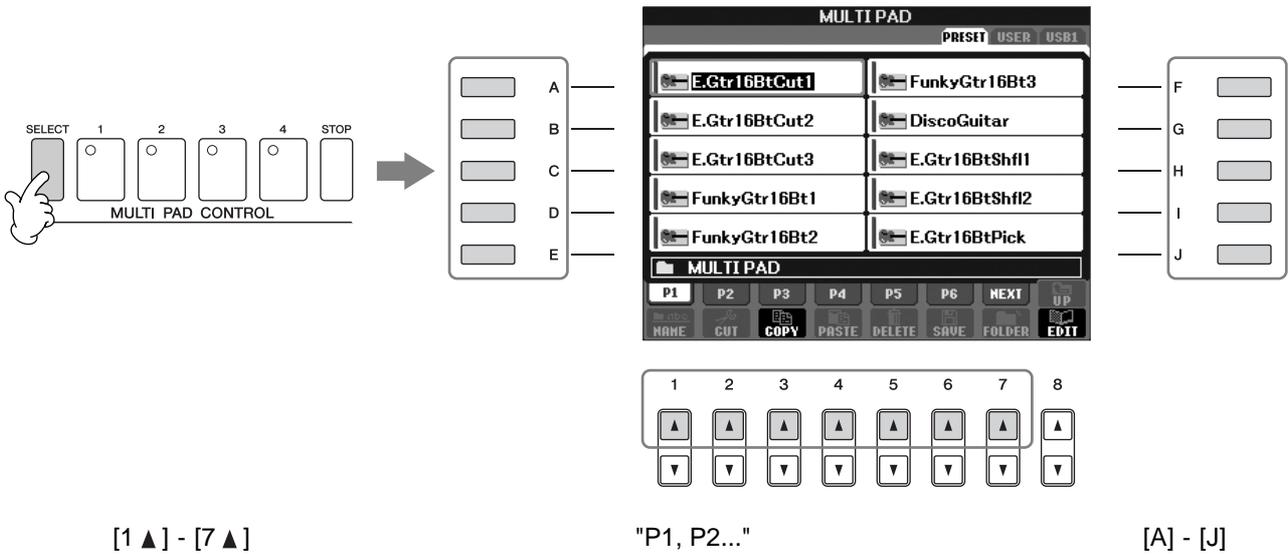

2 MULTI PAD CONTROL () [1] - [4] (Multi Pad)

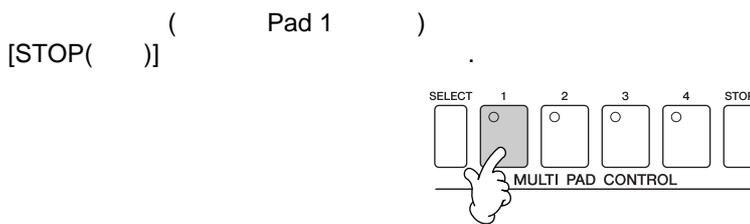


-
- : 가 ()가
- : 가
- (Multi Pad) 가 (Multi Pad) 가 [STOP ()]
- [STOP ()]
- [STOP ()]

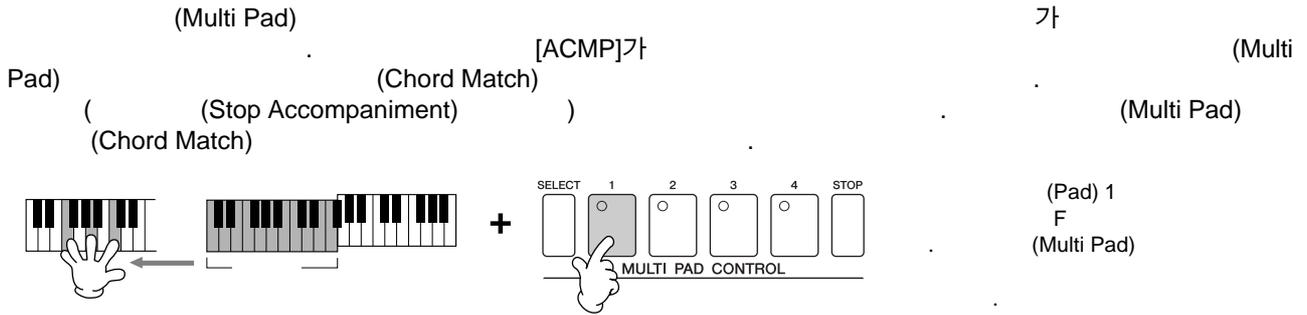

(Voice Effect)

PSR-S900/S700

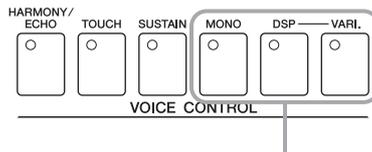

가
(RIGHT 1, 2
LEFT)

- HARMONY/ECHO(/) (Voice) . 54 " "
- TOUCH() . OFF
- SUSTAIN (Sustain) (RIGHT 1/2) (102).
- MONO() (Voice) () . MONO 가 (legato) (Portamento) () (Voice)
 - 참고 (Portamento) () MIXING CONSOLE () (93).
- DSP/DSP VARI. 가
 - DSP 가 DSP()
 - DSP VARI. () DSP (/)
- 참고 DSP () . DSP


(HARMONY/ECHO(/))

(Voice Effects) 가 . / (Harmony/Echo) (194).
 가 89 .

1 [/ (Harmony/Echo)] .

2 [ACMP ()] (30) [SYNC START ()] (47)) RIGHT 1 가

3 (47))

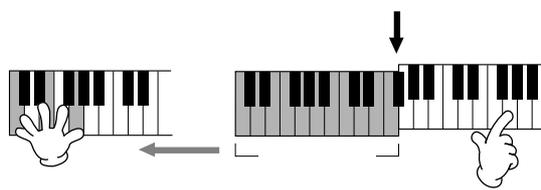


((Stop Accompaniment) : 109) (Harmony)
 가 가 .

(Echo)	/	...
	/ (Harmony/Echo)	(Harmony)
		/
	Live! GrandPiano	Standard Trio
	TuttiAccordion	Country Trio
	Live! Strings	Block
	ChamberStrings	4-way Open
	Harp	Strum
	Cool! PowerLead	RockDuet
	Cool! ElectricGtr	CountryDuet
	Vibraphone	Trill
	Timpani	Tremolo

(Song)

(Music Finder)가 (Style) (Voice) (Music Finder) " " (114)).

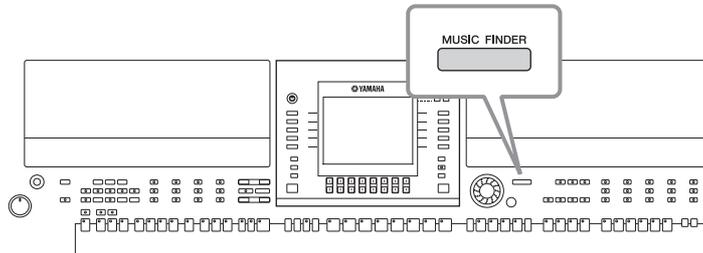

참고 (Music Finder) (Record) (Song)

1 [MUSIC FINDER ()] MUSIC FINDER ()

MUSIC	STYLE	BEAT	TEMPO	
2 Nights In A Big City	40'sBigBand	4/4	90	SORT BY
40th Symphony	PopClassics	4/4	124	MUSIC
60 Second Waltz	VienneseWaltz	3/4	240	SORT ORDER
69 Summers Long	PowerRock	4/4	130	ASCENDING
A Boy From The Country	Bluegrass	2/4	150	ADD TO FAVORITE
A Bridge To Cross Troub-	PowerBallad	4/4	78	TEMPO LOCK
A Bright & Guiding Light	EasyListening	4/4	76	OFF
A Cosy Life In Italy	OrganBallad	4/4	88	MUSIC FINDER
A Day's Difference	70'sTVTheme	4/4	126	NUMBER OF RECORDS
A Divorce In The Country	CountrySwin-	4/4	126	1835
A Feeling Of Love Tonig-	MovieBallad	4/4	68	
A Fire Lighter	Unplugged1	4/4	118	
A Great Way To Spend T-	JazzClub	4/4	72	
A Jolly Good Fellow	6-8March	6/8	112	

1 MUSIC FINDER ()

2 TAB ()

3 [▲ ▼] [▲ ▼]

2 TAB () [◀|▶] ALL ()

ALL () 가

3 4 [2 ▲ ▼]/[3 ▲ ▼]

참고 • DATA ENTRY () [ENTER ()]

(Music Finder) (Song) (114) 가

- MUSIC

참고 [1 ▲ ▼]

- STYLE (Style)

참고 (Style) [4 ▲ ▼]/[5 ▲ ▼] (Style)

- BEAT.....
- TEMPO

4

- 참고
 - (Tempo Lock)
(Tempo Lock) (Style) [I] (TEMPO LOCK ())
 - (Tempo Lock)
(Parameter Lock) (,) " " (137).

(Style)

() (Style) 가 ()

1 (Style) "PRESET ()" / "USER ()"

- 참고
 - (Style) (Repertoire) "PRESET"/"USER" (Style) (Repertoire)
 - USB (Style) "USER ()" (Style) (Repertoire)

2 [7 ▲] (REPertoire ())

- (Style) (Music Finder) "SEARCH 2"
 - "SEARCH 2" 가 가

3 [2 ▲ ▼] - [3 ▲ ▼]


[F] (SORT BY ())

- MUSIC () 가
- STYLE () ... 가
- BEAT () 가
- TEMPO () 가

[G] (SORT ORDER ()) ()

(가)

가 . PSR-S900 MIC ()/LINE IN () 가 . 가

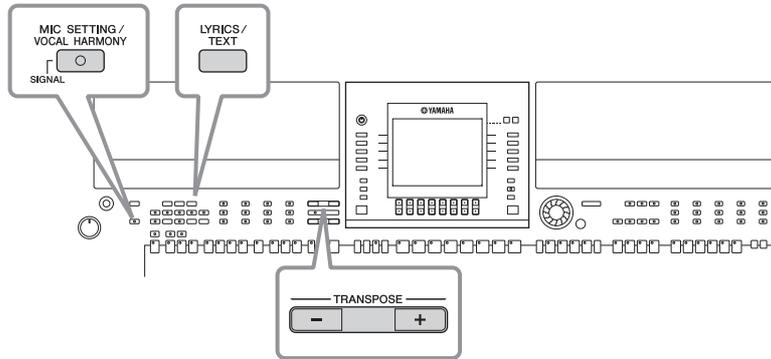


(PSR-S900)

1 가 .

2 [INPUT VOLUME ()]

3 [MIC ()/LINE IN ()]

참고 [MIC ()/LINE IN ()]
INPUT VOLUME ()
[MIC ()/LINE IN ()]

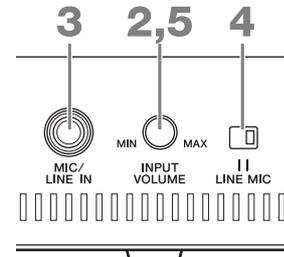

4 [LINE MIC ()] "MIC"

5 (가) [INPUT VOLUME ()]

SIGNAL ()

HARMONY ()
가

가

[MIC SETTING ()]

가

SIGNAL ()

가



1 [INPUT VOLUME ()]

2 [MIC ()/LINE IN ()]

참고 [INPUT VOLUME ()]

가

가 가 (Song)

1 (Song) (36)

2 [LYRICS/TEXT (가 /)] (PSR-S900) / [LYRICS (가)] (PSR-S700) 가

(Text) 가 [1 ▼] (LYRICS (가)) 가 (PSR-S900)

3 SONG () [▶/⏸] (PLAY/PAUSE (/))

가 가 가

4 SONG () [] (STOP ())

- 참고** • 가 가 가 (Song Setting) 가 (Lyrics Language) "

(International)" " (Japanese)" ([FUNCTION] [B] SONG SETTING). (Song)

(166)
- 가 (PSR-S900) 가 [7 ▲ ▼]/[8 ▲ ▼] (BACKGROUND ())
- 가 가 [EXIT ()]
- 가 가 (170)

(PSR-S900)

() 가 ,

1 USB [USB TO DEVICE]

2 [LYRICS/TEXT (가 /)]
가 가 [1 ▼] (TEXT ())

3 [5 ▲ ▼]/[6 ▲ ▼] (TEXT FILE ()) (Text)

4 TAB () [◀][▶] TAB ()

5 [A] - [J]
가 TAB [◀][▶]

참고 (194)

가 TEXT :

LYRICS..... 가 (Lyrics)

CLEAR..... (

).

F (FIXED) 11 pt () -

P (PROPORTIONAL) 16 pt ()

TEXT FILE 가 (Lyrics)

BACK GROUND..... 가 (Lyrics)

(Text)

- 참고** • USER
- (" ")
- 가 BACKGROUND ()

TV 가 / (PSR-S900)
가 VIDEO OUT ()
1 PSR-S900 [VIDEO OUT ()]
)]] TV VIDEO INPUT ()
2 TV/
 (NTSC PAL)
1 [FUNCTION] [J] UTILITY TAB [◀][▶] SCREEN OUT
2 [1▲▼] TV/

가

	▶	34	PSR-S900/S700
	▶		
	▶		
가	▶	60	PSR-S900
(Vocal CueTIME)	▶	146	

- 가 (Song) TRANSPOSE () [+]
- (Song) TRANSPOSE () [-]
- TRANSPOSE () [+][-]

The diagram illustrates the steps to access the Transpose setting. It starts with a hand pressing the TRANSPOSE button on the control panel. This leads to the MAIN menu on the screen, where TRANSPOSE:1 is highlighted. A hand then presses the EXIT button to return to the previous screen.

(PSR-S900)

1 [MIC SETTING ()]/VOCAL HARMONY ()] (Mic Setting)



2 [4▲▼]/[5▲▼]

참고


(Mixing Console)

(95)

가(PSR-S900)

1 가 (Song) (36).
 (Song) 가 가 (Song) (Main)

2 [MIC SETTING/VOCAL HARMONY (MIC /)] (Vocal Harmony)

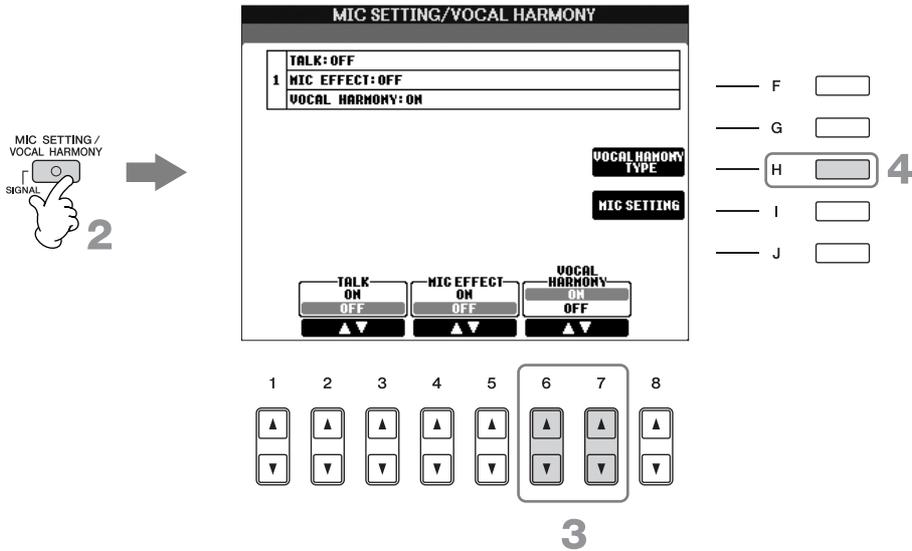


3 [6 ▲ ▼]/[7 ▲ ▼] (Vocal Harmony)

4 [H] (Vocal Harmony)

5 [A] - [J] (Vocal Harmony)

(Vocal Harmony) Yamaha
 (Data List) . (5)

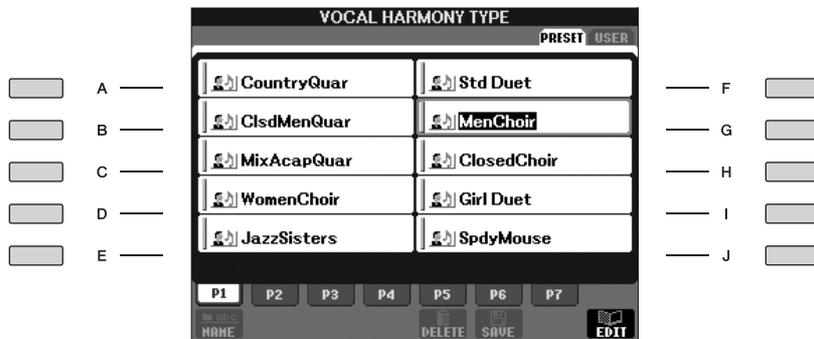

6 [ACMP] (Auto Accompaniment)

7 SONG () [▶/||] (PLAY/PAUSE (/))

(PSR-S900)	
(Song)	
1 [BALANCE ()]	(Volume Balance)
2	[4 ▲ ▼]
(Song)	[1 ▲ ▼]
3 [EXIT ()]	

()	▶	PSR-S900/S700
/TV 가	▶ 62	PSR-S900
	▶ 62	
(Karao-Key)	▶ 146	PSR-S900/S700

(TRANPOSE)

(Song) 가 C (Keyboard Transpose) "0" (Song) 가 F D (Master Transpose) "3" (Song Transpose)

1 [FUNCTION] [D] CONTROLLER TAB [◀][▶] KEYBOARD/PANEL [B] TRANPOSE ASSIGN

2 [4 ▲ ▼]/[5 ▲ ▼]

- **KEYBOARD ()** 가 (Voice) (Style) ()
- **SONG ()** (Song)
- **MASTER ()**

3 TRANPOSE () [-]/[+]

[+][-]

4 [EXIT ()] TRANPOSE ()

/TV 가 (PSR-S900)

가 (59). () TV


1 [FUNCTION] [J] UTILITY TAB [◀] [▶] SCREEN OUT

2 [3 ▲]/[4 ▲] LYRICS/TEXT (가 /) .

(PSR-S900)

가 가 MIC . TALK ()

1 [MIC SETTING/VOCAL HARMONY (MIC /)] MIC SETTING/VOCAL HARMONY (MIC /) .

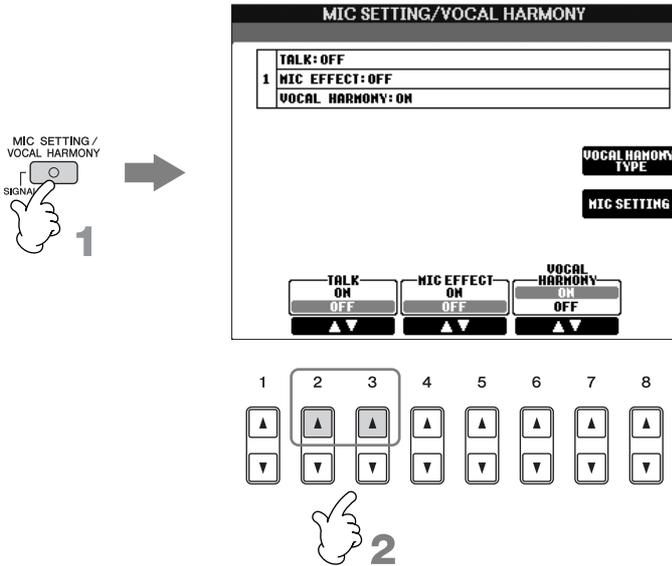


2 [2 ▲]/[3 ▲] (TALK()) .

참고 (Talk) (191) .

가

(USB) (PSR-S900)

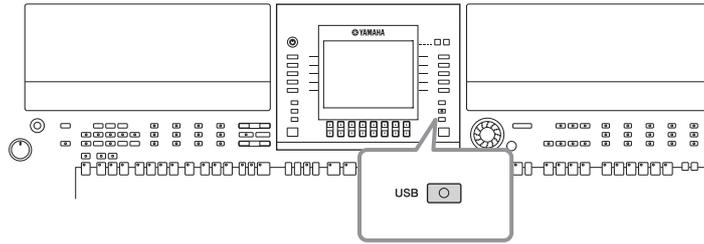

- USB (Song) (44.1 kHz/16) 가
- CD WAV 가
- CD MIDI 201 가
- MIDI 147 가
- **참고** • CD CD-R (가)가 가
- (Keyboard) (Right 1, Right 2, Left), (Song) (Style) ([MIC/LINE IN (/)]) ([MIC/LINE IN]).
- CD , MP3
- **참고** • WAV : 44.1 kHz /16

(Song) 80 USB

1 (Voice) 30 (Voice) 57 . ()


6 / (Style) (48) (Style)

2 USB [USB TO DEVICE]

참고 • USB USB 가

• USB 23 "USB (USB /)"


3 [USB]

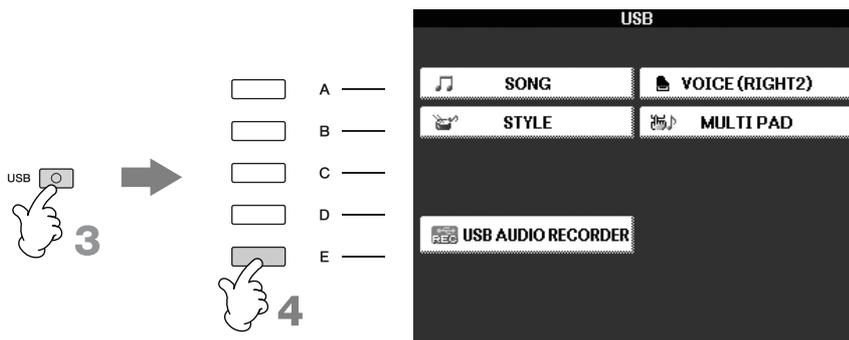

4 [E] (USB AUDIO RECORDER (USB AUDIO RECORDER))

5 [E] (PROPERTY (Property))

USB

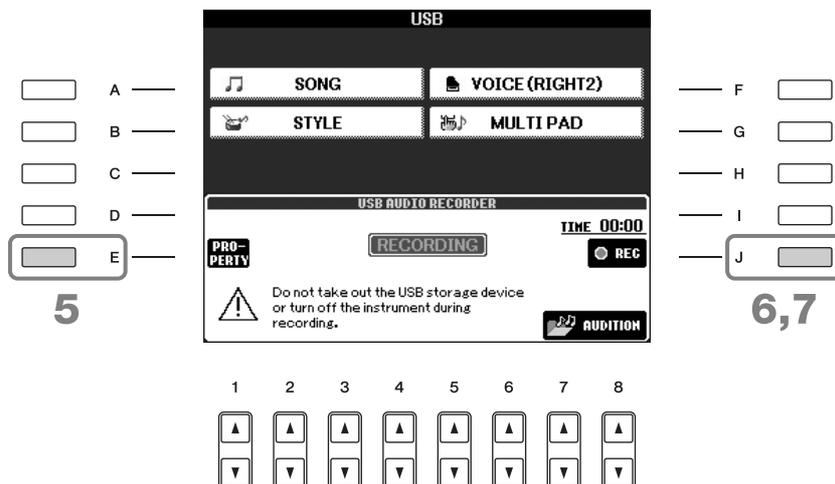

가 PROPERTY ()

- DRIVE NAME () USB (USB 1, USB 2)
- ALL SIZE ()..... USB
- FREE AREA (가)..... USB 가
- POSSIBLE TIME (가)..... 가

[F] (OK ())/[EXIT ()] PROPERTY ()

참고 USB 가 "USB1" USB 가 . USB (USB1 USB2 가)
[EXIT ()] 4 [A]/[B]/[F]/[G]

6 [J] (REC ())

"RECORDING" 가 (PSR-S900),



USB

7 [J] (STOP ())

참고 [EXIT ()] (Recording)

[J] (STOP ())

1 USB AUDIO RECORDER (USB)
 [USB] [E] USB AUDIO RECORDER

2 [7 ▲ ▼]/[8 ▲ ▼] (AUDITION ()) **USB** **(WAV**
)
 1-7 (63)
 72 " / "
 (User) /

3 [A]-[J] [8 ▼] (AUDITION ())
 가 . [G] (CANCEL()) 가 [EXIT()]

USB / / **USB**
 가
 **참고**
 가 (Volume Balance) (41)
 (Mixing Console)(91)

4 " 가 " 4 USB AUDIO RECORDER (USB
) 가 [EXIT ()]

- 1 [FUNCTION] [J] UTILITY TAB [◀][▶] OWNER
- 2 [4 ▲ ▼]/[5 ▲ ▼] (LANGUAGE ())
- 3 [EXIT ()]

UTILITY

CONFIG 1 CONFIG 2 SCREEN OUT MEDIA OWNER SYSTEM RESET

1 OWNER NAME:
LANGUAGE: ENGLISH

BACKUP RESTORE OWNER NAME VERSION

LANGUAGE
ENGLISH
JAPANESE
GERMAN
FRENCH
SPANISH
ITALIAN

1 2 3 4 5 6 7 8

EXIT

2 3

가 ()가

UTILITY

CONFIG 1 CONFIG 2 SCREEN OUT MEDIA OWNER SYSTEM RESET

Are you sure you want to format this device (USB)?
Make sure there is no important data in the disk before formatting; otherwise all data will be deleted.

YES NO

SONG AUTO OPEN
ON OFF

When the media is inserted to the device selected in the device list, the first song in the media will be selected automatically.

[F] (YES ()) (USB) USB

(Direct Access)

1 [DIRECT ACCESS ()]
가

2

(Direct Access)

(Data List)

(Data



List) Yamaha

(5)

(Guide)

[DIRECT ACCESS ()]

[GUIDE ()]

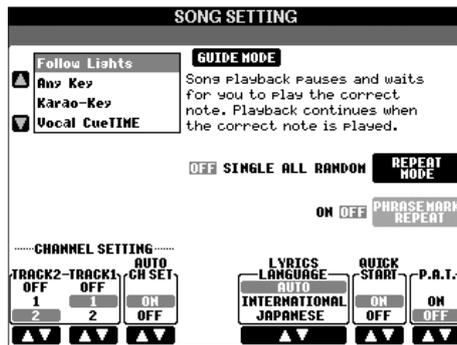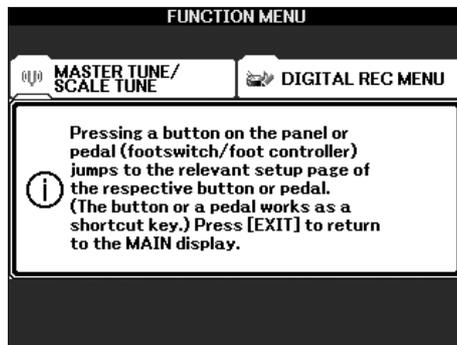

(Main) 가
[EXIT ()] . [DIRECT ACCESS ()] 가

()


가 (Main) (Selection)

가 [EXIT

(Main) 가 [DIRECT ACCESS ()]

기본 조작


(Main) (Voice) (Style) (Main)

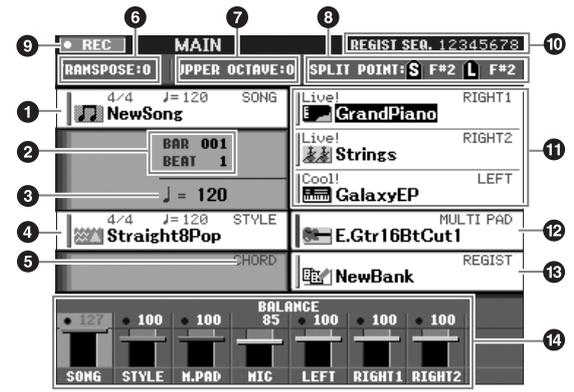

- ① **(Song)**
(Song) 가 "CHORD ()"
() 가
[A] (Song Selection) (36)
- ② **BAR/BEAT((Song) (Style))**
(Style) (Song)
- ③ **(Tempo)**
(Song) (Style)
- ④ **(Style)**
(Style) , [D]
(Style Selection) (46)
- ⑤ [ACMP] On 가
- ⑥ **(Transpose)**
(59)
- ⑦ **(Octave)**
[UPPER OCTAVE ()]
- ⑧ **(Split Point)**
(Split Point) ()
"L" 가 (Split Point)가 "A",
- ⑨ **USB (PSR-S900)**
"REC" 가
- ⑩ **(Registration Sequence)**
(Registration Sequence)가 (138)

- ⑪ **(Voice)**
 - RIGHT 1(가): (84).
 - RIGHT 2(가): (84).
 - LEFT(가): (84).
 - LEFT (Left Hold) ON "H" 가 (50).
 - [F], [G] [H] (31).
 - (Voice Selection)
- ⑫ **(Multi Pad Bank)**
 - (Multi Pad Bank) (132). [I]
 - (Multi Pad Bank Selection) (133)
- ⑬ **(Registration Memory Bank)**
 - (Registration Memory Bank)
 - [J] (Registration Memory Bank Selection)
 - (136).
 - (Freeze) ON "F" 가 (138).
- ⑭ **(Volume Balance)**
 - [1 ▲ ▼] - [8 ▲ ▼]

(Style) (File Selection) 가 (Voice),

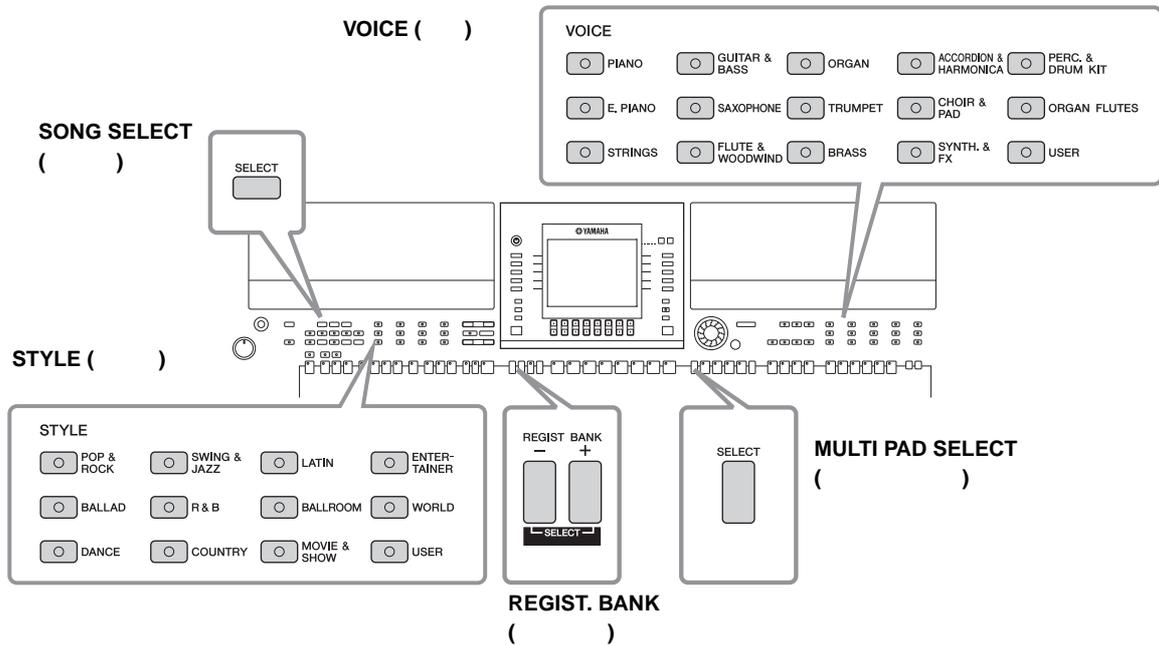

()

()

(PRESET)

()
가

(USER)

가

USB

USB

(USB)

가




USB


USB

"USB"

기본 조작

(Folder)

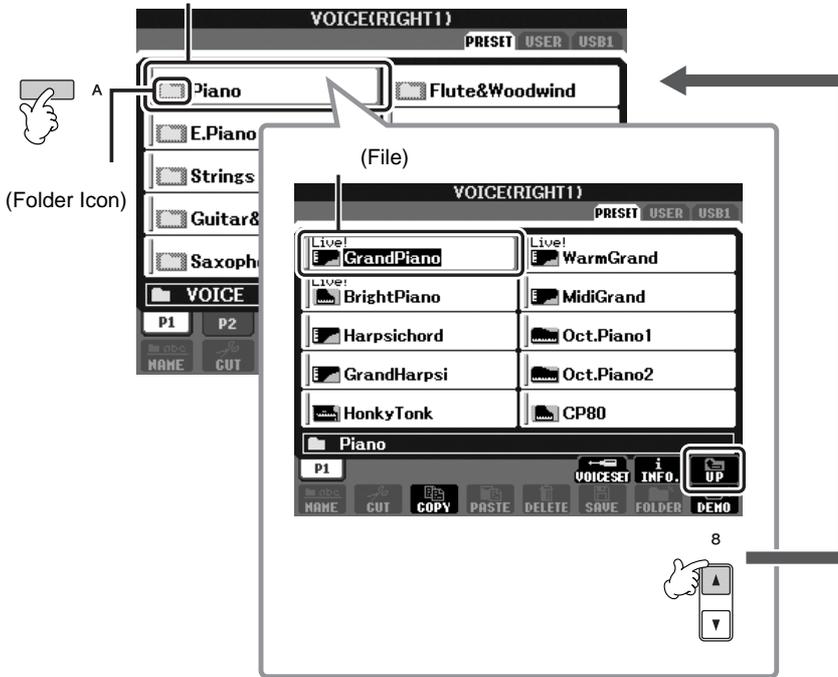

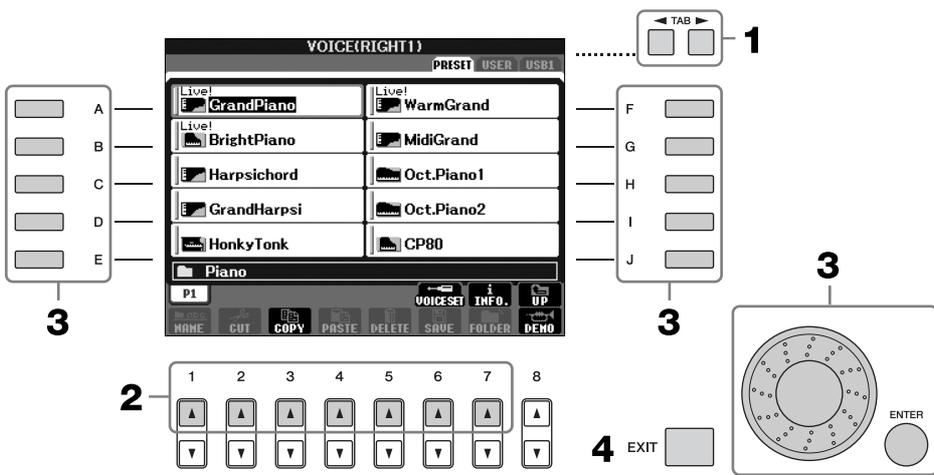

1 TAB () [◀][▶]

2 [1▲] - [7▲]

3 가
 • [A]-[J]
 • DATA ENTRY ()
 [ENTER ()]

4 [EXIT ()]


USB

[USB]

USB


[USB] [A] SONG/[B] STYLE/
 [F] VOICE/[G] MULTI PAD
 [A] - [J]

(Voice/Song/Style) / /
 "P1, P2 ..."
 가 "NEXT
 ()"
 "PREV ()"

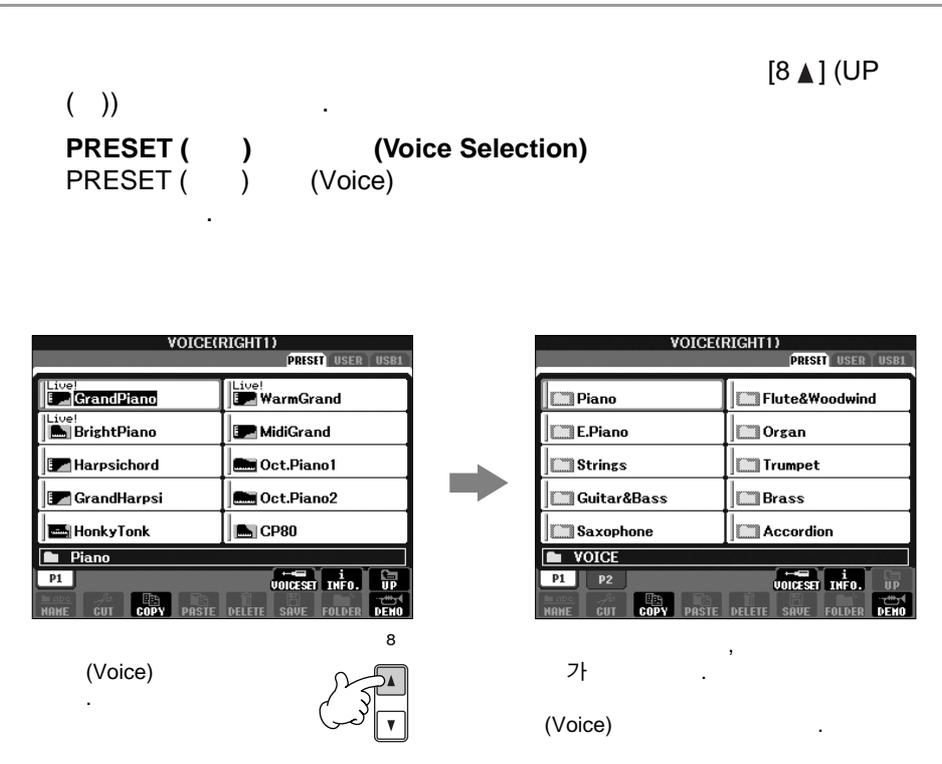

기
문
조
작

- 73
- / () 74
- () 75
- / 75
- / 76
- () 76
- 77
- 77

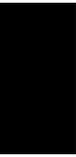

기본 조작

USB1, USB2

USB
 USB / 가

⚠ 가

USB

1 **USB [USB TO DEVICE]**

2

[FUNCTION] [J] UTILITY TAB [◀] [▶] MEDIA

3 **[A]/[B] USB**

4 **[H]** /

UTILITY

CONFIG 1 CONFIG 2 SCREEN OUT **MEDIA** OWNER SYSTEM RESET

DEVICE LIST

⚠ USB 1

Initialize MEDIA. All data will be deleted. **FORMAT**

SONG AUTO OPEN
ON OFF

When the media is inserted to the device selected in the device list, the first song in the media will be selected automatically.

3 A — F 4

B — G

C — H




D — I

E — J

1

SONG CREATOR () VOICE SET ()
 (Song) (Voice) [SAVE ()]
 (File Selection) 가
 (File Selection)

) ()
 1.4MB (PSR-S900)/560KB
 (PSR-S700)
 (Voice), (Style),
 (Song) (Registration)

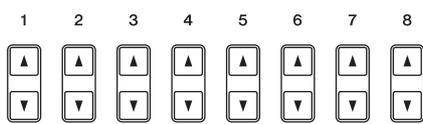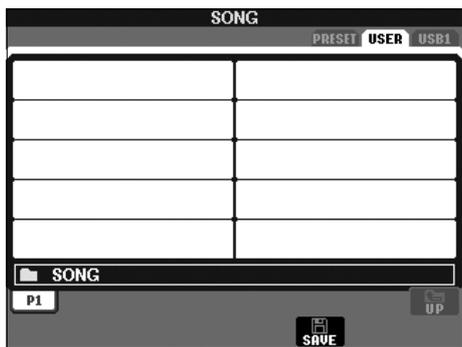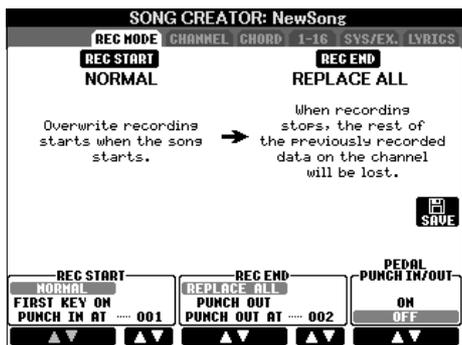

2

TAB () [◀][▶] (USER, USB)

3

[6 ▼] (SAVE ())



4

(77)

5

[8 ▲] (OK ())


[8 ▼] (CANCEL ())

기본 조작

Prot. 1	(User) Orchestra Collection (DOC) , Disklavier Piano Soft (Disk (Preset Song) . USB / /
Prot. 2 Orig	Yamaha (Song) . USER () USB /
Prot. 2 Edit	"Prot. 2 Orig" "Prot. 2 Orig" (Song) . USER () USB /

"Prot. 2 Orig" "Prot. 2 Edit" (Song)
 "Prot. 2 Edit" (Song) "Prot. 2 Orig" (Song)
 (Song) "Prot. 2 Edit" (Song) "Prot. 2 Edit"
 "Prot. 2 Orig" (Song) ()

- 1 / ()
- 2 [3 ▼] (COPY ()) / (Copy)
- 3 / [A] - [J] [A]-[J]
- 4 [6 ▼] (ALL ()) / [6 ▼] (ALL OFF ())
- 5 [7 ▼] (OK ()) / [8 ▼] (CANCEL ()) (Copy)
- 5 TAB () [◀][▶] / (USER (), USB)
- 6 [4 ▼] (PASTE ()) /

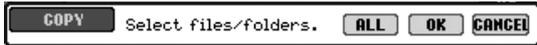

1

2

[2 ▼] (CUT ())
(Cut)



3

[A] - [J]
[A]-[J]

■
[6 ▼] (ALL ())

[6 ▼] (ALL OFF ())

4

[7 ▼] (OK ())

[8 ▼] (CANCEL ())

5

TAB () [◀][▶]

(USER, USB)

6

[4 ▼] (PASTE ())

/

/

1

/ 가

2

[5 ▼] (DELETE ())
(Delete)



3

/

[A] - [J]
[A]-[J]

■
[6 ▼] (ALL ())

/ [6 ▼] (ALL OFF ())

4

[7 ▼] (OK ())
(Delete)

/ [8 ▼] (CANCEL ())

5

YES /
YES ALL /
NO /
CANCEL (Delete)

USB

USB
USB
가
).

(72

- 1 / 가 .
- 2 [1 ▼] (NAME ())
(Rename)

- 3 / [A] - [J] .
- 4 [7 ▼] (OK ()) / [8 ▼] (CANCEL ())
(Rename)
- 5 () (77) .
- 6 [8 ▲] (OK ()) .
- ()
() .
- 1-4 " / " .
- 5 [1 ▼] (ICON ()) ICON () .
- 6 [A] - [J] [3 ▲ ▼] - [5 ▲ ▼]
ICON () 가 .TAB ()
[◀][▶] [8 ▼] (CANCEL ()) .
- 7 [8 ▲] (OK ()) .
- 8 [8 ▲] (OK ()) .


1 (File Selection)

2 [7 ▼] (FOLDER ())



3 ()

(Music Finder) /

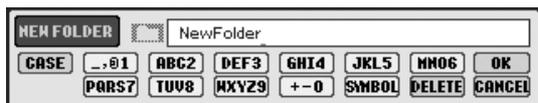

1 [1 ▲]

- (66),

CASE..... (,), (), ()
 case (,), (), ()

- (66),

かな漢 (kana-kan).. 가 , ()
 カナ (kana)가 (), ()
 카 (kana)가 (), ()
 A B C (,), (),
 ()
 ABC (,), (), ()

2 DATA ENTRY ()

3 [2 ▲ ▼] - [6 ▲ ▼] [7 ▲]

가
4



가
가

PRESET ()

USER ()

USER ()

4

S700 730 (PSR-360),

USER ()

250

기본 조작

가 (170), (178)

"CASE"/"case"

\\: * ? " < > |

LAN WEP

(*)

4 [8▲](OK ())

- DATA ENTRY ()
[7▼](DELETE ())
[7▼](DELETE ())
- ("◊" "°") 가 가 [6▼]
- 1 [6▼]
- 2 DATA ENTRY ()
[8▲](OK ())
- "CASE" (: "A B C" (), "ABC")
"case" ()
[2▲▼] - [5▲▼], [6▲] [7▲]
가
- 1
" "
- 2 [2▲▼] - [6▲▼] [7▲]
- 3 [8▲](OK ())
- 1
" "
- 2 [6▼]
- 3 가 () [8▲](OK ())
- " 가 " 가 ()
[1▲]/[ENTER ()] [1▲]/[8▲](OK ())
- " 가 " 가 ()
[1▲]/[ENTER ()]
- DATA ENTRY ()
- " 가 " [7▼](DELETE ())
- [8▼](CANCEL ())
- " 가 " ()
[8▲](OK ())
- [8▼](CANCEL ())

(kanakan 가 가
) [6▼] (

C6 (가) [POWER ()]
2 (System Setup)

182

1 [FUNCTION] [J] UTILITY TAB [◀][▶] SYSTEM RESET
2 [1 ▲ ▼] - [3 ▲ ▼]

⚠ (MIDI SETUP (MIDI), USER EFFECT (), MUSIC FINDER ()) FILES&FOLDERS (/))

SYSTEM SETUP ()	(System Setup) 가 (System Setup) (Data List) (Data List) Yamaha . (5)
MIDI SETUP (MIDI)	(User) MIDI MIDI
USER EFFECT ()	(Mixing Console) EQ (User Effect) (PSR-S900)
MUSIC FINDER ()	(Music Finder) ()
FILES&FOLDERS (/)	(User)
REGIST ()	(Bank) B5 ((가 B)) [POWER ()]

UTILITY
CONFIG 1 CONFIG 2 SCREEN OUT MEDIA OWNER SYSTEM RESET

SYSTEM SETUP FILES
MIDI SETUP FILES
USER EFFECT FILES
MUSIC FINDER FILES

The Factory Reset operation does not reset certain parameters, such as the Language setting and Owner Name. To reset those, load the preset System Setup file.

FACTORY RESET EXECUTE

FACTORY RESET

SYSTEM SETUP
 MIDI SETUP
 USER EFFECT
 MUSIC FINDER
 FILES&FOLDERS
 REGIST

CAUTION!

⚠ All User files and folders are lost when 'FILES&FOLDERS' is selected and Factory Reset is executed.

✓ HARK
▲ ON
▼ OFF

1 2 3 4 5 6 7 8

2 3

3 [4 ▲]

4 [D] (Factory Reset)

기본 조작

File) (Original Setting) (Single)

1

2 [FUNCTION] [J] UTILITY TAB [◀][▶] SYSTEM RESET

3 [F] - [I]

SYSTEM SETUP ()	[FUNCTION] UTILITY (System Setup) 가 (System Setup) (Data List) Yamaha (Data List) (5)
MIDI SETUP (MIDI)	(User) MIDI MIDI
USER EFFECT ()	(Mixing Console) EQ (PSR-S900) (User Effect)
MUSIC FINDER ()	(Music Finder)

4 TAB () [◀][▶] (PRESET)

PRESET ()

" " (79)

5 (73)

6) [A] - [J] (4)

Yamaha USB

가

- 1 * , , ,
- 2 , **, MIDI
- * ("Prot.1/Prot.2")
가 ("Prot.2" 가 USB)
- **
- (Mixing Console) "EFFECT/EQ"
- (Vocal Harmony) (PSR-S900)
- 3 1 2

1,2 3

1	(Song), (Style), (Multi Pad), (Bank)	(Registration Memory)	(Voice Data)
---	--------------------------------------	-----------------------	--------------

- 1 **USB** () /
- 2
:
SONG () [SELECT ()]
:
STYLE ()
:
MULTI PAD CONTROL ()
[SELECT ()]
:
REGIST BANK () [+] [-]
:
VOICE ()
- 3 **TAB ()** [◀][▶] **USER ()**

4 [3 ▼] (COPY ()) / (Copy)

COPY Select files/folders. ALL OK CANCEL

5 [6 ▼] (ALL ()) / [6 ▼] (ALL OFF ())

6 [7 ▼] (OK ()) / (Copy) [8 ▼] (CANCEL ())

7 **TAB ()** [◀][▶] **USB** /

8 [4 ▼] (PASTE ()) /

가
("Prot. 1/Prot.2")
(Song)
"Prot.2" 가
USB
()

2 , , MIDI

- 1 **USB** () /
- 2 [FUNCTION] [J] UTILITY **TAB** [◀][▶] SYSTEM RESET
- 3 [F] - [I]
- 4 **TAB ()** [◀][▶] **USB**
- 5 (73)

기본 조작

3 1 2

1 USB () /

2 [FUNCTION] [J] UTILITY TAB [◀][▶]
OWNER

3 [D] (BACKUP ())
USB 3 [E]
(RESTORE ())

- 참고
- /
- PSR-S900/S700

⚠ (Protected Song) USER ()

.....	30
.....	30
.....	33
.....	33
.....	34
.....	53

(Voice)	
S. Articulation! (PSR-S900)	(Super Articulation) 가 가 (MegaVoices) (가) 가 가 (Voice Selection) [7 ▲]
Mega Voice (가)	가 (Mega Voice) MIDI (가) 가 (Mega Voice) 가 (Mega Voice) (Voice) (Normal Voice) / (Voice) (velocity switching) 가 (Mega Voice) (가) 가 가 (Mega guitar Voice) 가 (Voice) MIDI 가 (Mega Voice) (Voice) 가 가 (Voice) 가 가 MIDI (Voice)
Live!	가
Cool!	
Sweet!	Yamaha
Drums	
SFX	가
Organ Flutes!	(Voice) (Voice Set) 103

가
가 (Mega Voice)
가
(Mega Voice) PSR-
S900/S700 /


() (Voice)

(Left) (Right) 1, (Right) 2,


(Voice) (Right) 2 (Left). : (Right) 1, PART ON/ OFF (/)

가 (Right) 1 (Voice)

BALANCE () (41)

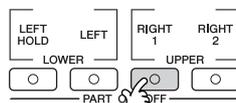


(Right) 1 2 (Voice)

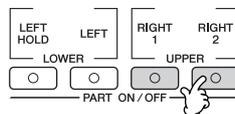

2 (Voice) 85


(Right) 1 (Left) (Voice) (Voice) (Voice)

110

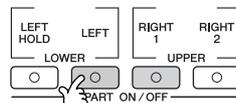

(Voice) 86

3가 (Voice) (Right) 1, 2 (Left)

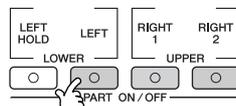

(Right) 2 (Right) 1


((Right) 1 2)

Right 1 2

(Voice)

1 PART ON/OFF (/) [RIGHT 1 (1)]

2 PART ON/OFF (/) [RIGHT 2 (2)]

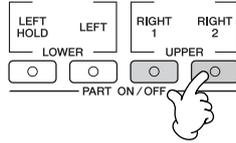


3 (VOICE)

Right 2

(Voice)

VOICE

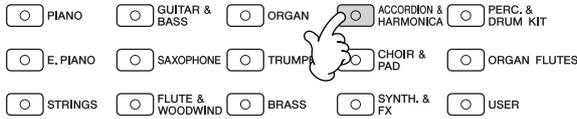

4 TAB () [◀]

PRESET ()

5 [A] - [J]

(Voice)

6

7 PART ON/OFF (/) [RIGHT 2 (2)]

(Voice) (Main)

() .

Right 1 2

(Voice) Right 1

2 (Voice)

(Voice)

(Voice) Right 1

(Voice)

(Right) 2

미세사양, 생선 및 편지

(Right) 2

/ (Right)

2 (Right) 2 가

; 195) .


(Right) 2

((Right) 1 (Left))

(Left) (Voice) (Right) 1

1 PART ON/OFF (/) [RIGHT 1 (1)]

2 PART ON/OFF (/) [LEFT ()]

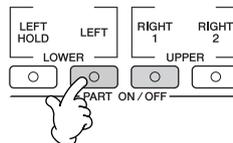

3 VOICE () (Left) (Voice)

VOICE

- PIANO GUITAR & BASS ORGAN ACCORDION & HARMONICA PERC. & DRUM KIT
- E. PIANO SAXOPHONE TRUMPET CHOIR & PAD ORGAN FLUTES
- STRINGS FLUTE & WOODWIND BRASS SYNTH. & FX USER

4 TAB () [◀] (PRESET)

5

A —

B —

C —

D —

E —

VOICE(LEFT)

PRESET USER USB1

Musette	Sweet!
TuttiAccordion	Accordion
SmallAccordion	SoftAccordion
BallroomAcc	Bandoneon
Steirisch	ModernHarp
Accordion	

P1 P2 VOICEMSET INFO. UP
 NAME CUT COPY PASTE DELETE SAVE FOLDER DEMO

4

▶ TAB ◀

F —

G —

H —

I —

J —

5

1 2 3 4 5 6 7 8

▲	▲	▲	▲	▲	▲	▲	▲
▼	▼	▼	▼	▼	▼	▼	▼

5 [A] - [J] (Voice)

6

7 PART ON/OFF (/) [LEFT ()]

(Left) / (Left) (Left) 가 ; 195 (Left)

110) (

(TRANPOSE)

() .

- TRANSPOSE () [-]/[+]
 - MIXING CONSOLE ()
(KBD), (SONG) (MASTER)
- 1 [MIXING CONSOLE] TAB [◀][▶] TUNE
 - 2 [1 ▲ ▼] - [3 ▲ ▼]

PSR-S900/S700

CD

- 1 [FUNCTION] [A] MASTER TUNE/SCALE TUNE TAB [◀][▶]
MASTER TUNE
- 2 [4 ▲ ▼]/[5 ▲ ▼]
4 5 [▲] [▼] 440.0
Hz

(Tune)
(Drum Kit) SFX (Kit
Voice)

Hz (Hertz):

가 1

- 1 [FUNCTION] [A] MASTER TUNE/SCALE TUNE TAB [◀][▶] SCALE
TUNE
- 2 [6 ▲ ▼]/[7 ▲ ▼]
[8 ▲]
- 3 [A]/[B]

(Cent): " " 1/100 (100)

Memory (Registration Memory) SCALE (135)

4

(TUNE)

- 1 [3 ▲ ▼]
- 2 [4 ▲ ▼]/[5 ▲ ▼]
- [2 ▲ ▼]

EQUAL TEMPERAMENT	가 12 가 1/2
PURE MAJOR PURE MINOR	3 (, 3 , 5) 가 (a cappella)
PYTHAGOREAN	가 5 3rd 4th 5th (lead)
MEAN-TONE	3rd (Pythagorean) .16 18
WERCKMEISTER KIRNBERGER	가 (mean-tone) (Pythagorean) Werckmeister Kirnberger 가 (Bach) (Beethoven)
ARABIC	

(Preset Scale) (: C) ()

	C	C#	D	Eb	E	F	F#	G	Ab	A	Bb	B
EQUAL TEMPERAMENT	0	0	0	0	0	0	0	0	0	0	0	0
PURE MAJOR	0	-29.7	3.9	15.6	-14.1	-2.3	-9.4	2.3	-27.3	-15.6	18.0	-11.7
PURE MINOR	0	33.6	3.9	15.6	-14.1	-2.3	31.3	2.3	14.1	-15.6	18.0	-11.7
PYTHAGOREAN	0	14.1	3.9	-6.3	7.8	-2.3	11.7	2.3	15.6	6.3	-3.9	10.2
MEAN-TONE	0	-24.2	-7.0	10.2	-14.1	3.1	-20.3	-3.1	-27.3	-10.2	7.0	-17.2
WERCKMEISTER	0	-10.2	-7.8	-6.3	-10.2	-2.3	-11.7	-3.9	-7.8	-11.7	-3.9	-7.8
KIRNBERGER	0	-10.2	-7.0	-6.3	-14.1	-2.3	-10.2	-3.1	-7.8	-10.2	-3.9	-11.7
ARABIC 1	0	0	-50.0	0	0	0	0	0	0	-50.0	0	0
ARABIC 2	0	0	0	0	-50.0	0	0	0	0	0	0	-50.0

*

/

/ (Harmony/Echo)

1 [Harmony/Echo (/)]

2 [FUNCTION] [H] HARMONY/ECHO

3 [1 ▲ ▼] - [3 ▲ ▼] / (Harmony/Echo)


4 [4 ▲ ▼] - [8 ▲ ▼] (90) / (Harmony/Echo)
/ (Harmony/Echo)

/
/ (Harmony/Echo)

("1+5"




Type)

(Multi Assign


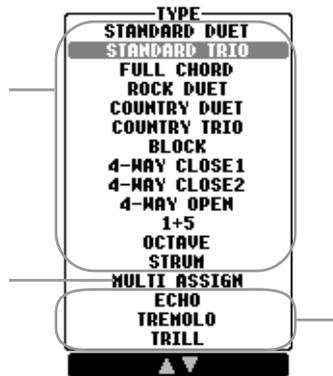


(Harmony Type)

(Harmony)

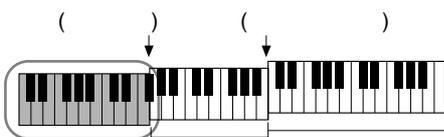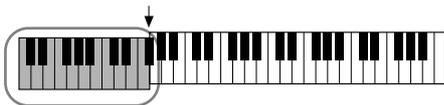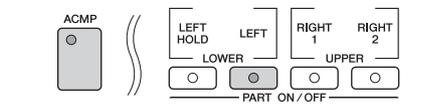

1
2

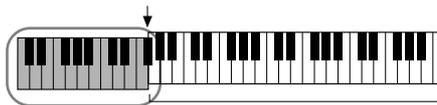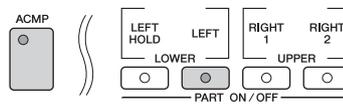

1
2

[ACMP] On
[SYNC START ()]
Off
(Stop Accompaniment)
"Off"


- (Multi Assign)
()
[RIGHT () 1] [RIGHT () 2] (Multi Assign)
(Right) 1 (Right) 2
- (Echo Type) [ACMP] LEFT () /
(, ,)
(Trill) ()
/

VOLUME ()	" (Multi Assign)" / (Harmony/Echo)
SPEED ()	(Type) (Echo), (Tremolo) (Trill) (Trill) (Echo),
ASSIGN ()	" (Multi Assign)" /
CHORD NOTE ONLY ()	"ON" (Harmony Type) ()
TOUCH LIMIT ()	" (Multi Assign)" 가 ()

(MIXING CONSOLE)

(Mixing Console)
 (Song)/ (Style)
 (Voice) ()
 가

1 [MIXING CONSOLE ()] MIXING CONSOLE ()

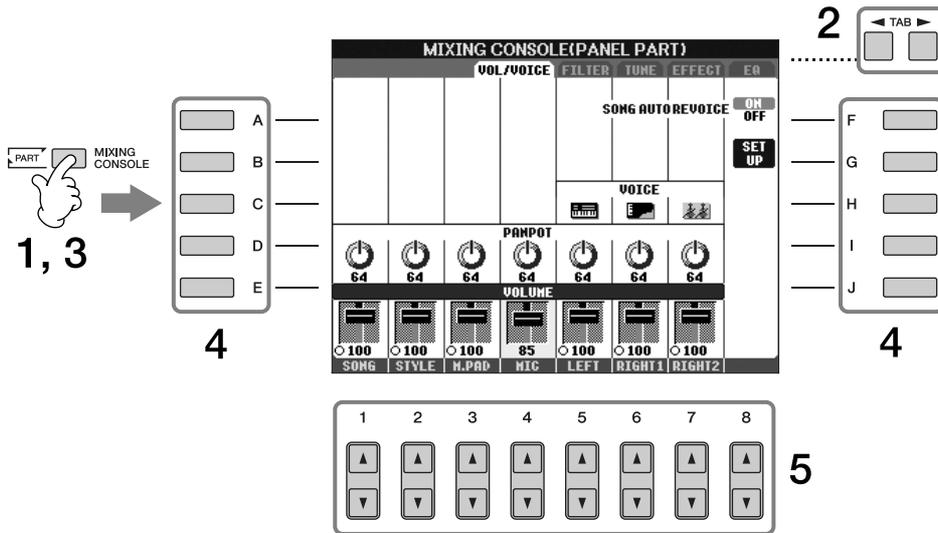

2 TAB () [◀|▶]
 () 가 92 "MIXING CONSOLE"
 ()

3 [MIXING CONSOLE ()]
 MIXING CONSOLE ()
 MIXING CONSOLE ()
 MIXING CONSOLE ()
 PANEL PART () STYLE PART ()
 SONG () CH 1-8 SONG () CH 9-16

4 [A] - [J]

5 [1 ▲ ▼] - [8 ▲ ▼]

4
 [A] - [J]
 [1] - [8]
 DATA ENTRY ()

이 설명서, 생선 및 편지

- 6 MIXING CONSOLE ()**
- **PANEL PART ()**
(Registration Memory) (135)
 - **STYLE PART ()**
(Style)
 - 1 [FUNCTION] [F] DIGITAL REC MENU
 - 2 [B] STYLE CREATOR ()
 - 3 [EXIT ()] RECORD ()
 - 4 [I] (SAVE ())
(Style Selection) (73)
 - **(SONG) CH 1-8/9-16**
(Song) (SET UP ())
 - 166 (Song) SONG CREATOR () CHANNEL ()
SETUP ()

PANEL PART ()
MIXING CONSOLE () PANEL PART ()
(RIGHT 1, RIGHT 2 LEFT), SONG (), STYLE (),
MULTI PAD () MIC
(PSR-S900). [BALANCE ()]

STYLE PART ()
(Style) 8 8
[CHANNEL ON/OFF (/)] STYLE ()

SONG CH () 1-8/9-16
(Song) 16 16
[CHANNEL ON/OFF (/)] (SONG)

MIXING CONSOLE () 가 ()
MIXING CONSOLE () 가 ()
)

VOL/VOICE (/)

- **STYLE PART ()**
RHY2
(Drumkit Voice)
SFX (kit Voice)
- **GM**
10(SONG CH 9-16)
(Drum Kit Voice)

SONG AUTO REVOICE ()	94
VOICE ()	(Voice) (Style) (User Voice) (Organ Flutes Voice) (Song) (User Voice)
PANPOT ()	()
VOLUME ()	

FILTER ()

HARMONIC CONTENT ()	(101)
BRIGHTNESS ()	(101).

TUNE ()

PORTAMENTO TIME ()	(Portamento) (Portamento) "0" 가 가 (Mono) (100).
PITCH BEND RANGE ()	PITCH BEND () ().
OCTAVE ()	
TUNING ()	
TRANSPOSE ()	(KEYBOARD), (SONG) (MASTER)

EFFECT ()

TYPE ()	(95).
REVERB ()	(Reverb)
CHORUS ()	(Chorus)
DSP	DSP

EQ ()

TYPE ()	(97). EQ
EDIT ()	EQ (98).
EQ HIGH (EQ)	/ EQ
EQ LOW (EQ)	/ EQ

미
세
사
용
,
생
성
된
문
자
를
복
사
하
실
수
없
습
니
다

(Song Auto Revoice)

XG-

XG
(Auto Revoice)

XG

PSR-S900/S700

(Live!, Cool!)

1-3 91 " " .2 VOL/
VOICE (/)

4 [G] (SETUP ()) AUTO REVOICE SETUP ()

5 [1 ▲ ▼] - [3 ▲ ▼] (Voice)

VOICE NAME	REVOICE TO	
GRAND PIANO	LIVE! GRAND PNO	ALL REVOICE
BRIGHT PIANO	LIVE! BRITE PNO	
EL.PIANO 1	COOL! E.PIANO	
EL.PIANO 2	COOL! SPRKLE STCK	
DRAMBAR ORGAN	NO REVOICE	
ROCK ORGAN	NO REVOICE	
HARMONICA	NO REVOICE	
STEEL GUITAR	LIVE! STEEL GTR	BASIC REVOICE
JAZZ GUITAR	COOL! JAZZ GTR	
CLEAN GUITAR	COOL! CLEAN GTR	ALL NO REVOICE

REVOICE TO:
LIVE! GRAND PNO
LIVE! HARM GRAND
NO REVOICE

OK CANCEL

5 6 7

6 [4 ▲ ▼] - [6 ▲ ▼] 5 XG
(Voice) (Revoice)
[F]/[I]/[J] (Revoice)

ALL REVOICE: 가 XG (Voice) PSR-S900/
S700 (Voice)

BASIC REVOICE: (Voice)


ALL NO REVOICE: (Voice) XG (Voice)

7 [8 ▲] (OK ()) (Revoice)
(Revoice) [8 ▼] (CANCEL ())


8 VOL/VOICE (/) [F] SONG AUTO
REVOICE () ON

1-3 91 " " .2 EFFECT

4 [F] (TYPE ()) (Effect Type)

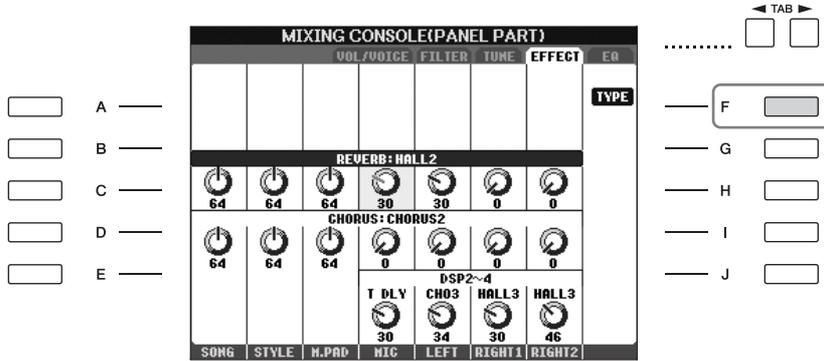

5 [1 ▲ ▼]/[2 ▲ ▼] BLOCK ()

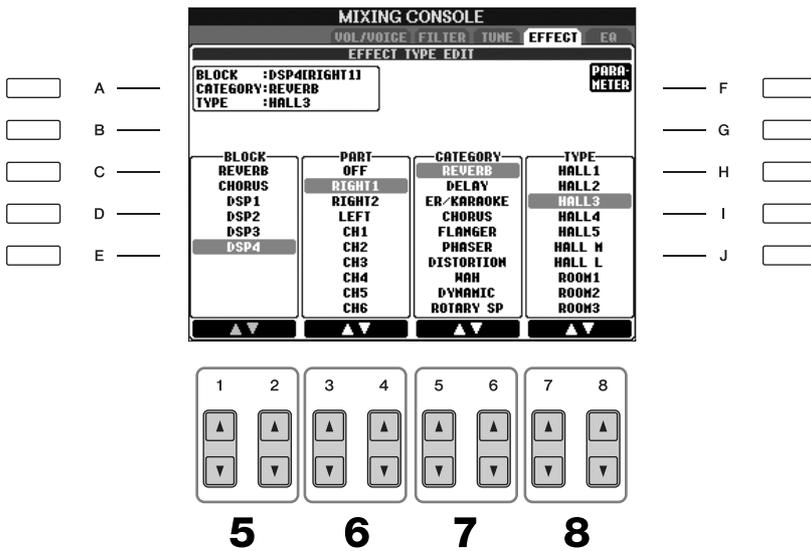

DSP: (DSP

	가	
REVERB ()		
CHORUS ()		" 가 "
DSP1	STYLE PART SONG CHANNEL 1 - 16	(Reverb) (Chorus) DSP 가 가
DSP2 DSP3 DSP4	RIGHT 1, RIGHT 2, LEFT, SONG CHANNEL 1-16 (PSR-S900) *	DSP () * DSP4

6 [3 ▲ ▼]/[4 ▲ ▼]

이 책 사용, 생선 및 편지

7 [5 ▲ ▼]/[6 ▲ ▼] CATEGORY ()

8 [7 ▲ ▼]/[8 ▲ ▼] TYPE ()

9 [F] (PARAMETER ())

BLOCK	PART	CATEGORY	TYPE
REVERB	OFF	REVERB	HALL1
CHORUS	RIGHT1	DELAY	HALL2
DSP1	RIGHT2	ER/KARAOKE	HALL3
DSP2	LEFT	CHORUS	HALL4
DSP3	CH1	FLANGER	HALL5
DSP4	CH2	PHASER	HALL M
	CH3	DISTORTION	HALL L
	CH4	MAN	ROOM1
	CH5	DYNAMIC	ROOM2
	CH6	ROTARY SP	ROOM3

10 5 DSP 2-4 :

[E] [B]

[1 ▲ ▼] - [3 ▲ ▼]

PARAMETER	VALUE
REVERB TIME	2.8s
DIFFUSION	10
INITIAL DELAY	28.4ms
HPF CUTOFF	63Hz
LPF CUTOFF	7.0kHz

11 12

11 [4 ▲ ▼]/[5 ▲ ▼] (Effect)

12 [6 ▲ ▼]/[7 ▲ ▼] 5 REVERB (), CHORUS () DSP1

[8 ▲ ▼] (Effect Return Level)

13 [I] (SAVE ())

EQ

■ EQ

5 [F] (EDIT ()) MASTER EQ EDIT (EQ)

6 [A]/[B]

EQ

7 [3 ▲ ▼] - [7 ▲ ▼]
[8 ▲ ▼] 5 5

8 7 Q() FREQ()
• (" (Shape)" "Q")
[1 ▲ ▼] .Q
• FREQ () FREQ ()
[2 ▲ ▼]


9 [H] [I] (STORE () 1 2) EQ
(73 EQ). EQ
2 EQ
6

PSR-S900/S700 (Voice)
 (Voice) (Voice Set)가
 (Voice) (User Voice) USER
 ()/(USB) ORGAN
 FLUTES () (Voice) (Voice)





ORGAN FLUTES()
 (Voice)
 ORGAN FLUTES (Voice)
 ORGAN FLUTES (Voice)
 ORGAN FLUTES (Voice)
 103

1 () (Organ Flutes Voice))
 (31)

2 [6 ▲] (VOICE SET ()) VOICE SET ()

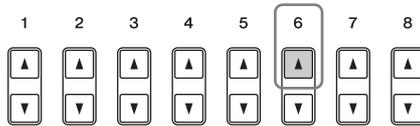

3 TAB () [◀|▶]
) 가 "VOICE SET ()
) 가 " 100

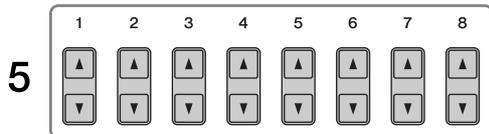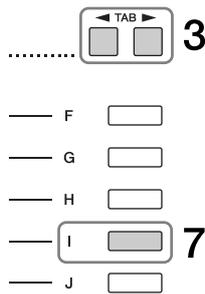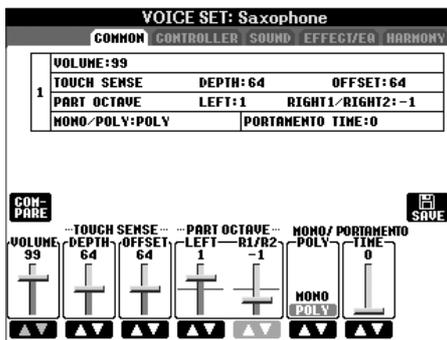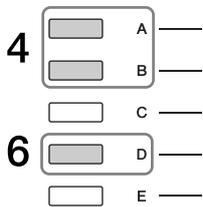

4 [A]/[B] () (Voice)

5 [1 ▲ ▼] - [8 ▲ ▼] (Voice)


⚠ (Voice)
 (Voice)
 (User Voice)

미리 사용, 선택 및 편집

(Voice)


TOUCH SENSE DEPTH
()

VelDepth
(64)

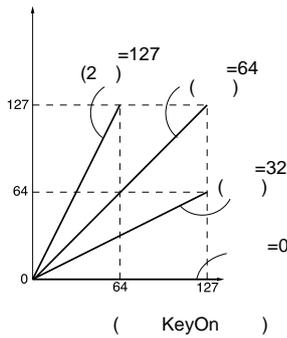

TOUCH SENSE OFFSET
()

VelOffset
(64)

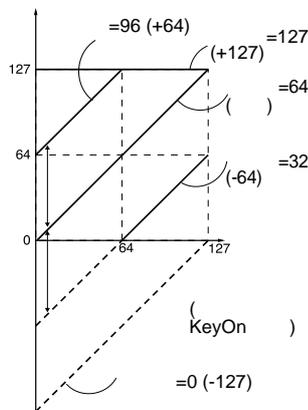

6 [D] (COMPARE ())
(Voice)

7 [I] (SAVE ()) (Voice)
(73)

VOICE SET () 가 (Voice Set) 5
99 " " 3 가

(Voice Set) (Voice) (105)

COMMON ()

VOLUME ()	(Voice)
TOUCH SENSE ()	() DEPTH () () OFFSET () 가
PART OCTAVE ()	(Voice) R1/R2 (Voice) RIGHT 1-2 (Voice) LEFT () LEFT ()
MONO/POLY (/)	(Voice) VOICE CONTROL () "MONO ()" () (53)
PORTAMENTO TIME ()	(Voice) "MONO ()" : (Portamento Time) [참고]



CONTROLLER ()
MODULATION ()

() MODULATION

FILTER ()	(Filter Cutoff Frequency) 101
AMPLITUDE ()	()
LFO PMOD	
LFO FMOD	(Filter) (Wah)
LFO AMOD	


SOUND ()
 ● FILTER ()

(Filter)
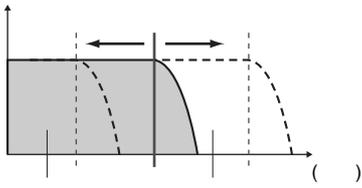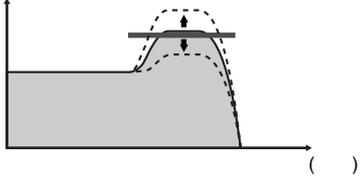
<p>BRIGHTNESS ()</p>	<p>가 ()</p> 
<p>HARMONIC CONTENT ()</p>	<p>BRIGHTNESS () () 가</p> 


● EG
 EG ()

<p>ATTACK ()</p>	<p>가</p>
<p>DECAY ()</p>	<p>가 (가)</p>
<p>RELEASE ()</p>	<p>가</p>

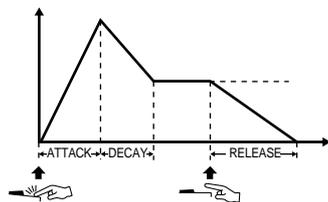

미리 사용, 생선 및 편지

● VIBRATO ()

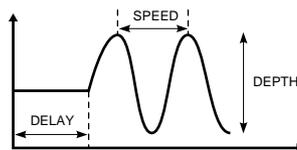

DEPTH ()	(Vibrato) 가
SPEED ()	(Vibrato)
DELAY ()	(Vibrato) 가 가

EFFECT/EQ (/EQ)

1. REVERB DEPTH/CHORUS DEPTH/DSP DEPTH (/ /DSP)

REVERB DEPTH ()	(95)
CHORUS DEPTH ()	(95)
DSP DEPTH (DSP)	DSP(95) DSP DSP
DSP ON/OFF (DSP /)	DSP VOICE CONTROL () "DSP" (53).
PANEL SUSTAIN ()	VOICE CONTROL () [SUSTAIN ()] (53).

2. DSP

DSP TYPE (DSP)	DSP
VARIATION ()	DSP 2가 VARIATION () / ON/OFF (/) (Voice) (DSP) VARIATION ON () DSP (Voice) VALUE () VOICE CONTROL () "DSP VARI." (53) [DSP]
	PARAMETER () VALUE () DSP

3. EQ

EQ LOW/HIGH (EQ /)	(Low) (High) EQ (Gain) (Frequency)
---------------------	---------------------------------------

HARMONY ()

SELECT () [RIGHT ()]1 2 PART	2 89 " / (Harmony/Echo) "
--------------------------------	---------------------------

PSR-S900/S700 [ORGAN FLUTES ()] (Voice) (Voice Set)


1 (Organ Flutes Voice) (31)

2 ORGAN FLUTES () (Voice Selection)
 [6 ▲] (FOOTAGE ()) VOICE SET ()
 [ORGAN FLUTES ()]



3 TAB () [◀▶] 가 104 "VOICE SET ()"
 [ORGAN FLUTES ()] 가 "

(EFFECT/EQ (/EQ)

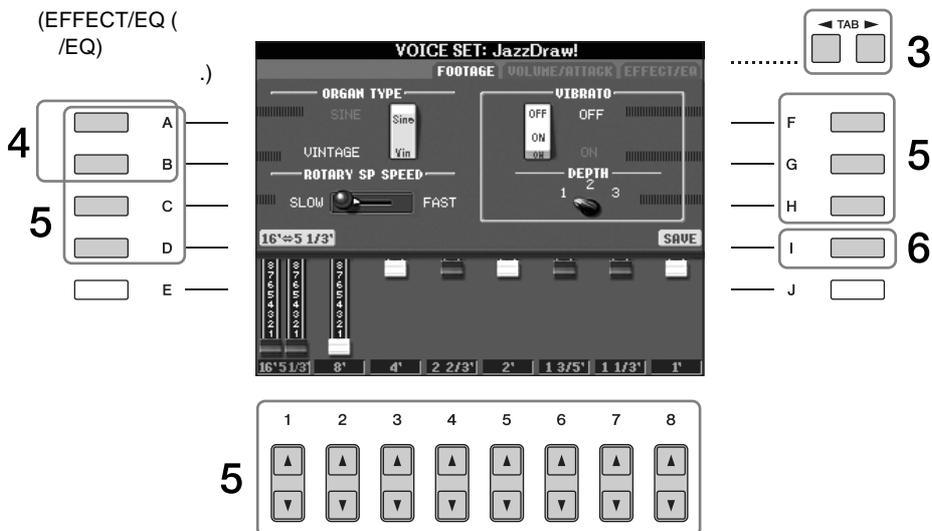

4 EFFECT/EQ (/EQ) [A]/[B]



(Voice)

(Voice)

(User Voice)

5 [A] - [D], [F] - [H] [1 ▲ ▼] - [8 ▲ ▼] (Voice)

6 [I] (SAVE ()) ORGAN FLUTE ()
 (Voice) (73).

VOICE SET () [ORGAN FLUTES ()]
 가
 " " 3 가
 (Organ Flute) 3가
 (Voice) (105). (Voice Set)

FOOTAGE, VOLUME/ATTACK()

ORGAN TYPE ()	(Vintage). (Sine)
ROTARY SP SPEED ()	(Organ Flute) 가 (102 "EFFECT/EQ (/EQ)" DSP TYPE (DSP) (Voice Effect) DSP (102)가 (Voice Effect) VARIATION ON/OFF (/)
VIBRATO ON/OFF (/)	ON OFF (Organ Flutes Voice)
VIBRATO DEPTH ()	(Vibrato) 3가 : 1 (), 2 () 3 ().

FOOTAGE ()

16' 5 1/3'	[D] [1 ▲ ▼] (16' 5 1/3')가
16' - 1'	가 16' 가 1' 가

(Footage):
 (footage)"

()

VOLUME/ATTACK (/)

VOL ()	(Organ Flute) 가
RESP ()	FOOTAGE () (101) (swell) 가
VIBRATO SPEED ()	(Vibrato Depth) / (Vibrato On/Off)
MODE ()	MODE : FIRST EACH. FIRST EACH
4', 2 2/3', 2'	ORGAN FLUTE () . 4', 2-2/3' 2' 가 가
LENG ()	가

EFFECT/EQ (/EQ)

102 VOICE SET () "EFFECT/EQ (/EQ)"

() EQ VOICE SET ()
(Voice)

(Voice)

(Voice) HARMONY/ECHO (/) (Harmony) OFF

()

1 [FUNCTION] [E] REGIST.SEQUENCE/FREEZE/VOICE SET TAB
[◀][▶] VOICE SET

2 [A]/[B]

3 [4▲▼] - [7▲▼] (ON)
OFF /

List) (Data List) Yamaha (Data
(5)

"Mary Had a Little Lamb"	46
.....	48
()	50
()	51

(Style)	(Preset Style)
Pro ()	(Style)
Session ()	(Style) (Main)
	" " (Style)
	3 " " 7th 가 가 (on-bass)

- 7가 (Style)
- 1** [FUNCTION] FINGERING [C] STYLE SETTING/SPLIT POINT/CHORD TAB [◀|▶] CHORD FINGERING
- 2** [1 ▲ ▼] - [3 ▲ ▼]

STYLE SETTING/SPLIT POINT/CHORD FINGERING

STYLE SETTING SPLIT POINT CHORD FINGERING

FINGERING CHORD TUTOR (FINGERED)

MULTI FINGER:
Both Single Finger and Fingered are possible. For Single Finger, press the white/black key(s) closest to the root note.

FINGERING TYPE

TYPE


SINGLE FINGER

MULTI FINGER

FINGERED

FINGERED ON BASS

CHORD NAME: C

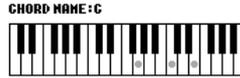

CHORD SETTING

ROOT TYPE

C# 6

D M7

Eb M7#11

1

2

3

4

5

6

7

8

SINGLE FINGER ()	7th, 7th (Style)    
MULTI FINGER ()	(Single Finger) (Fingered)
FINGERED ()	가 (Style) (Chord) (Fingered) Yamaha (5) (Data List) (Chord Tutor) (50).
FINGERED ON BASS ()	(Fingered) 가 (Chord) " (Fingered) "
FULL KEYBOARD ()	(Fingered)
AI FINGERED ()	() 3 (Fingered)
AI FULL KEYBOARD ()	(Style) (AI Full Keyboard) () 3 (Full Keyboard) . 9th, 11th 13th (Style)

AI:

- (Style) 가
- (Style)
- (Style)
- 1 (Style) (46).
- 2 [ACMP] (Auto Accompaniment)
- 3 STYLE CONTROL () [START/STOP (/)]

(Sync Start)
 ([SYNC START ()])

4 STYLE CONTROL () [START/STOP (/)]

(Style) RHY1 (1) - PHR2 (2) 8 /
 가 (Style)

1 [CHANNEL ON/OFF (/)] CHANNEL ON/OFF
 (/)
 STYLE () [CHANNEL ON/OFF (/)]



2 [1 ▼] - [8 ▼]

SOLO ()

((Style))
 [ACMP] (109), (Stop Accompaniment),
 [SYNC START ()] (Style)
 FINGER ()가 (107), MULTI

(48, 49)

1 [FUNCTION] [J] UTILITY TAB[◀][▶] CONFIG 1 [A] FADE IN/OUT/HOLD TIME

2 [3 ▲ ▼] - [5 ▲ ▼]

FADE IN TIME ()	
FADE OUT TIME ()	
FADE OUT HOLD TIME ()	0


PSR-S900/S700
(Style)

1

[FUNCTION] [C] STYLE SETTING/SPLIT POINT/CHORD
FINGERING TAB[◀][▶] STYLE SETTING

2

[1 ▲ ▼] - [8 ▲ ▼]

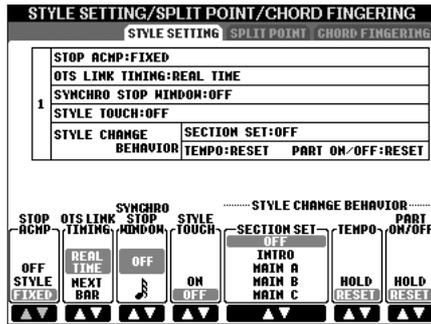

- **(Stop Accompaniment)**
[ACMP] [SYNC START ()]가 (Style)

" (Stop Accompaniment) "
/
가 (Stop Accompaniment)

OFF () 가
STYLE () (Style)
FIXED () (Voice) (Style)

(Song)



"STYLE ()"
가 "OFF ()"
"FIXED ()"

- **OTS**
OTS (Link) (51). MAIN
VARIATION () [A] - [D] (One Touch
Setting) . ([OTS LINK (OTS)])

(Real Time).....MAIN VARIATION ()
(One Touch Setting)
(Next Bar)..... MAIN VARIATION ()
(One Touch Setting)

- (Synchro Stop)
[SYNC STOP ()]
"OFF ()"
(Synchro Stop)
(Style)
(Style)
(Synchro Stop)

- (Style) "ON"
(Style)

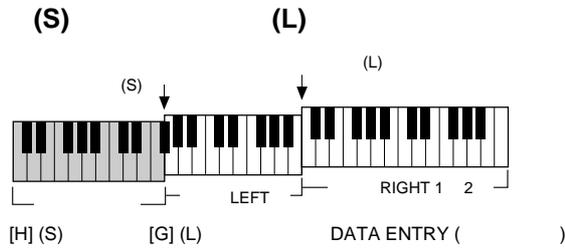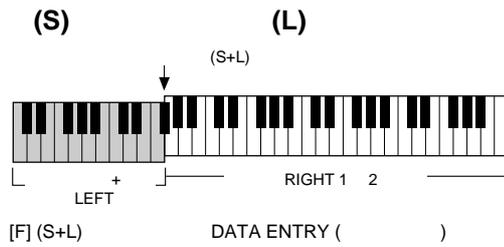

(Split Point) (L) (Split Point) (S) (Split Point) (S) (Split Point) (L)

(Split Point)

[1 ▲ ▼] - [4 ▲ ▼] STYLE ()
 (Voice)
 (Split Point)
 LEFT () (Voice)
 (Split Point)

CONSOLE)

(MIXING

(Style)
 "MIXING CONSOLE () 가 (. (92))"
 91 " (MIXING CONSOLE)" 3
 "STYLE PART ()"

(Music Finder)(55)
 (Voice), (Style))

(Music Finder) (Search)
 FAVORITE ()

- 1 [MUSIC FINDER ()] MUSIC FINDER ()
- 2 TAB () [◀][▶] ALL () (Record)가

자동 반주 스타일 사용, 생성 및 편집


/ /
 (Music/Keyword/Style)
 [F]/[G]/[H] (CLEAR
 ())

3 [6 ▲] (SEARCH ()) 1) (Search)

MUSIC FINDER			
ALL FAVORITE SEARCH1 SEARCH2			
MUSIC	STYLE	BEAT	TEMPO
2 Nights In A Big City	40'sBigBand	4/4	90
40th Symphony	PopClassics	4/4	124
60 Second Waltz	VienneseWaltz	3/4	240
69 Summers Long	PowerRock	4/4	130
A Boy From The Country	Bluegrass	2/4	150
A Bridge To Cross Troub-	PowerBallad	4/4	78
A Bright & Guiding Light	EasyListening	4/4	76
A Cosy Life In Italy	OrganBallad	4/4	88
A Day's Difference	70'sTVTheme	4/4	126
A Feeling Of Love Tonig-	MovieBallad	4/4	68
A Fire Lighter	Unplugged1	4/4	118
A Misty Ballad	CoolJazzBallad	4/4	70
A Nickel In The Nickelod-	Disieland	4/4	214
A Night In A Wonderful L-	6-8Orchestral	6/8	72

SORT BY MUSIC
 SORT ORDER ASCENDING
 ADD TO FAVORITE
 TEMPO LOCK OFF
 MUSIC FINDER+ NUMBER OF RECORDS 1451

MUSIC STYLE SEARCH 1/2 FILES RECORD EDIT

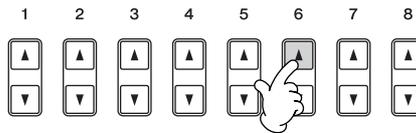

4

MUSIC FINDER SEARCH 1

MUSIC: [] CLEAR

KEYWORD: [] CLEAR

STYLE: [] CLEAR

BEAT: ANY 2/4 3/4 4/4 6/8 OTHER

SEARCH AREA: ALL FAVORITE SEARCH1 SEARCH2

TEMPO: FROM ~ TO
5 ~ 500

GENRE: ANY
All Time Hits
Ballad

START SEARCH CANCEL

(MUSIC)

1 [A] (MUSIC ())/[B](KEYWORD ())

2 , (77).

(Style)

1 [C] (STYLE ()) (Style)

2 [A] - [J] (Style)

3 [EXIT ()]

가

/ / (Style)

BEAT ().....[D] () . ANY () ()

SEARCH AREA ().....[E] ()

TEMPO ().....[1 ▲ ▼]/[2 ▲ ▼] (TEMPO ())

GENRE ().....[5 ▲ ▼]/[6 ▲ ▼] (GENRE ())

5 [8 ▲] (START SEARCH ()) 가
 (Search) 1
 [8 ▼] (CANCEL ())

(Music Finder)
 [6 ▼] (SEARCH () 2) SEARCH ()

()
 (Repertoire)
 가 56

(Music Finder)
 " " 가
 (Style)

1 (Music Finder)

2 [H] (ADD TO FAVORITE (가))
 FAVORITE () 가

MUSIC FINDER			
ALL FAVORITE SEARCH 1 SEARCH 2			
MUSIC	STYLE	BEAT	TEMPO
2 Nights In A Big City	40'sBigBand	4/4	90
40th Symphony	PopClassics	4/4	124
60 Second Waltz	VienneseWaltz	3/4	240
69 Summers Long	PowerRock	4/4	130
A Boy From The Country	Bluegrass	2/4	150
A Bridge To Cross Troub~	PowerBallad	4/4	78
A Bright & Guiding Light	EasyListening	4/4	76
A Cosy Life In Italy	OrganBallad	4/4	88
A Day's Difference	70'sTVTheme	4/4	126
A Feeling Of Love Tonig~	MovieBallad	4/4	68
A Fire Lighter	Unplugged1	4/4	118
A Misty Ballad	CoolJazzBallad	4/4	70
A Nickel In The Nickelod~	Dixieland	4/4	214
A Night In A Wonderful L~	6-8Orchestral	6/8	72

A

B

C

D

E

— F

— G

— H

— I

— J

3 TAB () [◀][▶] 가 가 FAVORITE ()

FAVORITE ()

1 FAVORITE ()


2 [H] (DELETE FROM FAVORITE ())



5). (114

1 (Music Finder)

2 [8 ▲ ▼] (RECORD EDIT ()) (Edit)

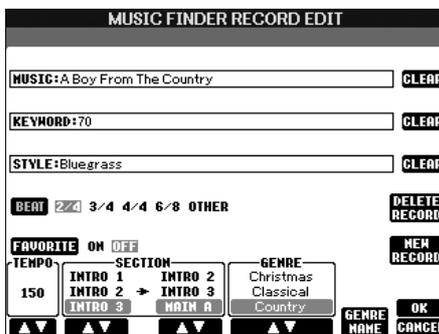

3
 • / / (Style)
 (Search) (112)

• [1 ▲ ▼] (TEMPO ())
 • (/ / (Intro/Main/Ending))
 [2 ▲ ▼]/[4 ▲ ▼] 가 (Style) (Intro)

(Beat)
 (Music Finder)

• [5 ▲ ▼]/[6 ▲ ▼] (GENRE ())
 [7 ▲ ▼] (GENRE NAME ())
 . (77)

(Style)
 (Beat)

• [I] (DELETE RECORD ())

• [8 ▼] (CANCEL ())

4 FAVORITE () [E]
 (FAVORITE ()) FAVORITE ()

5
 • [J] (NEW RECORD ()) ALL ()
 가 4 FAVORITE ()
 ALL () FAVORITE ()

2500 (PSR-S900)/
 1200 (PSR-S700)

• [8 ▲] (OK ()) 4
 (Favorite) FAVORITE () 가
 . FAVORITE ()

(Music Finder) 가
(Record) ()

1 (Save)
[MUSIC FINDER] TAB [◀][▶] ALL [7 ▲ ▼] (FILES)

2 TAB () [◀][▶] (USER ()/USB)

3 [6 ▼] (73).

 "REPLACE ()"
 가
 Finder) (Music
 (Music Finder)
 (117
) 가
 가

Finder Data) (Music
 Finder) (Music
 (79
).

USER/USB
USER/USB


(Music Finder)

- 1 [MUSIC FINDER ()]
[MUSIC FINDER] TAB [◀][▶] ALL
- 2 [7 ▲ ▼] (FILES ()) (Music Finder)
(File)
- 3 TAB () [◀][▶] USER () /USB
- 4 [A] - [J] (Music Finder)

• REPLACE () (Music Finder)

• APPEND () 가 (Music Finder)

"CANCEL ()"

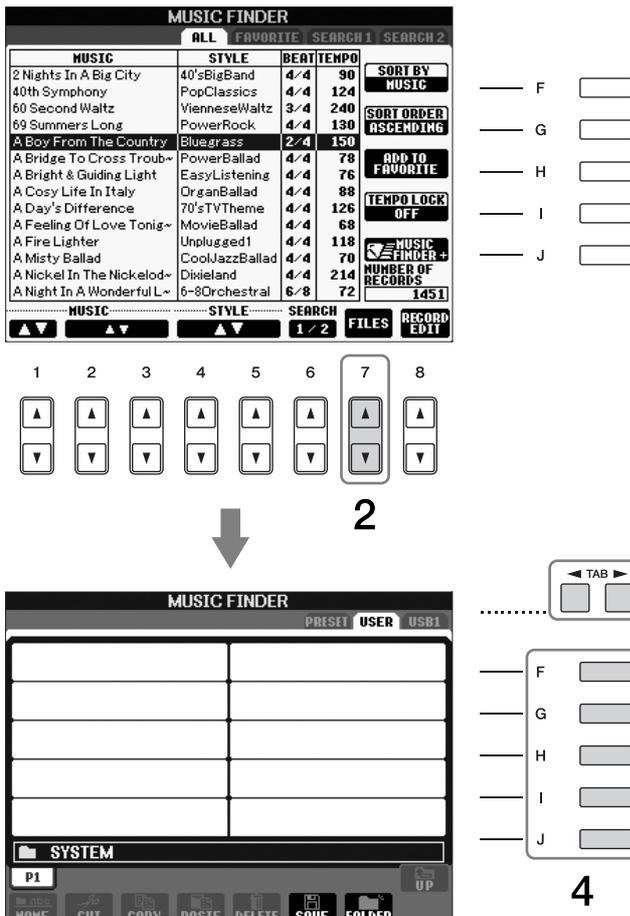

MUSIC	STYLE	BEAT	TEMPO
2 Nights In A Big City	40's Big Band	4/4	90
40th Symphony	Pop Classics	4/4	124
60 Second Waltz	Viennese Waltz	3/4	240
69 Summers Long	Power Rock	4/4	130
A Boy From The Country	Bluegrass	2/4	150
A Bridge To Cross Troub-	Power Ballad	4/4	78
A Bright & Guiding Light	Easy Listening	4/4	76
A Cosy Life In Italy	Organ Ballad	4/4	88
A Day's Difference	70's TV Theme	4/4	126
A Feeling Of Love Tonig-	Movie Ballad	4/4	68
A Fire Lighter	Unplugged 1	4/4	118
A Misty Ballad	Cool Jazz Ballad	4/4	70
A Nickel In The Nickelod-	Dixieland	4/4	214
A Night In A Wonderful L-	6-8 Orchestral	6/8	72

(Music Finder)

() 가 (Music Finder) 가

(Music Finder)

http://music.yamaha.com/idc

1 (174), [MUSIC FINDER ()]

2 [1 ▲ ▼] - [5 ▲ ▼]

DATA ENTRY () [ENTER ()]

3 [J] (MUSIC FINDER () +)

MUSIC	STYLE	BEAT	TEMPO
2 Nights In A Big City	40'sBigBand	4/4	90
40th Symphony	PopClassics	4/4	124
60 Second Waltz	VienneseWaltz	3/4	240
69 Summers Long	PowerRock	4/4	130
A Boy From The Country	Bluegrass	2/4	150
A Bridge To Cross Troub~	PowerBallad	4/4	78
A Bright & Guiding Light	EasyListening	4/4	76
A Cosy Life In Italy	OrganBallad	4/4	88
A Day's Difference	70'sTVTheme	4/4	126
A Feeling Of Love Tonig~	MovieBallad	4/4	68
A Fire Lighter	Unplugged1	4/4	118
A Misty Ballad	CoolJazzBallad	4/4	70
A Nickel In The Nickelod~	Dixieland	4/4	214
A Night In A Wonderful L~	6-8Orchestral	6/8	72

2

4

4 [EXIT ()] ()

MUSIC FINDER

Finder Plus) (Music 가

(Style Creator)

(Style)
(Style)

(Style Structure)

(Style) 15


8

(Style Creator)

(Style)

(Style)

4
(Fill-in)

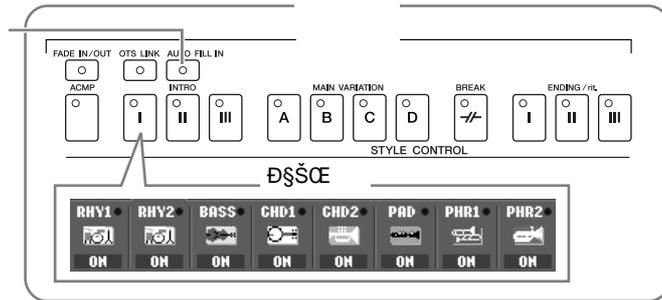

(Style)

3가

(Style)

(Style)

(124)

■ (Realtime Recording) ▶ 119

(Style)

가 가
(Style)

(Style)

(Style)

(Style)

■ (Step Recording) ▶ 122

(Style)

■ (Style Assembly) ▶ 123

(Style)

(Style)

"60's Rock1"

"70's 8Beat"
(Style)

(Style)


"Cool8Beat"

(Style)

8-

가
(Style)

가

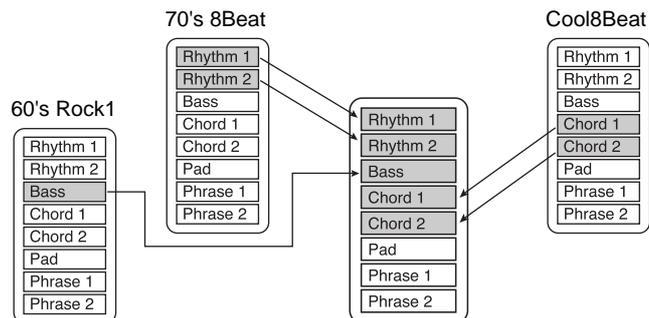

(Realtime Recording) (BASIC ())

(Style)

• (Loop Recording)

(Style) " " 2 ()
(Style) 2 가 ()

• (121) (120)
(Style) (Style)
2 MAIN () 2
(Style) (Style)
()

(Style)



가 . 가 .

1 / (Style) (Style) (46)

(Style) 5
[C] (NEW STYLE ())

(Style)
BASS-PHR2

2 [FUNCTION] [F] DIGITAL REC MENU

BASS-PHR2 가

3 [B] (Style Creator)

4 TAB () [◀][▶]
RECORD () BASIC ()

STYLE CREATOR ()
RECORD ()
()가 [F] (REC
() CH)

5 [EXIT ()]

자동 반주 스타일 사용, 생성 및 편집





(Section)
 ([INTRO ()]/[MAIN ()])/
 [ENDING ()])

(Section)
 SECTION ()
 가
 [6 ▲ ▼]/[7 ▲ ▼] [8 ▲]

INTRO 4/ENDING 4 (4/
 4)

6 [3 ▲ ▼]/[4 ▲ ▼]

(118)

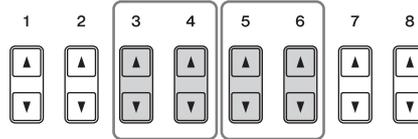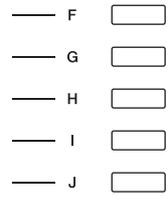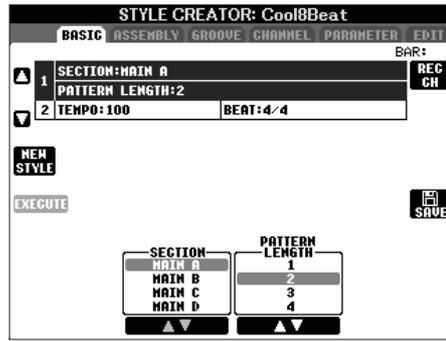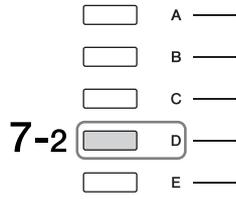

6 7-1

7 [5 ▲ ▼]/[6 ▲ ▼]

()



[D] (EXECUTE ())

8 [F] (REC () CH)


[1 ▼] - [8 ▼]

[1 ▼] - [8 ▼]

[1 ▼] - [8 ▼]

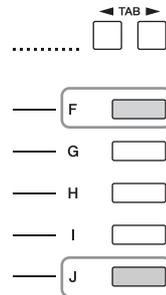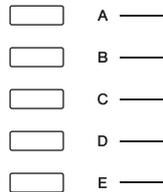

10

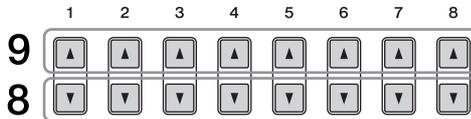

9

8

9 [1 ▲] - [8 ▲]

(Voice Selection)
 (Voice)

[EXIT ()]

10

[J] (DELETE ())
 [1 ▲] - [8 ▲]

[J] 가

- 가
 • **RHY1** : (Organ Flute)
 S.
 (Articulation Voice)
 가
- **RHY2** : 가
 /SFX 가
- **BASS-PHR2** :
 (Organ Flute
 Voice), (Drum)/SFX , S.
 (Articulation
 Voice)
 가
 ((Preset
 Organ Flute Voice) LCD
 .)

11 (Style Control) [START/STOP (/)]
 (RHY1, 2)
 " (RHY1, 2) " ()

12 [F] (REC () CH)
 [1 ▼] - [8 ▼]


13 (Style Control) [START/STOP (/)]

14 [EXIT ()]

15 [I] (SAVE ()) (Style Selection)
 (73). (Style)

⚠ (Style)
 (73). (Style)

- BASS PHRASE (, C, D, E, G, A B) CM7
- CHORD () PAD () (, C, E, G B)

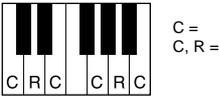

(Style))
 (Source Chord) CM7
). 128 PARAMETER ()
 (Source Chord)()
 CM7 (Source Chord)
 129

INTRO () ENDING ()
 CM7 (Source Chord)
 PARAMETER ()
) (128)
 PLAY ROOT ()
 PLAY CHORD ()

자동 반주 스타일 사용, 생성 및 편집

(ASSEMBLY)

(Style Assembly) (Style) (Style)

()

1 (Style) (Style Assembly)

" (Realtme recording)" (119) 1-4

. 4 ASSEMBLY ()


2 (Style) (, ,)

(Section) ([INTRO ()]/[MAIN ()]/[ENDING ()])

SECTION ()

[6 ▲ ▼]/[7 ▲ ▼] [8 ▲] (OK)

()

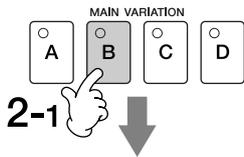

3 [A] - [D] [F] - [I]

(Style Selection)

(Style Selection)

(Style) 가 (Style) [EXIT ()]

4 [2 ▲ ▼]/[3 ▲ ▼] (SECTION ())

(Style) (3) 가

5 [4 ▲ ▼]/[5 ▲ ▼] (CHANNEL ())

(4)

3 - 5

6 [J] (SAVE ()) (Style Selection)

(73)

INTRO () 4 SECTION)4/ENDING

⚠ (Style)

(Style)

(73)

자동 반주 스타일 사용, 생성 및 편집

(Style) (Style) [6 ▲ ▼]/[7 ▲ ▼]
 (PLAY TYPE ((Style Assembly))
 • **SOLO** ()
 ASSEMBLY ()
 ON () BASIC () RECORD ()
 • **ON** ()
 ASSEMBLY ()
 BASIC () RECORD () OFF ()
 • **OFF** ()
 ASSEMBLY ()

(Realtime) (Step) / (Style Assembly)
 (Style)

USB
 [USB] USB
 [USB] [B] STYLE [A] - [J]

- 1 (Style)
- 2 [FUNCTION] [F] DIGITAL REC MENU
- 3 [B] / (Style Creator/Edit)
- 4 TAB () [◀][▶]
 • () ▶ 125 (Style)
 • (Channel) (Data) (CHANNEL) ▶ 127 (Style)
 • (Style) () ▶ 128 (quantize)
- 5 (Style)

(GROOVE)

" " 4 GROOVE ()
(124).

1 [A]/[B] (126).

2 [1 ▲ ▼] - [8 ▲ ▼]
126 .

3 [D] (EXECUTE ())
(Groove) (Dynamics) "UNDO ()"
(Undo)

4 [I] (SAVE ()) (Style Selection)
(73). (Style)

⚠ (Style)
(73 (Style)).

자동 반주 스타일 사용, 생성 및 편집

■ GROOVE ()

(Style) 가 () (Groove) " " (Style)

ORIGINAL BEAT ()	(Groove) (Beat)"가 (Beat)"가	(Groove) 8 (Groove) 8	3 , "8 , "12
BEAT CONVERTER ()	(ORIGINAL BEAT ())가 "8")가 "12"	BEAT CONVERTER () 8 8	3 , "12" (Beat Converter)
SWING ()	ORIGINAL BEAT () BEAT () "8" (Swing) 2, 4, 6, 8 "A" 가 "A" ~ "E" "E" 가	ORIGINAL (Swing)	
FINE ()	"PUSH ()" "HEAVY ()" (2, 3, 4, 5) 가	(Groove) "	"A" (, "3" , "B" 2 3 , "C"


■ DYNAMICS ()

(Style) / ()
(Dynamics) (Style)

CHANNEL ()	(Dynamics) ()
ACCENT TYPE ()	(Dynamics)
STRENGTH ()	(Accent Type)()
EXPAND/COMP. (/)	100% 100%
BOOST/CUT (/)	100% / 100%

" ()
" 4 CHANNEL ()
(124).

1 [A]/[B] ().

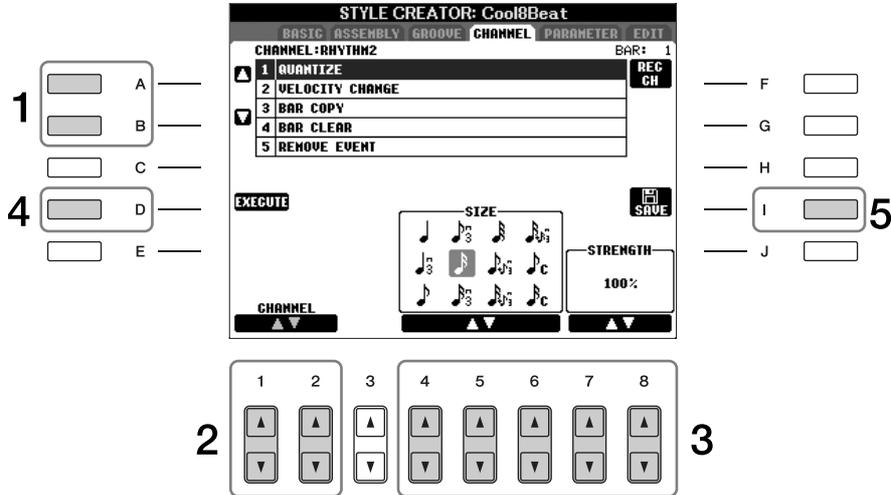

2 [1 ▲ ▼]/[2 ▲ ▼] (CHANNEL ())

3 [4 ▲ ▼] - [8 ▲ ▼]

4 [D] (EXECUTE ())

[UNDO ()]

(Undo)

5 [I] (SAVE ())

(Style

(Style Selection)

(73



(Style)

(Style)

QUANTIZE ()	가 2 (Song Creator)(165) ♪ ^c 8 ♪ ^c 16
VELOCITY CHANGE ()	
BAR COPY ()	SOURCE () (TOP) (LAST) . DEST 가
BAR CLEAR ()	
REMOVE EVENT ()	

(PARAMETER)

Format) (Style File
가

SOURCE ROOT ()
()
SOURCE CHORD ()
()



NTR
()
NTT
()



HIGH KEY
() (Chord Root)
NOTE LIMIT ()
RTR
()
(Retrigger Rule)



" " 4 PARAMETER ()
(124)

1 [A]/[B] (129)

1
A
B
C
D
E

STYLE CREATOR: Straight8Pop

BASIC ASSEMBLY GROOVE CHANNEL PARAMETER EDIT

CHANNEL: RHYTHM2	BAR: 1
1 PLAY ROOT :C CHORD:M7	REC CH
2 NTR:ROOT FIXED	
3 NTR:BYPASS	
4 HIGH KEY:F#	
NOTE LIMIT LOM:C-2 HIGH:68	
5 RTR:PITCH SHIFT	

SAVE

NTR NTR BYPASS
ROOT TRANS MELODY
ROOT FIXED CHORD
CHANNEL MELODIC MINOR

BASS ON OFF

F
G
H
I
J

2 3

1 2 3 4 5 6 7 8

3

2 [1 ▲ ▼]/[2 ▲ ▼] (CHANNEL ())

3 [3 ▲ ▼] - [8 ▲ ▼]

4 [I] (SAVE ()) (Style Selection)
 (73). (Style)



(Style)

(Style)

(Style Creator)
 (Source Pattern)
 (Style-in)

■ PLAY ROOT/CHORD

(Style) (Source Root) (Chord)
 가 CM7
 ("C" "M7")
 (Source Root/Chord) CM7

NTR " (Root
 Fixed)" NTT " (By-pass)" NTT BASS
 ("OFF ()")

(Play Root)' " (Play Chord)"

(Play Root) C :

C = C, R =

■ NTR () (Source Pattern)

<p>ROOT TRANS ()</p>	<p>가 가 F C C3, E3 G3 F3, A3 C4가 C F</p>
<p>ROOT FIXED ()</p>	<p>가 가 가 F F F C C3, E3 G3 C3, A3 F3 C C F</p>

자동 반주 스타일 사용, 생성 및 편집

■ NTR ()

BYPASS ()	NTR ROOT FIXED () NTR ROOT TRANS ()
MELODY ()	(Phrase) 2 (Phrase) 1
CHORD ()	(Chord) 1 (Chord) 2 가
MELODIC MINOR ()	가 가 3 (Intro) (Ending) / (Section)
MELODIC MINOR 5th (5th)	(Melodic Minor) (Source Pattern) 5
HARMONIC MINOR ()	가 가 (Intro) (Ending) / (Section)
HARMONIC MINOR 5th (5th)	(Harmonic Minor) (Source Pattern) 5
NATURAL MINOR ()	가 가 (Intro) (Ending) / (Section)
NATURAL MINOR 5th (5th)	(Natural Minor) (Source Pattern) 5
DORIAN ()	가 가 (Intro) (Ending) / (Section)
DORIAN 5th (5th)	(Dorian) (Source Pattern) 5

■ NTT BASS ON/OFF (/)
(on-bass) ON

■ HIGH KEY ()

가 가 ()
가 NTR (129)가" (Root Trans)"

가 F

→ CM C#M . . . FM F#M . . .
 → C3-E3-G3 C#3-F3-G#3 F3-A3-C4 F#2-A#2-C#3

■ NOTE LIMIT ()

(가 가)

()

- 가 C3 가 D4 .



■ RTR ()

가

STOP ()	
PITCH SHIFT ()	
PITCH SHIFT TO ROOT ()	
RETRIGGER ()	
RETRIGGER TO ROOT ()	

(Multi Pad)

(Multi Pad)..... 52


(Multi Pad Creator)

(Multi Pad)

(Multi Pad)

(Multi Pad Realtime

Recording)

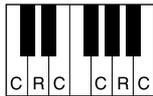- 1 (Multi Pad Bank) (134)
 - 2 [FUNCTION] [F] DIGITAL REC MENU
 - 3 [C] (Multi Pad Creator)
 - 4 TAB () [◀] RECORD ()
 - 5 [A], [B], [F] [G] (Multi Pad) [C] (Multi Pad)
 - 6 [H] (REC ()) 5 (Multi Pad)
 - 7 STYLE CONTROL () [START/STOP (/)] (Multi Pad)
 C (Multi Pad) (Chord Match)가
 7th (C, D, E, G, A B)
- 

C =
C, R =
- 8 [H] (STOP ()) MULTI PAD () [STOP ()]
 STYLE CONTROL () [START/STOP (/)]
- 가
" "
- 가 EDIT ()
(Step Record)

9 MULTI PAD () [1] - [4] 6-8

10 [1 ▲ ▼] - [4 ▲ ▼] (Repeat) (On) (Off). (Repeat) 가 MULTI PAD () [STOP ()] (Repeat) 가 (Song) (Style) (Repeat) (Multi Pad)


11 [5 ▲ ▼] - [8 ▲ ▼] (Chord Match) (On) (Off). (Chord Match) 가 (ACMP) [LEFT] ([ACMP]가) LEFT (Multi Pad)가 (Chord Match)

12 [D] (Multi Pad) (134)

13 [I] 가 (Multi Pad) 4 (Pad) (Bank) USER () USB (70)


(EDIT)

(Step Recording) EDIT () . 132 (Multi Pad Realtime Recording) 5 (Multi Pad) TAB () [◀][▶] EDIT () . EDIT () (Event) (Step Recording) (Song) Recording)(152 - 142) (Multi Pad) (Multi Pad Creator) (System Exclusive) (Chord) 가 (Lyric) . [F] 가 (Event List)

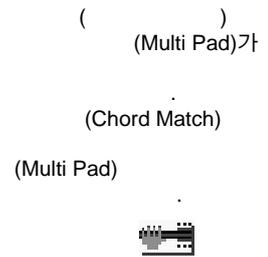

(Mult Pad Edit)

1 MULTI PAD CONTROL () [SELECT ()] USER
 () (Bank)

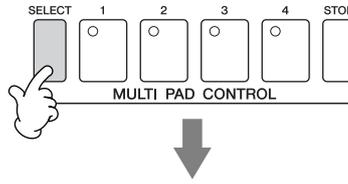

2 [8 ▼] [MULTI PAD EDIT ()]
 [A], [B], [F] [G] (Pad)




3 (Multi Pad)

- [1 ▼] (Multi Pad) (75)
- [3 ▼] (Multi Pad) (74)
- [4 ▼] (Copy)
- [5 ▼] (Multi Pad) (75)

(Registration Memory)
 (Registration Memory) (" ")
 .8
 (Registration Memory) (Bank)()

1 ((Voice), (Style),)
 (Registration Memory)
 (Data List) (Data List) (Data List)
 List) Yamaha . (5)

2 REGISTRATION MEMORY () [MEMORY ()]
 가
 . (TEXT () MIC SETTING (MIC
) PSR-S700 .)

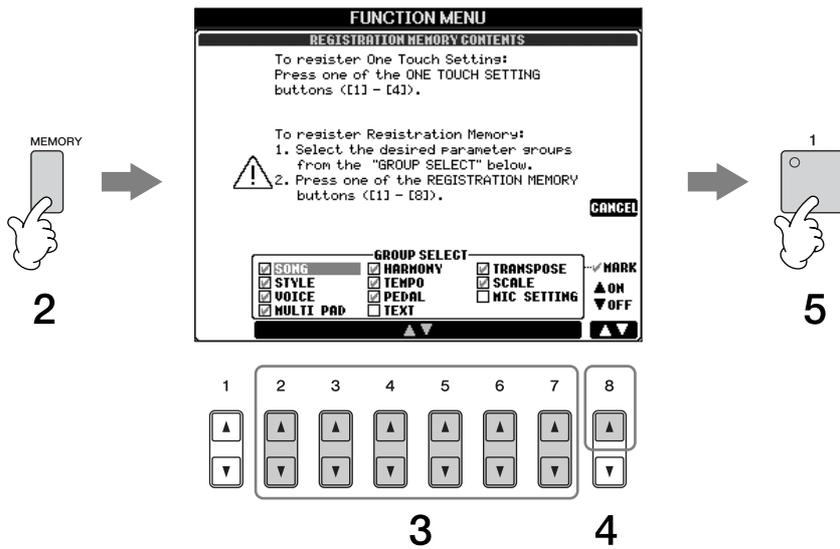

3 [2▲▼] - [7▲▼]
 [!] (CANCEL ()) (138)

4 [8▲▼]

5 REGISTRATION MEMORY () [1] - [8]
 가

REGISTRATION MEMORY () ()

6 1-5


Off.....
 On ()....
 On ()...
 137
 8
 8
 B5 () 가
 B)
 [POWER ()]

(Registration Memory)
 (Registration Memory)
 () PSR-S900/S700

USB
 USB (Song)/
 (Style)
 (Song)/ (Style)
 USB [USB
 TO DEVICE]


8
 Bank)

(Registration Memory)

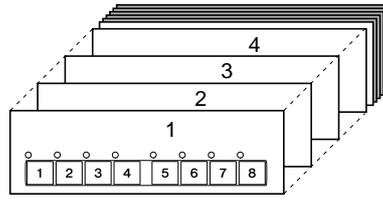


1 REGIST BANK () [+] [-]
 REGISTRATION BANK () (Selection Display)


2 [6 ▼] (Bank) (73)

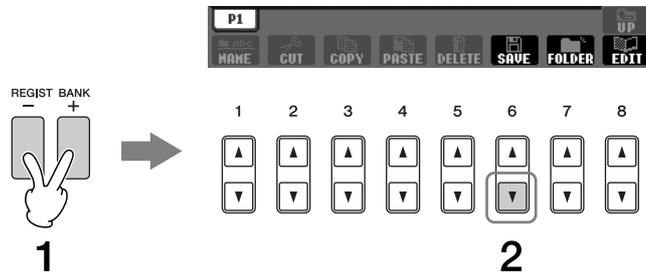


1 REGIST BANK () [+] [-]
 REGISTRATION BANK () (Selection Display)

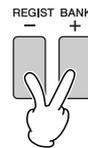

2 [A] - [J]

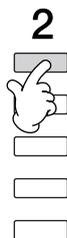

A —
 B —
 C —
 D —
 E —

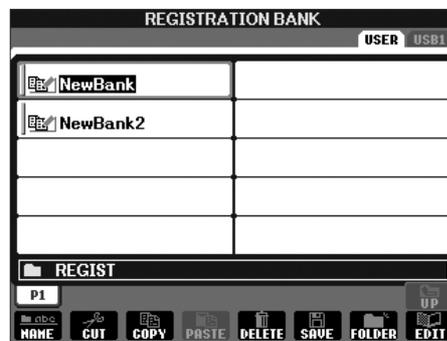

3 (Registration Memory)
 ([1] - [8])

(Parameter Lock)

(Registration Memory), (One Touch Setting),
 (Music Finder), (Song) MIDI
 가 .

1 **(Parameter Lock)**

[FUNCTION] [J] UTILITY TAB [◀][▶] CONFIG 1 [B] 3
 PARAMETER LOCK

2 [1 ▲ ▼] - [7 ▲ ▼] [8 ▲]
 (OK ()) .

/

1 REGIST BANK () [+] [-] (Selection Display)
 REGISTRATION BANK ()

2 [A] - [J]



3 [8 ▼] (EDIT ()) REGISTRATION EDIT ()

4

• [5 ▼] (75) .

• [1 ▼] (76) .

REGISTRATION
 MEMORY ()
 [1] - [8]

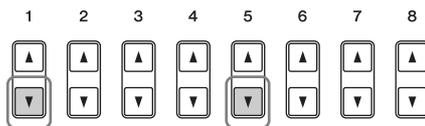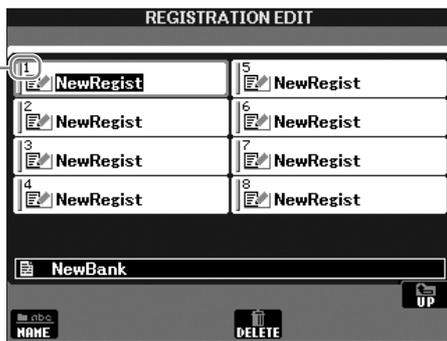

5 [8 ▲] (UP ()) REGISTRATION BANK ()

⚠
 REGISTRATION FREEZE ()
 가
 가

(Freeze)

(Registration Memory)

(Registration Memory)

(Style)

(Voice)

(Freeze)

(Registration Memory)

1

[FUNCTION] [E] REGIST SEQUENCE/FREEZE/VOICE SET
 TAB [◀] [▶] FREEZE

2

[2 ▲ ▼] - [7 ▲ ▼]

3

[8 ▲ ▼] " " (,)

4

[EXIT ()]

5

[FREEZE ()] (Freeze)

(Registration Memory)

(Registration Sequence)

TAB () [◀] [▶]


8

1

(Registration Memory)
 (136).

2

[FUNCTION] [E] REGIST SEQUENCE/FREEZE/VOICE SET
 TAB [◀] [▶] REGISTRATION SEQUENCE

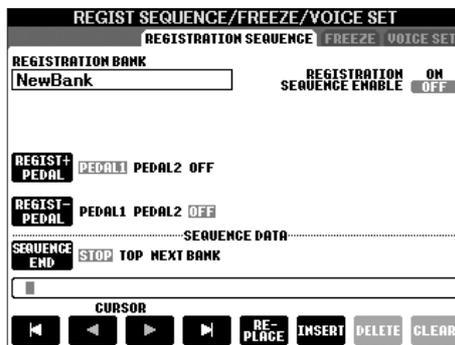

3

(Registration Memory)

[C]
 [D]

4 [E] (Registration Sequence)가 (SEQUENCE END ()).
 STOP () TAB () [▶] 가 " " 가 " "
 TOP ()
 NEXT BANK ()
 (Registration Memory Bank)

5 (Sequence) REGISTRATION MEMORY () [1] - [8]
 REGISTRATION MEMORY () [1] - [8]
 [6 ▲ ▼] (INSERT ())
 • [5 ▲ ▼] (REPLACE ()) (Registration Memory)
 • [7 ▲ ▼] (DELETE ())
 • [8 ▲ ▼] (CLEAR ())

6 [F] (Registration Sequence)

7 [DIRECT ACCESS ()] [EXIT ()]
 (Main) 가 (Registration Memory) 가
 • TAB () [▶] (Registration Memory) (Registration Sequence)
 • TAB () [◀][▶] (Main) (Registration Sequence)
 • TAB () [◀][▶] (3) (Registration Memory) (3) (Registration Sequence)



Sequence)가 (Registration Memory Bank) (Registration Sequence)
 (Registration Memory Bank)

1 REGIST BANK () [+] [-]
 REGISTRATION BANK () (Selection)

2 [6 ▼] (Bank) (73)

⚠ 가
 REGISTRATION SEQUENCE
 () 가
 가
 가
 (Main) TAB
 () [◀] [▶]
 가 ()
 (Sequence) TAB ()
 [◀][▶]

⚠ (Registration Memory Bank)
 (Registration Sequence)
 (Registration Memory Bank)

.....	36
(Song)	36
()	39
.....	40
.....	42
.....	43
(가)	57
(PSR-S900)	57
가	58
(PSR-S900)	58
가	59
.....	61
(USB) (PSR-S900).....	63

PSR-S900/S700 (Song)

(Song Selection) PRESET () (Song).

USB
23 "USB /
(USB) " .
22 "

(43 , 147) USER ()/USB
(Song) . (USB USB /)
USB .)

Yamaha
(Disk Song) (Disk
Song) 가 (Song) ()

(Song)
203



권
편
만
정
성
용
사
대

" (Quick Guide)" (Song)

■ /
SONG () [▶/■] (PLAY/PAUSE (/)) (Song)
SONG () [] (STOP ()) (Song)
/ 가 (Song)
(Song)
(Style)

(Synchro Start)

SONG () [] (STOP ()) [▶/■] (PLAY/PAUSE (/))
(Synchro Start) SONG () [] (STOP ())
[▶/■] (PLAY/PAUSE (/))

(Tap)

[TAP TEMPO ()]
(Song) 가 (Synchro)
Start) (/) (4/4)
4) (Song)

(Fade In)

[FADE IN/OUT (/)] (Song)
[▶/■] (PLAY/PAUSE (/)) [FADE IN/OUT (/)] SONG ()

(Fade Out)

[FADE IN/OUT (/)] (Song)
[FADE IN/OUT (/)]

/ **(Fade In/Out)**

108

■ / / /



(Song)
 (Song) SONG () [] (STOP ())

(Song)
 (Song) SONG () [▶/■] (PLAY/PAUSE (/))
 (Song) SONG () [▶/■] (PLAY/PAUSE (/))

1 SONG () [◀◀] (REW ()) SONG () [▶▶] (FF ())
 (Main)

(Phrase Mark):
 (Phrase Mark)
 (Song) (Song)
 ()

(Phrase Mark)가 (Song) [◀◀/▶▶] (REW ())/FF ())
 (Phrase Mark) (Song) (Song)
 [E] (Song) 가 "BAR ()"

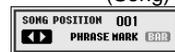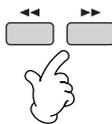

2 [EXIT ()] (Phrase Mark) 가 (Phrase Mark)

■ /

1 [FUNCTION] [B] SONG SETTING

2 [H]/[I] (Repeat Playback)

REPEAT MODE ()	OFF () (Song)
	SINGLE () (Song)
	ALL () (Song) (Song)
	RANDOM () (Song) (Song)
PHRASE MARK REPEAT ()	(Phrase Mark)가 (Repeat Playback) "ON ()" "OFF ()"
	(Phrase Mark) (Phrase Mark) " ()" 1-2 ()

■ (Queuing)
 (Song) (Song) (Song)
 (Song) (Song) (Song Selection)
 (Song)
 "NEXT ()" 가 (Song)
 [8 ▼] (Cancel ())

Lock) (Parameter
 ()
 " " " ").

■ (Song Playback) (Auto
Accompaniment Feature)
 (Song) (Style) (Song) 9 - 16
 (Song)
 (Song)

- 1 (Song) (36).
- 2 (Style) (46).
- 3 STYLE CONTROL () [ACMP] (Auto Accompaniment)
- 4 STYLE CONTROL () [SYNC START ()]
- 5 SONG () [▶/||] (PLAY/PAUSE (/))
- 6 (Song) (Main) (Main)
 가 [DIRECT ACCESS ()]
 [EXIT ()]
 (Song) (Style)
 • (Song) (Style) (Song)
 (Song) (Style) (Song)

가 (Song)
 (Main) (Song)

(Quick Start) (Song)
 (Quick Start)
 (Song) (Quick Start)
) "ON ()" 가 (Song)
 가
 (Quick Start) "ON()")
 (Song) (가
 (Quick Start) "OFF ()"

- 1 [FUNCTION] [B] SONG SETTING
- 2 [7 ▼] (QUICK START ()) (Quick Start)
 "OFF ()"

USB (Song)
 가 [USB TO DEVICE] 가 USB
 (Song)()
 1
 [FUNCTION] [J] UTILITY TAB [◀][▶] MEDIA
 2 [3 ▲]/[4 ▲] (SONG AUTO OPEN ()) "ON()"

**(Volume Balance)
 (Voice Combination)
 (MIXING CONSOLE ())**

(Song) .92 "MIXING
 CONSOLE () 가 ()" (Voice
 .91 " (Volume Balance) (Basic
 Combination) (MIXING CONSOLE ())"
 Procedure) 3 "SONG () CH 1 - 8" "SONG () CH 9 - 16"
 가

[SONG () CH 1 - 8]/[SONG
 () CH 9 - 16]

(Song) 16
 . MIXING
 CONSOLE ()
 16

SONG () CH 1-8 SONG
 () CH 9-16

CH 1 [TR 1] CH 2
 [TR 2] , CH 3-16
 [EXTRA TR]

5 [C]/[H] (VOICE ())
 (Voice)
 [1 ▲ ▼]
 ~ [8 ▲ ▼] (Voice)

- 1 (Song) (36)
- 2 [MIXING CONSOLE ()] MIXING CONSOLE ()
- 3 TAB () [◀][▶] [VOL/VOICE (/)]
- 4 [MIXING CONSOLE ()] "SONG ()"
 CH 1 - 8" "SONG () CH 9 - 16"
- 5 [J] "VOLUME ()"
- 6 [1 ▲ ▼] - [8 ▲ ▼]
- 7 SETUP () (Setup) (Song)
 (166)
 (Setup) 2 "VOICE ()"

권
 편집
 담당
 김
 정
 영
 사

(Voice)

- 1-4 (144).
- 5 [H] "VOICE ()"
- 6 [1 ▲ ▼] - [8 ▲ ▼] (Voice)
- 7 [A] - [J] (Voice)
- 8 (Voice) (Setup) (Song)
(166).
(Setup) 2 "VOICE ()"



(Guide)
[(SCORE)]
)

. PSR-S900 ((Song)

SONG SETTING ((Guide)

(Guide) (Song)
(166). (Guide)
(Song) (Song) (Guide)

- 1 [FUNCTION] [B] SONG SETTING
- 2 [A]/[B] (Guide)

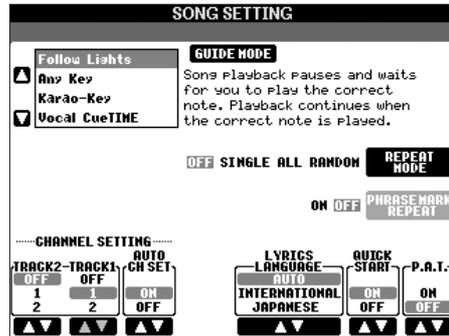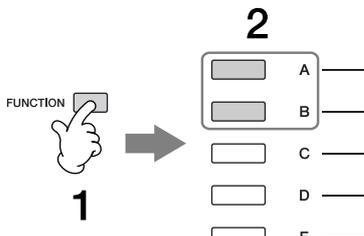

- 3 (Score) ([SCORE ()])

Follow Lights ()

(Song) 가 (Song) Follow
 Lights Yamaha Clavinova Clavinova PSR-S900/S700 가 (Song Score)

Any Key ()

(Song) () 가
 (Song)

Karao-key (가)

(Song) 가 (Song)
 (Song) 가

Vocal CueTIME () (PSR-S900)

(Song) 가
 (Song)

(Song) 16 (Song)
 CH 2 [TR 2] , CH 3-16 [EXTRA TR] CH 1 [TR 1]

1 [CHANNEL ON/OFF (/)] (Song) CHANNEL ON/OFF (/) 가 [CHANNEL ON/OFF (/)]

SONG		STYLE		CHANNEL ON/OFF											
1	ON	2	ON	3	ON	4	ON	5	ON	6	ON	7	ON	8	ON
9	ON	10	ON	11	ON	12	ON	13	ON	14	ON	15	ON	16	ON

2 [1 ▲ ▼] - [8 ▲ ▼] ()
 [1 ▲ ▼] - [8 ▲ ▼]

MIDI

가 (User) USB
 (Quick Recording),
 (Multi track
 Recording), (Step Recording).
 MIDI (Audio Recording)(PSR-S900) 63
 MIDI 201 , "MIDI ?"
 USB (Audio Recording)(PSR-S900) 63

(Audio Recording) (63)
)
)
 1.4MB (PSR-S900)/560KB
 (PSR-S700)
 (Voice), (Style),
 (Song) (Registration)

3가


(Realtime Recording)	(Quick Recording) ▶	[TR 1 (R)] [TR 2 (L)] [EXTRA TR (STYLE ())]
	(Multi track Recording) ▶ 149	(Song) 가 (Song)(USB)
(Step Recording)	(Step Recording) ▶ 152	()

(Song) (162).
 / (Punch In/Out)

(Quick Recording)

1 SONG () [REC ()] SONG () [] (STOP ())

(Song) ("NEW SONG")

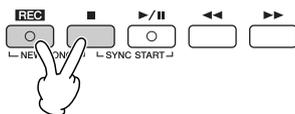

가사, 음, 영상 및 편집


RIGHT 2 / LEFT

2

- **RIGHT 2 / LEFT**
[RIGHT 2] / [LEFT] (Voice)
(85 , 86). (RIGHT 2, LEFT)
- 1 (Style) (46).
2 TEMPO () [-] [+]
- **(Registration Memory)**
REGISTRATION MEMORY () [1 - 8]
(135).

3

SONG () [REC ()] SONG TRACK ()

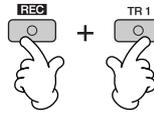

- SONG () [TR 1] /
SONG () [TR 2]
- **(Style)/ (Multi Pad)**
SONG () [EXTRA TR (STYLE ())]
- **(Style)/ (Multi Pad)**
SONG () [TR 1]/[TR 2] SONG () [EXTRA TR (STYLE ())]


4

가

- 3 SONG () [TR 1]/[TR 2] SONG () [EXTRA TR
(84). 3 ()]
(STYLES ()) (110).
- **SONG () [▶/||] (PLAY/PAUSE (/))**
가 (pick-up) " "
(Song) (lead-in)
- **STYLE CONTROL () [START/STOP (/)]**
(Style) ()


(34).

5 SONG () [] (STOP ())

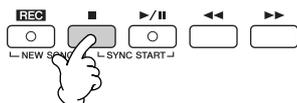

[EXIT ()]

6 SONG () [▶/||] (PLAY/PAUSE (/))

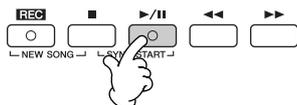

7 SONG () [SELECT ()] (Song Selection) Selection) (73). (Song


(Multi track Recording)

(Song) 16

(Keyboard) (Style)

1 SONG () [REC ()] SONG () [] (STOP ())

(Song)
 ("NEW SONG")
 (RIGHT 1, RIGHT 2 /
 LEFT) (Voice)
 (30 , 85 , 86
).
 (Style) (Multi Pad Bank)
 (46 , 52).

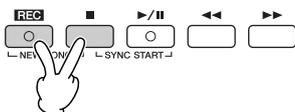

RIGHT 2 2
 PART SELECT () [RIGHT
 2] (Voice)
 RIGHT 2
 (Voice)
 PART ON/OFF (/)
 [RIGHT 2 (2)]

SONG () [▶/||] (PLAY/
 PAUSE (/))

• [TR 1]/[TR 2]
 SONG () [▶/||] (PLAY/
 PAUSE (/))

• [EXTRA TR]
 STYLE CONTROL ()
 [SYNC START ()]

⚠ (Save)
 (Song)

(Song)
 (73).

151

가사, 음, 영상 및 편집

5-16
 "REC"
 SONG () [REC ()]
 SONG () [EXTRA TR]

MIDI
 • MIDI 1-16
 MIDI
 MIDI
 • MIDI MIDI
 MIDI
 (Metronome) (34)

148

권 사 용, 생 성 및 편 집

2 SONG () [REC ()] SONG () [REC ()] 2 "REC
 [1 ▲ ▼] - [8 ▲ ▼] [2 ▲]
 "REC ()" ()"
 (Multi Pad) 5 - 8 ,
 (Style) 9 - 16
 SONG
 () [REC ()]

3

A —

B —

C —

D —

E —

F

G

H

I

J


2

+

3 [C]/[D] [D] "RIGHT2 ()
 (Style) (1/2,)
 (Multi Pad) 2)"
 가 2
 " (Song) /
 (Part) (151)).
 [EXIT ()]


4 (Quick Recording) 4 (148)

5 SONG () [] (STOP ())

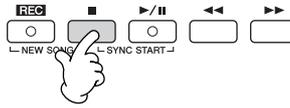

가
 [EXIT ()] (Song)

6 SONG () [▶/||] (PLAY/PAUSE (/))

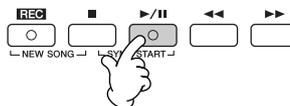

7

2-6

8

SONG () [SELECT ()]
(Song Selection)
Selection

(73)

(Song



(Save)
(Song)

(Song)
(73)

1	RIGHT1	}	9	RHYTHM1	} (Style)
2	RIGHT1		10	RHYTHM2	
3	RIGHT1		11	BASS	
4	RIGHT1		12	CHORD1	
5	M.Pad1	13	CHORD2		
6	M.Pad2	14	PAD		
7	M.Pad3	15	PHRASE1		
8	M.Pad4	16	PHRASE2		


RIGHT 1, RIGHT 2 LEFT 가 가
RIGHT 1 1 - 4
1 - 4
(Style) (Style) 9 - 16
RHYTHM () (Style)
BASS () 가
CHORD () (Voice)
PAD ()
PHRASE () ..
(punchy brass stabs),
(Multi Pad) (Multi Pad) 5-8

가사, 음, 멜로디 및 편곡

(Step Recording)


(Step Recording)

- 1 SONG () [REC ()] SONG () [] (STOP ())
(Song) ("NEW SONG")

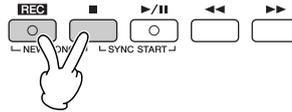

- 2 [FUNCTION] [F] DIGITAL REC MENU

- 3 [A] (Song) / (Song Creator)

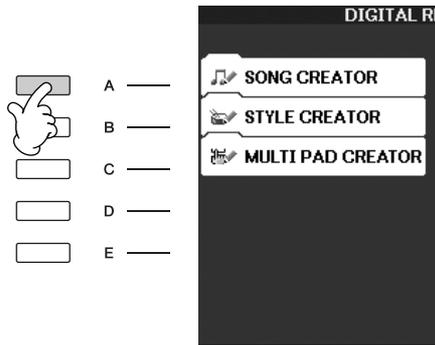

- 4 TAB () [◀][▶]
..... [1 - 16]
..... [CHORD ()]

- 5 4 "1 - 16" [F]

- 6 [G] STEP RECORD ()

- 7 (Step Recording)
..... 153
..... 160


권재원, 조성민, 김민준

(Recording Melodies)

3

1

152 " 7

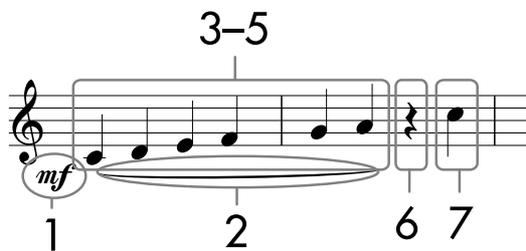

(Step Record)

(Voice)

MIDI

1

[G]

"mf"

2

[H]

"Tenuto ()"

[G] [H] [I]

3

[I]

"Normal ()"

155

4

[6 ▲ ▼]


4

5


C3, D3, E3, F3, G3 A3

본 사 용, 정 보 및 편 지

6 [6 ▲ ▼] 4 [4 ▲ ▼] - [8 ▲ ▼] . (.)
 가 가 .

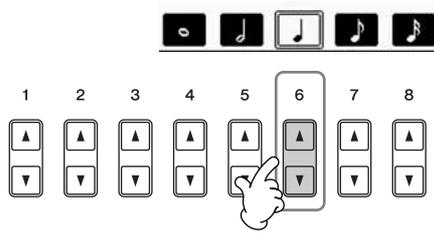

7 C4 .

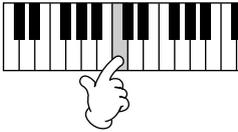

8 SONG () [] (STOP ()) (Song)



9 SONG () [▶/||] (PLAY/PAUSE (/))

10 [EXIT ()] (Step Record)

(Song)
 (162) .

11 [I] (SAVE ()) (Song)
 Selection) (73) . (Song Selection)

! (Save)
 (Song)
 (Song)
 (73) .
 (Song)
 SONG () []
 (STOP ())

1	STEP RECORD ()	[A]/[B]	(152)
2	[J] (DELETE ())		

(Step Record)

[G] [H] [I]

[G] ()

Kbd.Vel	
fff	127
ff	111
f	95
mf	79
mp	63
p	47
pp	31
ppp	15

1-127

[H] ()

	(Gate)	
Normal		80%
Tenuto		99%
Staccato		40%
Staccatissimo		20%
Manual	() DATA ENTRY ()	

[I] , (dotted) (triplet), 가)가

MIDI


[G] [H] [I]

155

2

152

" 7

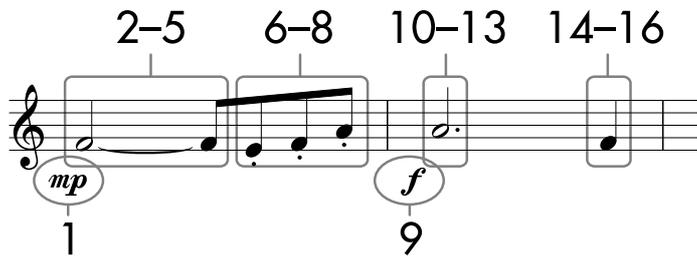





(Step Record)

(Voice)

1

[G]

"mp"

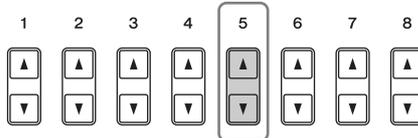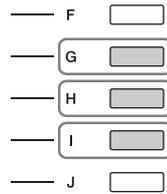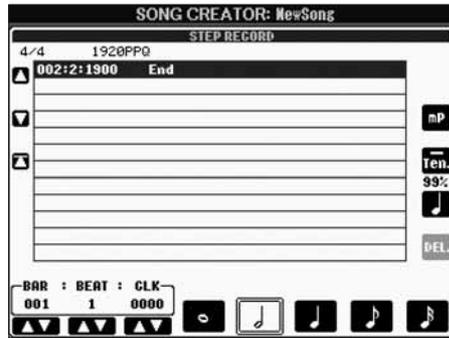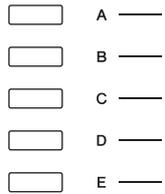

4

2

[H]

"Tenuto ()"

3

[I]


"Normal ()"

4

[5 ▲ ▼]

5


6 가 F3 F3 [7 ▲ ▼] [7 ▲ ▼]

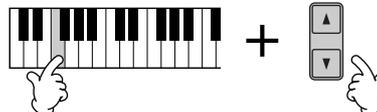

6 F3 [H] " (Staccato)"

7 [7▲▼] 8 .

8 E3, F3 A3 .

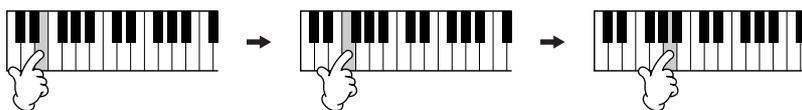

9 [G] " *f* "

10 [H] "Tenuto ()"

11 [I] " (dotted)"

12 [5▲▼] .

13 A3 .

14 [I] " (Normal)"

15 [6▲▼] 4 .

16 F3 .

17 SONG () [] (STOP ()) (Song)



18 SONG () [▶/||] (PLAY/PAUSE (/))

19 [EXIT ()] (Step Record)

(Song) (162) .

⚠ (Save) (Song)

20 [I] (SAVE ()) (Song Selection) (73) .


(Song) (73) .

3

152

" 7

MIDI

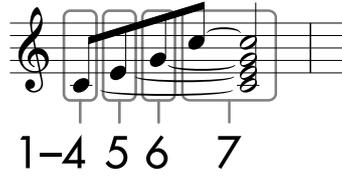

(Step Record)

(Voice)




[G] [H] [I]

155

1

[H]

" (Normal)"

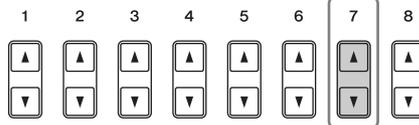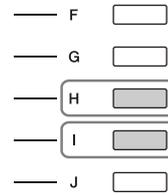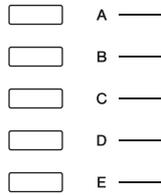

3

2

[I]

" "

3

[7 ▲ ▼]



8

4


C3

C3


[7 ▲ ▼]

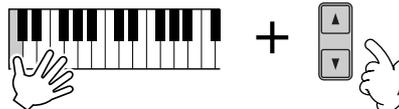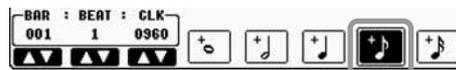


5 C3 E3 C3 E3 [7 ▲ ▼]

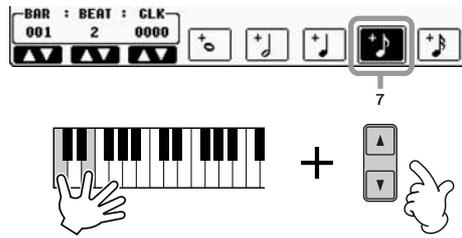

6 C3, E3 G3 C3, E3 G3 [7 ▲ ▼]

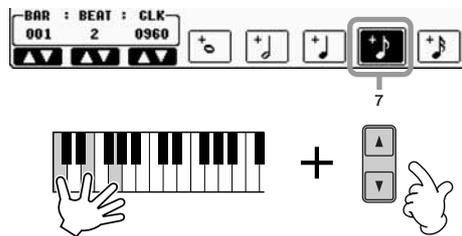

7 C3, E3, G3 C4 [7 ▲ ▼]
[5 ▲ ▼]
[5 ▲ ▼]

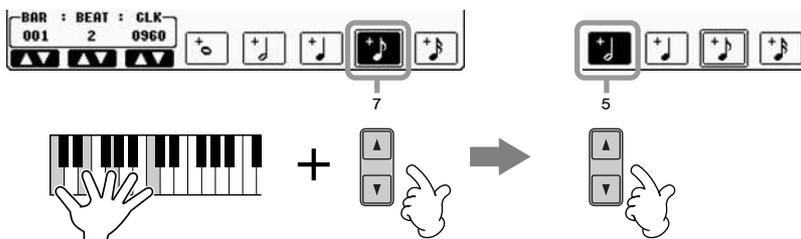

8 SONG () [] (STOP ()) (Song)

9 SONG () [▶/||] (PLAY/PAUSE (/))

10 [EXIT ()] (Step Record)
(Song)
(162).

11 [I] (SAVE ()) (Song Selection)
(73).

⚠ (Save)
(Song)
(Song)
(73).

Main, Ending) (Chord) (Intro, (Step Record)

152 " 7




1 4 7

MAIN () A BREAK MAIN () B

C F G F G7 C

2,3 5,6 8,9

1 STYLE CONTROL () [AUTO FILL IN()]
 OFF () STYLE CONTROL () A
) [MAIN VARIATION ()]

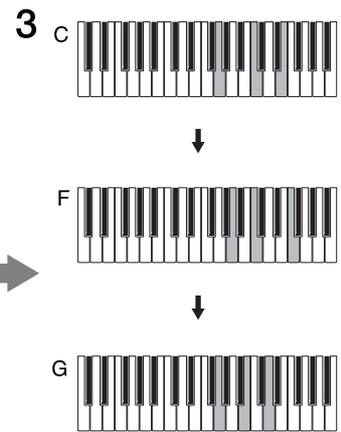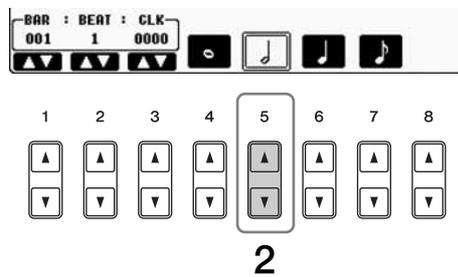
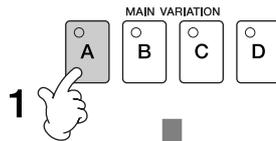


2 [5 ▲ ▼]


3

C, F G

4 STYLE CONTROL () [BREAK ()]

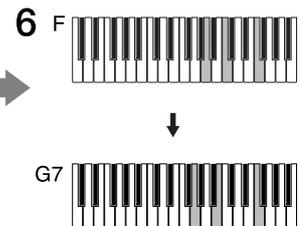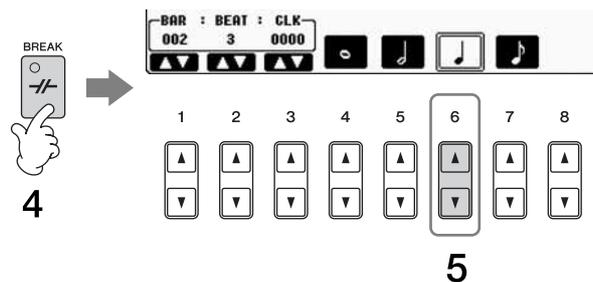

5 [6 ▲ ▼] 4 .
 6 F G7 .
 7 STYLE CONTROL () [MAIN VARIATION ()]
 B]

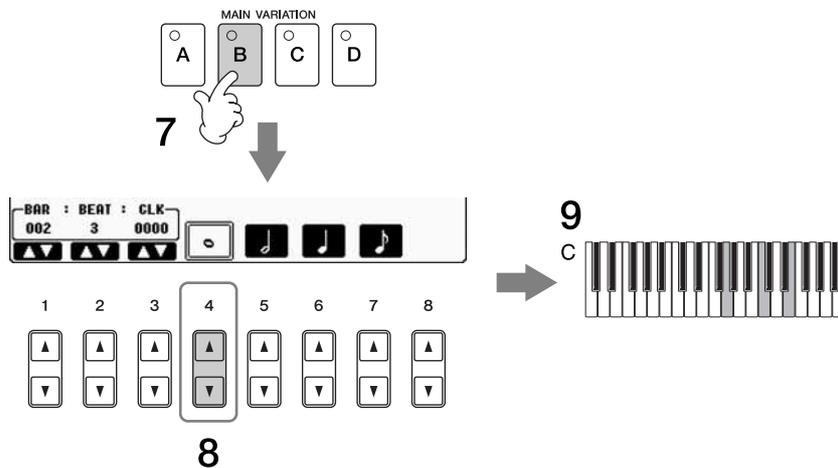

8 [4 ▲ ▼] .
 9 C .
 10 SONG () [] (STOP ()) (Song)
 11 SONG () [▶/||] (PLAY/PAUSE (/))
 12 [EXIT ()] (Step Record)
 (162). (Song)
 13 [F] (EXPAND ()) (Song)
 14 [I] (SAVE ()) (Song Selection)
 Selection) (73).

⚠ (Save)
 (Song)

(Song)
 (73).

(154).

STYLE CONTROL () [AUTO FILL IN ()]
 ON ()

STYLE CONTROL () [MAIN VARIATION () (A, B, C, D)]

((fill-in)
 [MAIN VARIATION
 () (A, B, C, D)]
).

본
 사
 양,
 형
 식
 및
 배
 치

(Quick Recording),
(Step Recording)

(Multi Track Recording)
(Song)

1 (Song)

2

[FUNCTION] [F] DIGITAL REC MENU

3

[A] (Song)

SONG CREATOR

DIGITAL REC MENU

- SONG CREATOR
- STYLE CREATOR
- MULTI PAD CREATOR

A — []
B — []
C — []
D — []
E — []

F []
G []
H []
I []
J []

4

TAB () [◀][▶]

(Song)

SONG CREATOR: NewSong

REC MODE CHANNEL CHORD 1-16 SYS/EX. LYRICS

REC START NORMAL REC END REPLACE ALL

Overwrite recordings starts when the song starts. → When recording stops, the rest of the previously recorded data on the channel will be lost.

SAVE

REC START NORMAL REC END REPLACE ALL PEDAL PUNCH IN/OUT ON OFF

FIRST KEY ON PUNCH OUT PUNCH IN AT PUNCH OUT AT

001 002

A — []
B — []
C — []
D — []
E — []

F []
G []
H []
I []
J []

- (Song) / (Punch In/Out) (REC MODE ()).....163
- (CHANNEL ()).....164
- (CHORD (), 1 - 16).....167
- (SYS/EX.).....169
- 가 (Song) (LYRICS (가)).....170
가 가

권
사
영
경
성
민
편
집

(REC MODE (/))


(Song) (Punch) IN/OUT (/)
 (Punch In) (Punch

Out) / (Punch In/Out)
 / (Punch In/Out)
 (Punch In) (Punch Out)
 (Foot Pedal)

/ (Punch In/Out)
 162 " " 4 REC MODE
 ()

1 [1 ▲ ▼] - [6 ▲ ▼] (

2 SONG () [REC ()]

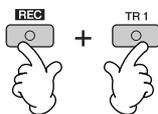

3 SONG () [▶/||] (PLAY/PAUSE (/))
 (Punch In)
 (Punch Out)

4 [I] (SAVE ()) (Song Selection)
 (Song Selection)
 (73).

⚠ (Save) (Song)
 (Song)
 (73).

■ PUNCH IN ()

NORMAL ()	SONG () [▶/] (PLAY/PAUSE (/)) (Synchro Standby)
FIRST KEY ON	(Song)
PUNCH IN AT	(Song) (Punch In) [3 ▲ ▼] (Punch In)

■ PUNCH OUT ()

REPLACE ALL	
PUNCH OUT	(Song) (Punch Out)
PUNCH OUT AT	(Punch Out) () (Punch Out) [6 ▲ ▼]

사
음, 영
정 및
편
지

/ (Punch In/Out)

/ (Punch In/Out)

가

8

PUNCH IN ()
PUNCH OUT ()



NORMAL ()
REPLACE ALL



NORMAL ()
PUNCH OUT ()




NORMAL ()
PUNCH OUT AT=006




FIRST KEY ON
REPLACE ALL



FIRST KEY ON
PUNCH OUT ()

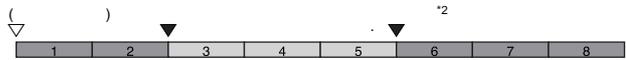

FIRST KEY ON
PUNCH OUT AT=006

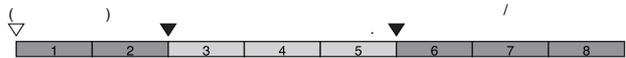

PUNCH IN AT=003
REPLACE ALL



PUNCH IN AT=003
PUNCH OUT ()



PUNCH IN AT=003
PUNCH OUT AT=006



*1 1-2
*2

5 3 [REC ()]



■ / (Pedal Punch In/Out)

ON ()

(Foot Pedal) 2

(Song)

(Foot Pedal) 2

()

(Punch In)

()

(Foot Pedal) 2

(Pedal Punch In/Out)

ON ()

(Foot Pedal) 2

(CHANNEL ())

162

4

CHANNEL ()

1 [A]/[B]

(165)

2 [1 ▲ ▼] - [8 ▲ ▼]

165

3 [D] (EXECUTE ())

(SETUP ())

"UNDO ()"

(Undo)



(Save)

(Song)

(Song)

(73)

4 [I] (SAVE ())

(Song
(Song Selection))

(73).

■ QUANTIZE ()
(Quantize)



가

(Quantize)

CHANNEL ()	(Song)
SIZE ()	<p>()</p> <p>가 가 8 가 (Quantize) 8 가</p> <p>4 8 16 32 16 + 8 +</p> <p>4 8 16 8 + 16 + 8 * 16 *</p> <p>(*) 가 (Quantize) 8 8</p> <p>8 가 + 8 8</p> <p>8 가 + 8</p>
STRENGTH ()	<p>. 100% . 100%</p> <p>" . 100% "</p>

■ (DELETE ())

(Song)

[1 ▲ ▼] - [8 ▲ ▼]
[D] (EXECUTE ())

(Quantize)
()
(Quantize)
4

가
사
음
경
정
및
편
집

■ 2 () (MIX ())
2

SOURCE () 1	(1 - 16)	MIDI
SOURCE () 2	(1 - 16)	1 - 16 (Source) 1 "COPY ()"가 "COPY ()" (Source) 1 가 . (
DESTINATION ()		

■ CHANNEL TRANSPOSE ()

2

9 - 16

[F] (Channel) 1 - 8 (Channel) 9
- 16

[G] (ALL CH) [1 ▲ ▼] - [8 ▲ ▼]

SETUP ()

(Mixing Console) (91)
(Setup) (Song) (Song)
(Mixing Console)

■

1

[FUNCTION] [F] DIGITAL REC MENU [A] SONG CREATOR TAB
[◀][▶] CHANNEL [B] SET UP

2 [1 ▲ ▼] - [7 ▲ ▼] (Song)

SONG ()	(Mixing Console)
KEYBOARD VOICE ()	(RIGHT1,2 LEFT) (Voice) / (One Touch Setting) (Song) () (Song) ()
SCORE SETTING ()	(Score)
GUIDE SETTING ()	(Guide) ON/OFF (/) (Guide)
LYRICS SETTING (가)	가 (Lyrics)
MIC SETTING () (PSR-S900)	(Mixing Console) (Vocal Harmony) (91)

3 [8 ▲]

4 [D] (EXECUTE ()) SETUP ()

5 [I] (SAVE ())

(Song Selection)

(73).

⚠ (Save) (Song)

(Song) (73).

(CHORD, 1 - 16)

1-16 162 4 CHORD ()

1 1 - 16 가 [F]

2 [A]/[B]

(Measure)/ (Beat)/ (Clock) [C]

..... [1 ▲ ▼] - [3 ▲ ▼]

3 [6 ▲ ▼] - [8 ▲] / / / /

[J] (MULTI SELECT ([A]/[B]))

1 [D]/[E]
2 [4 ▲ ▼]/[5 ▲ ▼]
ENTRY () . DATA

(FILTER ())
[CHORD ()] [1-16]

(169)

[8 ▼] (CANCEL ())

4 CHORD () 가 [F] (EXPAND ())

⚠ (Save) (Song)



5 [I] (SAVE ()) (Song Selection)
(73).

(Song) (73).

(Realtime Recording) (Chord) (Section)

가사, 음, 코드 및 편곡

(Quantize) 4
 PSR-S900/
 S700 4
 1/1920

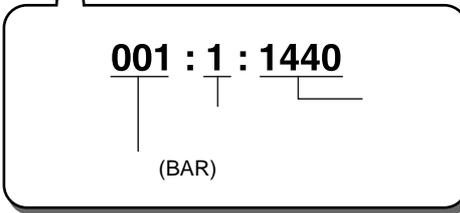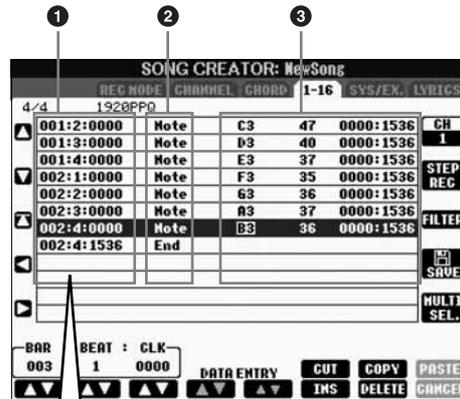

- ① ()
- ② ()
- ③

1 - 16

Note ()	(Song)
Ctrl (Control Change)	(91) (Voice)
Prog ()	(Voice) MIDI
P.Bnd ()	(Voice)
A.T. ()	가

CHORD ()

Style ()	
Tempo ()	
Chord ()	
Sect ()	(Intro, Main, Fill In, Break, Ending))
On/Off (/)	(Accompaniment Style) ()
CH.Vol ()	(Accompaniment Style) ()
S.Vol ()	(Accompaniment Style)

(FILTER)

가 (Filter)

- 1 [H] (FILTER ())
- 2 [2 ▲ ▼] - [5 ▲ ▼]
- 3 [6 ▲ ▼]/[7 ▲ ▼] ()

[H](ALL ON)
 [I] (NOTE/CHORD)NOTE/CHORD (/)
 [J] (INVERT).....

- 4 [EXIT ()]
- [C] - [E] (Filter) 가
- MAIN (Main Filter)
- CTRL CHG (Control Change Filter)
- STYLE (Accompaniment Style Filter Display)

(System Exclusive Event)

(SYS/EX.)

162 (Basic Editing Operation) 4
 [SYS/EX] ()
 167 " " (System Exclusive)

(System Event)

ScBar ()	(Song)
Tempo ()	
Time ()	
Key ()	/
XGPrm (XG)	XG "MIDI" (Data List) Yamaha (5)
SysEx ()	(Song) (System Exclusive)
Meta ()	(Song) SMF

[I] (SAVE ()) (Song Selection)
 (73). (Song Selection)

 (Save) (Song)

(Song) (73).

가사, 음, 악보 및 편집

가 (LYRICS)

(Basic Editing Operation) 4

162 LYRICS (가)
 가 (Lyric) 167 " " .

가

Name ()	(Song)
Lyrics (가)	가
Control Codes ()	CR 가 (Line Break) LF 가 MIDI 가

가

1 [4 ▲ ▼]/[5 ▲ ▼](DATA ENTRY ()) 가

" ' (77).

2 [I] (SAVE ()) (Song Selection)
 (73).



(Song)
 (Song)
 (73).

PSR-S900/S700

Glossary) (183 가). (Song) 가 (Internet) 가


가 (ADSL, 가)
 LAN ,) Yamaha
 (<http://music.yamaha.com/homekeyboard>).



가 .


(2)
 PSR-S900/S700

1:

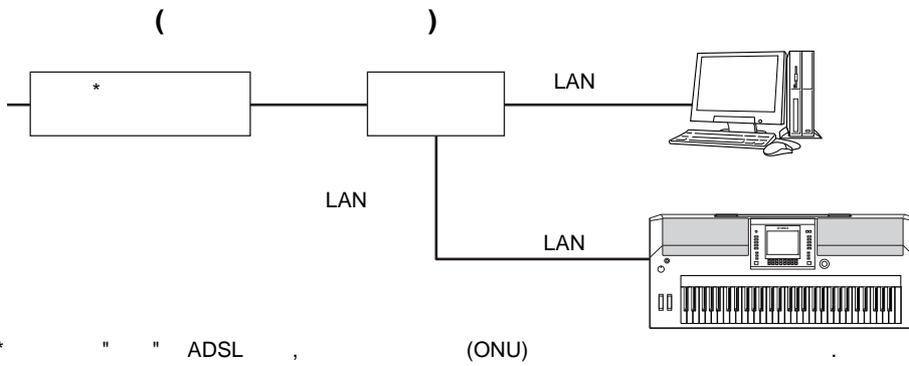


LAN LAN

2:

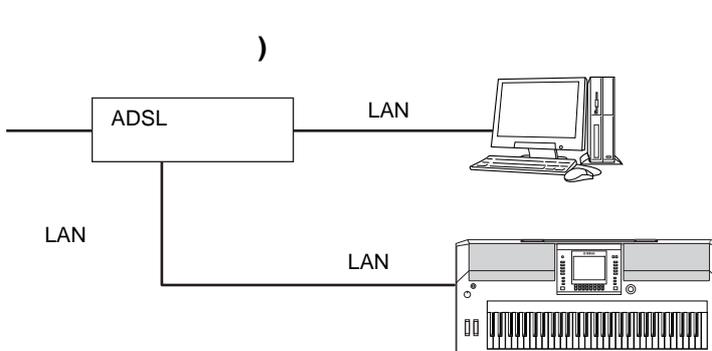

LAN LAN

3:

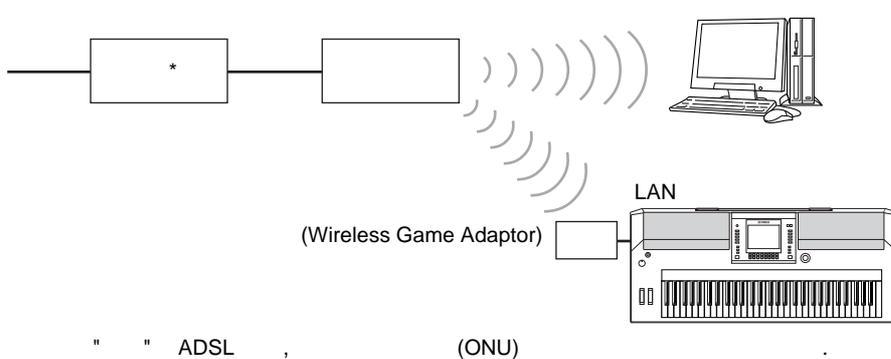

(Wireless Game Adaptor) LAN

USB LAN

PSR-S900/S700을 인터넷에 직접 연결


(Song)
가
[INTERNET ()]

MAIN
TRANPOSE:0 UPPER OCTAVE:0 SPLIT POINT: S F#2 L F#2
4/4 J=120 SONG Live! RIGHT1
NewSong GrandPiano
BAR 001 BEAT 1 Live! RIGHT2
Strings
J = 120 Cool! LEFT
GalaxyEP
4/4 J=120 STYLE MULTI PAD
Straight8Pop E.Gtr16BtCut1
CHORD REGIST
NewBank
BALANCE 85
SONG STYLE M.PAD MIC LEFT RIGHT1 RIGHT2

1 2 3 4 5 6 7 8

INTERNET
EXIT

가 [EXIT ()]

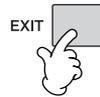


가 . DATA ENTRY ()

INTERNET DIRECT CONNECTION
Keyboard Tips & Tricks
1 Try Auto Accompaniment
2 The Right Tempo Everytime
3 Go Wireless
4 Shortcut To MAIN Screen
5 Performance Assistant
On-Pass Chords
Use the [Data Entry] dial and [Enter] button to select an item from the list.
RETURN TO HELP

Web page has been displayed.

BACK F4R HARD HOME BOOK MARK REFRESH STOP ENTER

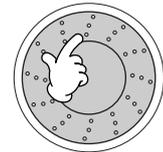

가
 [6 ▲]/[7 ▲ ▼]/[8 ▼] . [8 ▲] (ENTER ())

A —
 B —
 C —
 D —
 E —

INTERNET DIRECT CONNECTION

Welcome to Internet Direct Connection

Access thousands of downloadable songs, online music lessons, and bonus material.

Free Songs from Yamaha

LERN MUSIC >>

GET MUSIC >>

MY ACCOUNT >>

HELP/LEGAL >>

F —
 G —
 H —
 I —
 J —

1 2 3 4 5 6 7 8

▲
▼

▲
▼

▲
▼

▲
▼

▲
▼

▲
▼

▲
▼

▲
▼

DATA ENTRY () [ENTER ()]

77

가

가 [1 ▲ ▼] (BACK ()) 가
 [1 ▲ ▼] (BACK ()) 가
 [2 ▲ ▼] (FORWARD ())

Web page has been displayed.

BACK
FORWARD
HOME
BOOK MARK
REFRESH
STOP
ENTER

1 2 3 4 5 6 7 8

▲
▼

▲
▼

▲
▼

▲
▼

▲
▼

▲
▼



▲
▼

▲
▼



- USB 가 (File Selection) USB
"MyDownloads" (File Selection)
- [8 ▲] (UP ())
- USB 가 (File Selection) (User) "MyDownloads" (File Selection)
- [8 ▲] (UP ())

1 가 [4 ▲ ▼] (BOOKMARK ())
가 (Bookmark)

2 [3 ▲ ▼] (ADD (가))

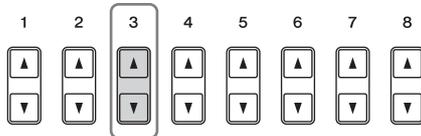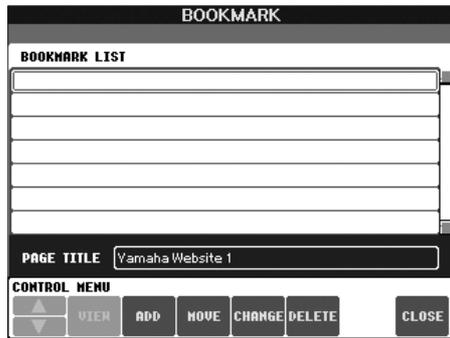



3 [1 ▲ ▼](▲/▼)

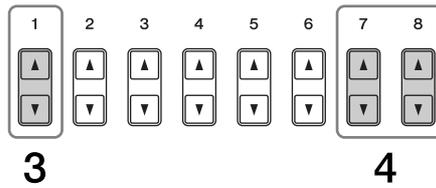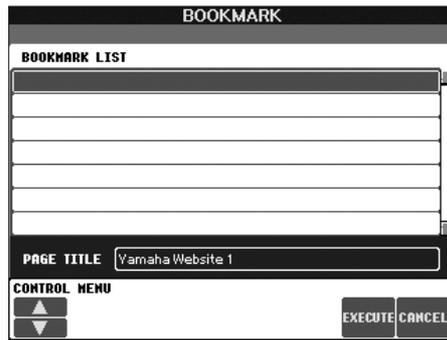

- 4 (CANCEL ()) [7 ▲ ▼](EXECUTE ()) [8 ▲ ▼]
- 5 가 [8 ▲ ▼](CLOSE ())

1 [4 ▲ ▼](BOOKMARK ()) (Bookmark)

2 [1 ▲ ▼](▲/▼)

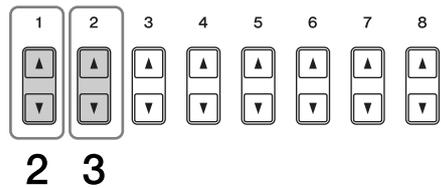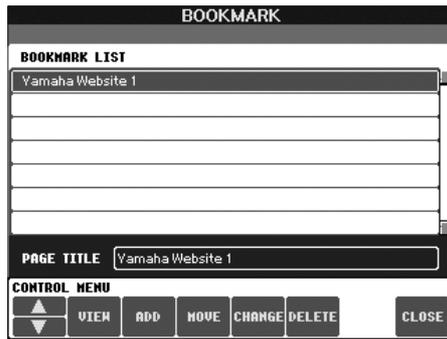

3 [2 ▲ ▼](VIEW ())

(Bookmark)



① ▲ / ▼
(Bookmark)

② (View)

③ 가 (Add)
(175).

④ (Move)

1 [4 ▲ ▼] (MOVE ())

2 [1 ▲ ▼] (▲ / ▼)

3 [7 ▲ ▼] (EXECUTE ())

⑤ . [5 ▲ ▼] (CHANGE ())
가

77

⑥ (Delete)

⑦ (Close)
(Bookmark)



(Internet Setting)

(Internet Setting) (Browser), LAN (Wireless LAN) (Others) 4 가 LAN

1 [5 ▼] (SETTING ()) (Internet Setting)

2 TAB () [◀][▶]

3 [1 ▲ ▼] (▲/▼)

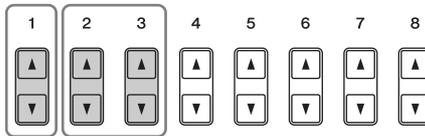
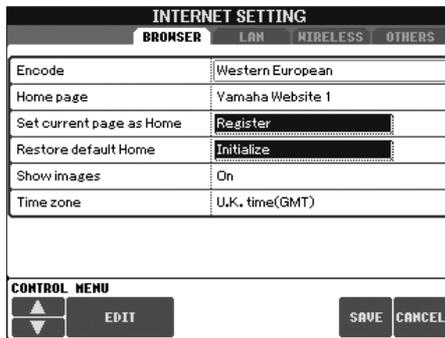


3 4

4 (Edit) [2 ▲ ▼]/[3 ▲ ▼] (EDIT ())

(Edit) 가


5 [2 ▲ ▼] (▲/▼) DATA ENTRY () 가

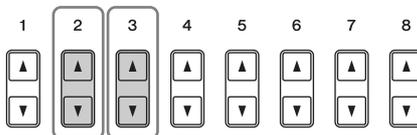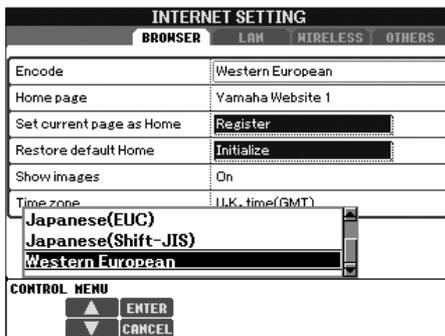

5 6


6 [3 ▲] (ENTER ())
[3 ▼] (CANCEL ())

7 (Internet Setting)
[7 ▲ ▼] (SAVE ())
[8 ▲ ▼] (CANCEL ())

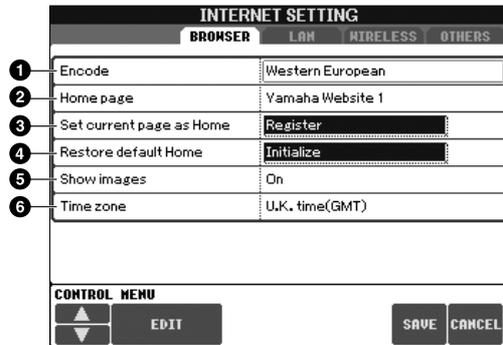

- 1 Encode ()
- 2 Home page ()
- 3 Set current page as Home ()
181 " " "
- 4 Restore default Home ()
- 5 Show images ()
- 6 Time zone ()

LAN

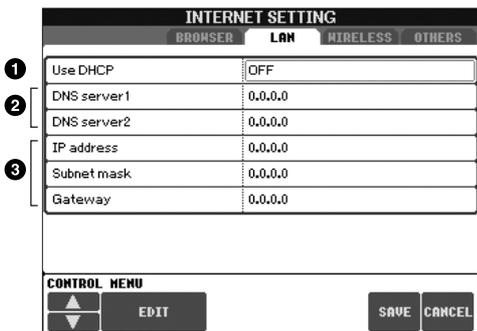

Use DHCP	
DNS Server1	
DNS Server2	
IP address	
Subnet mask	
Gateway	

- 1 Use DHCP (DHCP)
DHCP가
- 2 DNS Server1/DNS Server2 (DNS 1/DNS 2)
DNS "Use DHCP (DHCP)"
"ON ((DNS))" "OFF()"
- 3 IP address/Subnet mask/Gateway (IP / /)
DHCP가
IP "Use DHCP
(DHCP)" "OFF()"


LAN

USB LAN
(Wireless) LAN

LAN

LAN

(Wireless
Game Adaptor)
LAN(Wireless LAN)

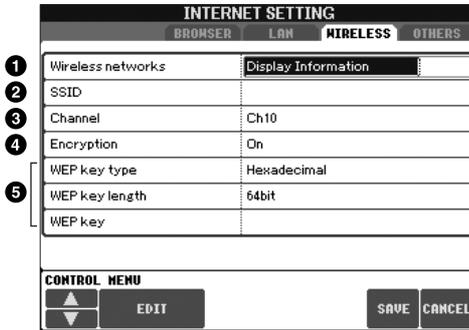

SSID	
Channel	
Encryption	
WEP key type	
WEP key length	
WEP key	


① Wireless Networks ()
(Wireless Network)

② SSID
SSID

③ Channel ()

④ Encryption ()

⑤ WEP key type/WEP key length/WEP key (WEP /WEP /WEP)
가

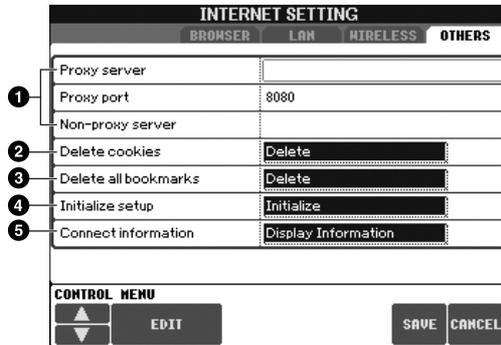

① Proxy server/Proxy port/Non-proxy server (/ /)

② Delete cookies ()

③ Delete all bookmarks ()

④ Initialize setup ()
(Internet Setting)

182

⑤ Connection information ()



(Home)

(Home)

1 (Home)

2 [5 ▼] (SETTING ()) (Internet Setting)

3 TAB () [◀][▶] BROWSER ()

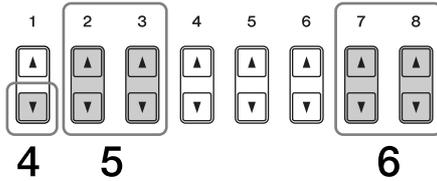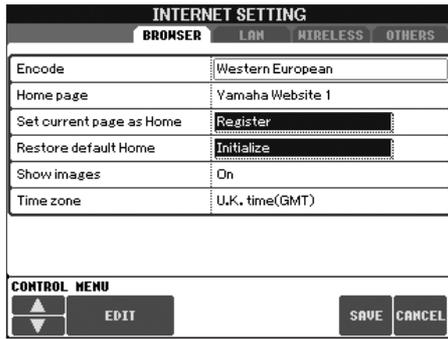



4 [1 ▼] (▼) "Set current page as Home ()"

5 [2 ▲ ▼]/[3 ▲ ▼] (EDIT ()) (Home)

6 가 [7 ▲ ▼] (SAVE ()) [8 ▲ ▼] (CANCEL ())

가

- ()
- 1 [5 ▼] (SETTING ()) (Internet Setting)
 - 2 TAB () [◀][▶] OTHERS ()
 - 3 [1 ▲ ▼] (▲/▼) "Initialize ()"

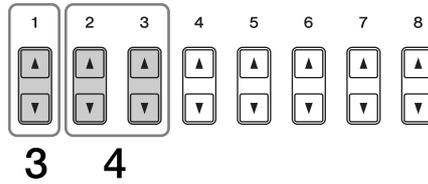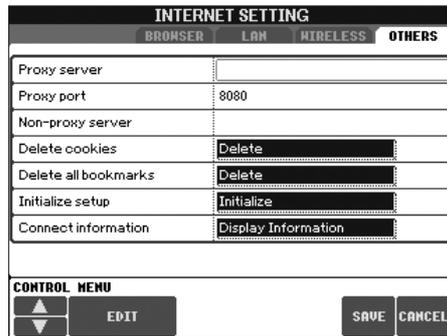

- 4 [2 ▲ ▼] / [3 ▲ ▼] (EDIT ())



(Broadband)	, - 가 / (ADSL)
(Browser)	
(Cookie)	가 가 " "
DHCP	IP (low-level)
DNS	IP
(Download)	" " (Song)
(Gateway)	가
(Home page)	" "
(Internet)	가
IP (IP address)	
LAN	(Local Area Network) (가)
(Link)	가
(Modem)	
NTP	(Network Time Protocol) SSL /
(Provider)	
(Proxy)	가
(Router)	가 가
(Site)	" (website)" 가 "http:// www.yamaha.com/" Yamaha
SSID	가 LAN 가 SSID
SSL	(Secure Sockets Layer)
(Subnet mask)	
URL	(Uniform Resource Locator) URL "http://"
(Web page)	
LAN (Wireless LAN)	LAN
(Wireless Game Adaptor)()	가 LAN 가


(가)

	57
	57
가	58
가	59
	34
	59
	59
가	60
(Vocal CueTIME)	145
	61
(TRANPOSE)	61
TV 가	62
	62
(Karao-Key)	146

(Vocal Harmony) (60)

10 (Vocal Harmony)

1 [MIC SETTING (MIC)/VOCAL HARMONY ()]

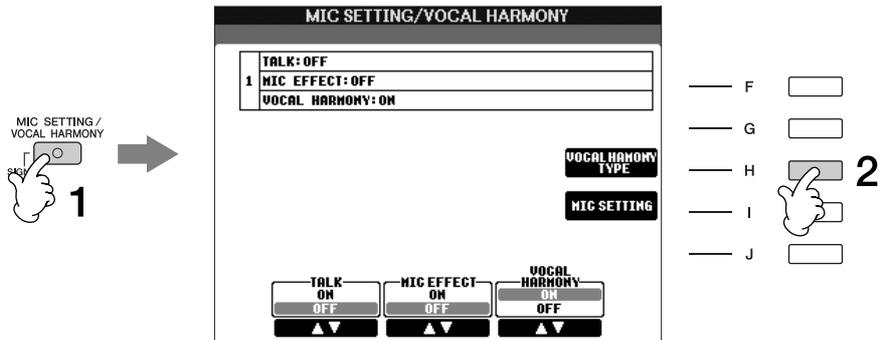

2 [H] (VOCAL HARMONY TYPE ()) VOCAL HARMONY TYPE ()

3 [A] - [J]

(Vocal Harmony)



4 [8 ▼] (EDIT ())


VOCAL HARMONY EDIT (

5 (Vocal Harmony)

[1 ▲ ▼]/[2 ▲ ▼]

[8 ▲ ▼] (RETURN ())

(Vocal Harmony) (Vocal Harmony)

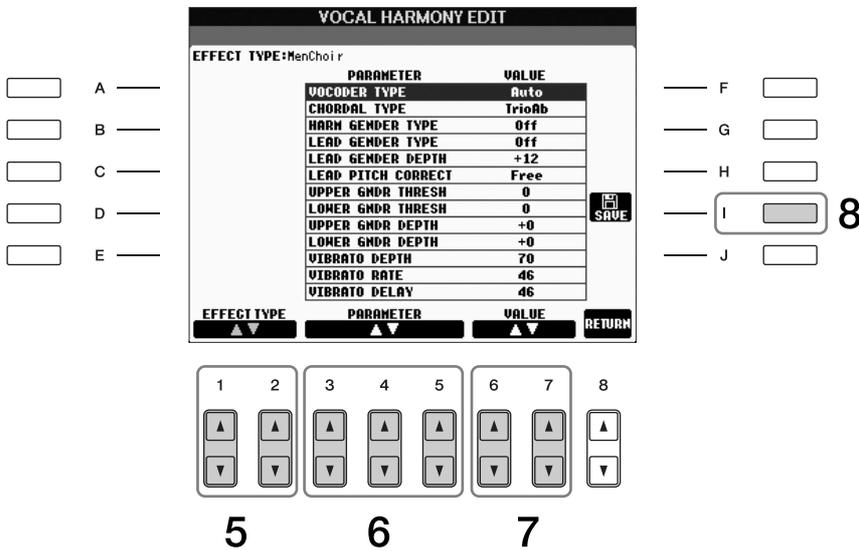

6 [3 ▲ ▼] - [5 ▲ ▼]

(186)

7

8 [I] (SAVE ())
.(73)

(Vocal Harmony)



Harmony)


(Vocal

VOCAL HARMONY EDIT () 가

VOCODER TYPE ()	(190)가 "VOCODER"
CHORDAL TYPE ()	(190)가 "CHORDAL ()"
HARMONY GENDER TYPE ()	Off () Auto ()
LEAD GENDER TYPE ()	(,) (Off) 3 2 Off () Unison () 가 LEAD GENDER DEPTH () Male () Female ()
LEAD GENDER DEPTH ()	TYPE () (Off) LEAD GENDER
LEAD PITCH CORRECT ()	(Off) LEAD GENDER TYPE () (Hard) (Smooth)
UPPER GENDER THRESHOLD ()	(Gender) 가
LOWER GENDER THRESHOLD ()	(Gender) 가
UPPER GENDER DEPTH ()	UPPER GENDER THRESHOLD ()
LOWER GENDER DEPTH ()	LOWER GENDER THRESHOLD ()
VIBRATO DEPTH ()	GENDER TYPE () (Off) . LEAD
VIBRATO RATE ()	() (Off) . LEAD GENDER TYPE
VIBRATO DELAY ()	가 가
HARMONY1/2/3 VOLUME (1/2/3)	(), ()


HARMONY1/2/3 PAN (1/2/3)	(), () () Random () 가 (Harmony) (190)가 "VOCODER ()" "CHORDAL ()" L63>R - C - L<R63 L63>R (Pan) C , L<R63
HARMONY1/2/3 DETUNE (1/2/3)	(), ()
PITCH TO NOTE ()	"ON" " "
PITCH TO NOTE PART ()	Pitch to Note () 가 "ON" 가

1 [MIC SETTING ()/VOCAL HARMONY ()]

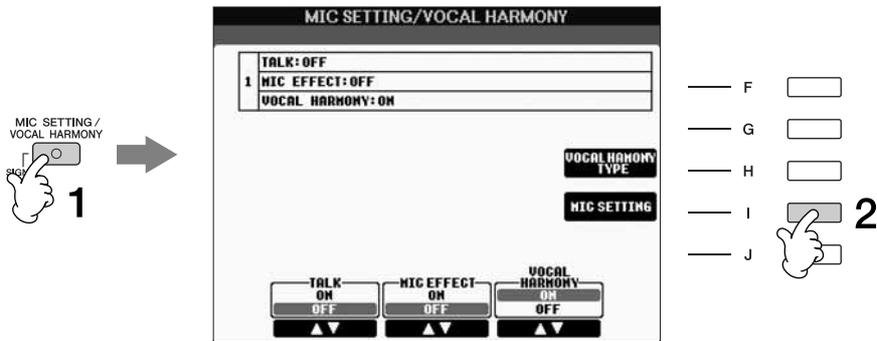

2 [I] (MIC SETTING ()) MICROPHONE SETTING

3 TAB () [◀][▶] OVERALL SETTING ()

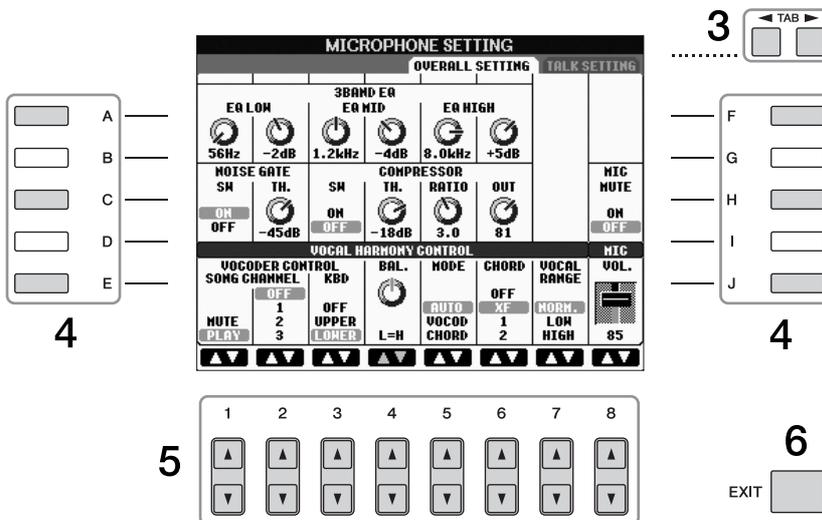

4 [A] - [J] () ()

5 [1 ▲ ▼] - [8 ▲ ▼]

6 [EXIT ()] MICROPHONE SETTING ()

가
OVERALL SETTING ()
가
가

OVERALL SETTING () 가
()

■ 3BAND EQ

EQ()

3 (LOW (), MID () HIGH ())

• Hz

• dB

12 dB

■ NOISE GATE ()

가

• SW ()

(Nose Gate)

• TH. ()

가

■ COMPRESSOR ()

가
가

- SW ()
(Compressor)
- TH. ()
- RATIO ()
- OUT ()

■ VOCAL HARMONY CONTROL ()

가

- VOCODER CONTROL ()
(Vocoder)
- VOCAL HARMONY CONTROL ()
(Vocal Harmony) (190)

SONG CHANNEL ()	<p>MUTE/PLAY (/) "MUTE ()" (Harmony) ()</p> <p>OFF ()/Channel () 1 - 16 "OFF ()" 1 - 16 (PSR-S900 MIDI)</p> <p>SONG SETTING () HARMONY CH () (145)</p>
KEYBOARD ()	<p>OFF ()</p> <p>UPPER ()</p> <p>LOWER ()</p>

- BAL. ()
() (Vocal Harmony)
(Vocal Harmony)

L<H63 (L: (Lead Vocal), H: (Vocal Harmony))
(Vocal Harmony) . L63>H

- **MODE ()**
 가 (Vocal Harmony) 3 (Vocal Harmony)
 가 3가

AUTO ()	[ACMP] 가 [LEFT]가 ON () CHORDAL () VOCODER ()
VOCODER ()	(Vocoder) 가 / (Song) (189)
CHORDAL ()	LEFT (Voice) ([ACMP] [LEFT]), 3가 . (.)

- **CHORD ()**
 가

OFF ()	
XF	(Vocal Harmony) XF 가
1 - 16	

- **VOCAL RANGE ()**
 가


Normal ()	
Low ()	
High ()	가

- **MIC ()**
 가

- **MUTE ()**
 ON ()
- **VOLUME ()**


(Talk Setting)

- 1 [MIC SETTING () / VOCAL HARMONY ()]
MIC SETTING () / VOCAL HARMONY ()

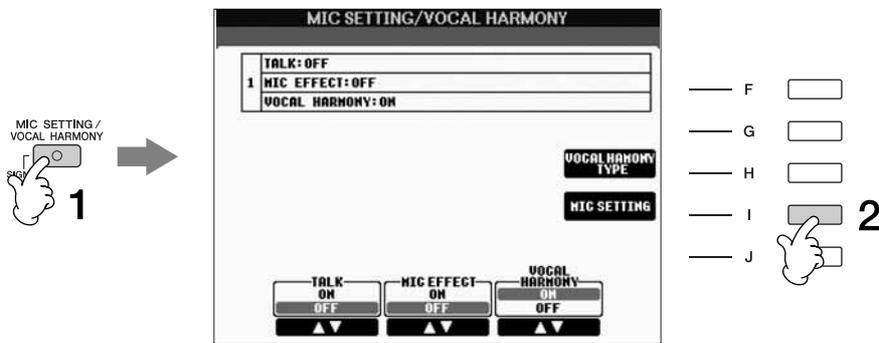

- 2 [I] (MIC SETTING ()) MICROPHONE SETTING ()

- 3 TAB () [◀][▶] TALK SETTING ()

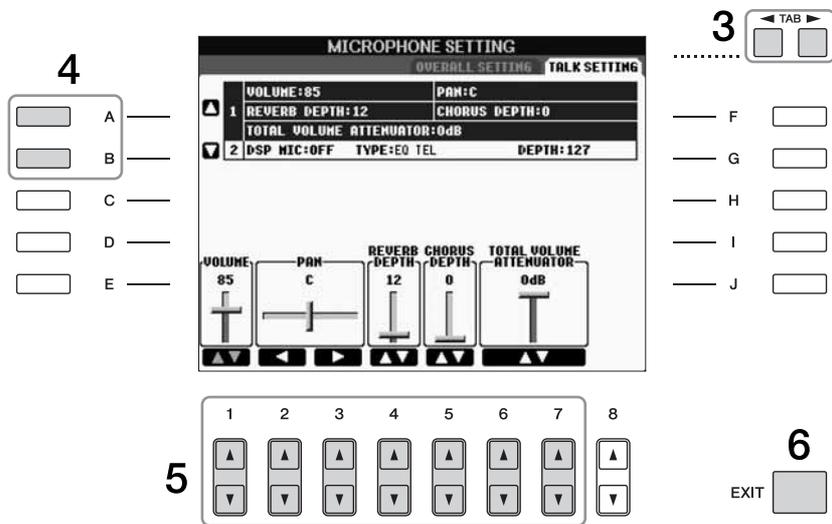

- 4 [A]/[B] () (192)

- 5 [1 ▲ ▼] - [7 ▲ ▼]


- 6 [EXIT ()] MICROPHONE SETTING ()



가 TALK
SETTING ()
가
가

TALK SETTING () 가
()

VOLUME ()	
PAN ()	
REVERB DEPTH ()	
CHORUS DEPTH ()	
TOTAL VOLUME ATTENUATOR ()	()
DSP MIC ON/OFF (DSP /)	() DSP ON () OFF
DSP MIC TYPE (DSP)	DSP
DSP MIC DEPTH (DSP)	DSP

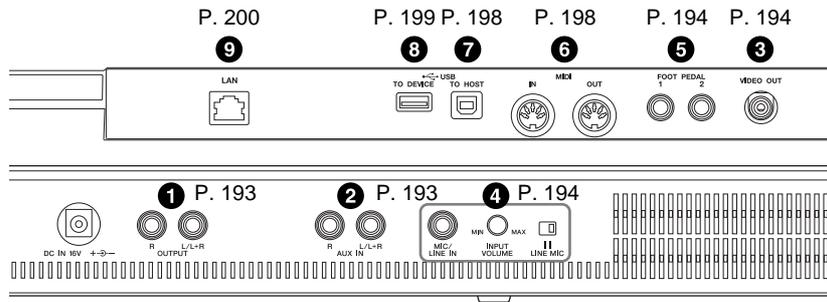

! 가 (0) 가

참고

(0)


1 [OUTPUT ()]

LINE IN () [MIC ()]
가

! 가


- [OUTPUT ()] [AUX IN (AUX)]
[OUTPUT ()] [AUX IN (AUX)]
가 가 가

[MASTER VOLUME ()]
OUTPUT () [L/L+R]/[R] ()
[L/L+R]

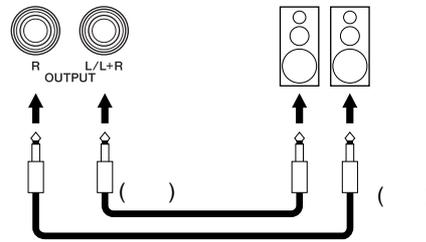

가
2 [AUX IN ()]

(LINE OUT ()) AUX IN (AUX)
[L/L+R]/[R]

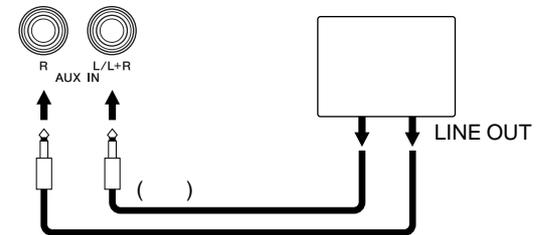

! 가

참고

- [MASTER VOLUME ()] [L/L+R]
- [AUX IN]

여기를 다른 기기와의 함께 사용

TV
(3) [VIDEO OUT ()] (PSR-S900)


TV ,가 ()
 TV 59

참고

- PAL
- LYRICS (가)/TEXT ()가 (Screen Out)
- OUT 가 VIDEO
- () TV

1 [FUNCTION] [J] (UTILITY) TAB [◀][▶]
 SCREEN OUT

2 [1 ▲ ▼]/[2 ▲ ▼] "NTSC" "PAL"
 [3 ▲ ▼]/[4 ▲ ▼] (LCD) 가 / (LYRICS/ TEXT) (Video Out)

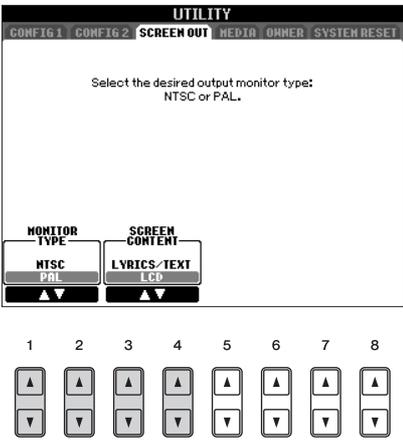

(4) [MIC () /LINE IN ()] (PSR-S900)

[MIC () /LINE IN ()] (1/4") (Song) (KARAOKE (가))

57
 [LINE MIC ()] "LINE ()"




(Footswitch) (Foot Controller)
(5) [FOOT PEDAL 1/2]]

2 ()
 FOOT PEDAL ()


- FOOT PEDAL () 1
 Yamaha FC4 FC5

- FOOT PEDAL () 2
 (PSR-S900) Yamaha FC4 FC5 (Super Articulation Voice) (83)
 (PSR-S700) Yamaha FC7


() .

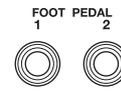

(Foot Pedal)

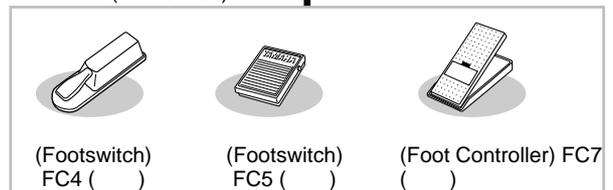

악기를 다른 기기와 함께 사용

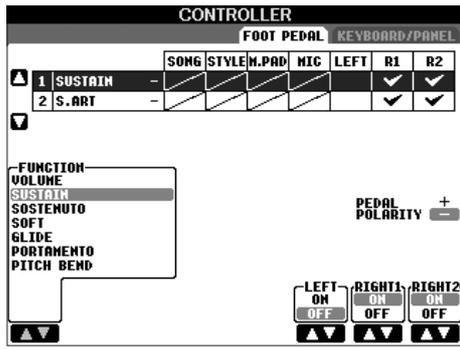

(Style) / 가

1 [FUNCTION] [D] CONTROLLER TAB [◀][▶]
FOOT PEDAL

2 [A]/[B]

3 [1 ▲ ▼] 2

4 [2 ▲ ▼] - [8 ▲ ▼]

196

5 (Registration Memory)
(138),

[참고] (Registration Memory)
(138),

[] (PEDAL POLARITY)

"*"


가

VOLUME ()*	
SUSTAIN ()	가 ()
SOSTENUTO ()	(Sostenuto)
SOFT ()	(Soft) (Voice)
GLIDE ()	가
PORTAMENTO ()	가 () 가 () Console) (Portamento Time) (Mixing (93) (Natural Voice)
PITCH BEND ()*	
MODULATION ()*	Articulation Voice) 가 S. (PSR-S900) (83) (S.)
S.ARTICULATION (S.) (PSR-S900)	/ 가 S. (S. Articulation)
DSP VARIATION (DSP)	(Voice Effect) DSP VARIATION(DSP)
HARMONY/ECHO (/)	HARMONY/ECHO (/) (Voice Effect)
VOCAL HARMONY ((PSR-S900))	(Vocal Harmony)
TALK () (PSR-S900)	MIC SETTING () Talk ()
SCORE PAGE () +	
SCORE PAGE () -	
LYRICS PAGE (가) +	가
LYRICS PAGE (가) -	가
TEXT PAGE ((PSR-S900)) +	
TEXT PAGE ((PSR-S900)) -	
SONG PLAY/PAUSE (/)	SONG () [▶/] (PLAY/PAUSE (/))
STYLE START/STOP (/)	STYLE CONTROL () [START/STOP (/)]
TAP TEMPO ()	[TAP TEMPO ()]
SYNCHRO START ()	[SYNC START ()]
SYNCHRO STOP ()	[SYNC STOP ()]
INTRO () 1 - 3	[INTRO () I-III]
MAIN () A - D	[MAIN VARIATION () A-D]
FILL DOWN ()	
FILL SELF ()	
FILL BREAK ()	

악기를 다른 기기와 함께 사용

FILL UP ()	
ENDING () 1 - 3	[ENDING ()/rit. I-III]
FADE IN/OUT (/)	[FADE IN/OUT (/)]
FINGERED/FING ON BASS (/)	(Fingered) (On Bass) (106)
BASS HOLD ()	(Accompaniment Style) (Style) 가 "AI FULL KEYBOARD ()"
PERCUSSION ()	[4 ▲ ▼] - [8 ▲ ▼]
RIGHT1 ON/OFF (1 /)	PART ON/OFF (/) [RIGHT () 1]
RIGHT2 ON/OFF (2 /)	PART ON/OFF (/) [RIGHT () 2]
LEFT ON/OFF (/)	PART ON/OFF (/) [LEFT () 1]
OTS+	(One Touch Setting)
OTS -	(One Touch Setting)
참고 (Foot Pedal) (Sostenuto) (Portamento) (Organ Flute Voice)	
가 [2 ▲ ▼] - [8 ▲ ▼]	
SUSTAIN () "HALF PEDAL POINT (1/2)" "RIGHT ()	
1," "RIGHT () 2" "LEFT ()"가	
SONG (), STYLE (), MIC ()*, M.PAD (), LEFT (), RIGHT ()1, RIGHT ()2	* PSR-S900 가
UP/DOWN (/)	GLIDE () PITCH BEND ()가
RANGE ()	GLIDE () PITCH BEND ()가 (Pitch Bend Range) (93) (Mixing Console)
ON SPEED ()	GLIDE ()가
OFF SPEED ()	GLIDE ()가
KIT	PERCUSSION () 가
PERCUSSION ()	PERCUSSION () (KIT) 가

MIDI
(6 [MIDI])

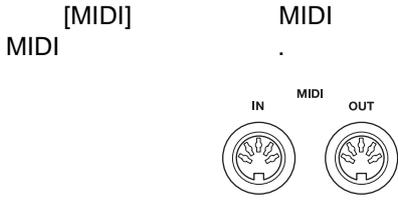

MIDI IN ()	MIDI	MIDI
MIDI OUT ()	MIDI	

MIDI

- MIDI ? 201
- MIDI 203
- MIDI 204

, USB



(6 [MIDI] 7 [USB TO HOST])

[USB TO HOST] [MIDI]
MIDI

USB MIDI

참고

USB 가 , MIDI

참고


(Driver)

. USB-MIDI

(4)

([USB TO HOST] [MIDI]
가)

- **[USB TO HOST]**
USB
USB (USB)
[USB TO HOST] USB
USB-MIDI

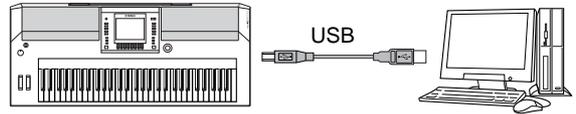

참고

[USB TO HOST] [USB TO DEVICE]
[USB TO DEVICE] [USB TO HOST]
가 USB 가

DEVICE]

[USB TO



[USB TO HOST]

[USB TO HOST]

가 가

- [USB TO HOST]
(, ,) 가
- / / USB


가 가 ()

- USB 가 6 USB /


참고

- USB
- USB USB

• [MIDI]
MIDI 가
MIDI 가
MIDI OUT ()
[MIDI IN ()]
[MIDI OUT ()] MIDI IN ()

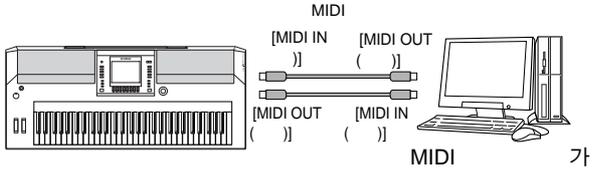

USB ()
MIDI MIDI
MIDI OUT ()
[MIDI IN ()]
[MIDI OUT ()] MIDI IN ()

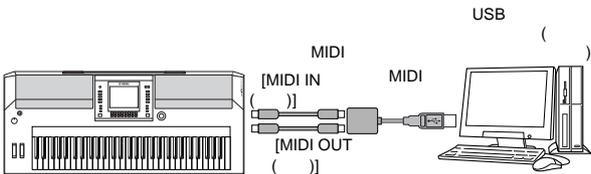

참고

MIDI

USB LAN USB

⑧ [USB TO DEVICE])

[USB TO DEVICE] 가

■ USB LAN

(171).

■ USB USB

참고

[USB TO HOST] [USB TO DEVICE]
[USB TO DEVICE] [USB TO HOST]
가 USB 가

. [USB TO HOST]

USB

USB

USB (USB / 23 "USB)

1 USB [USB TO DEVICE]

2

(Tab) [◀] [▶])
USB (USB 1, USB 2)

참고

USB



[FUNCTION] [J] UTILITY TAB [◀][▶] MEDIA [F]
[A]/[B]

참고

가 [USB TO HOST] USB 가
[USB TO DEVICE]
USB

USB

72

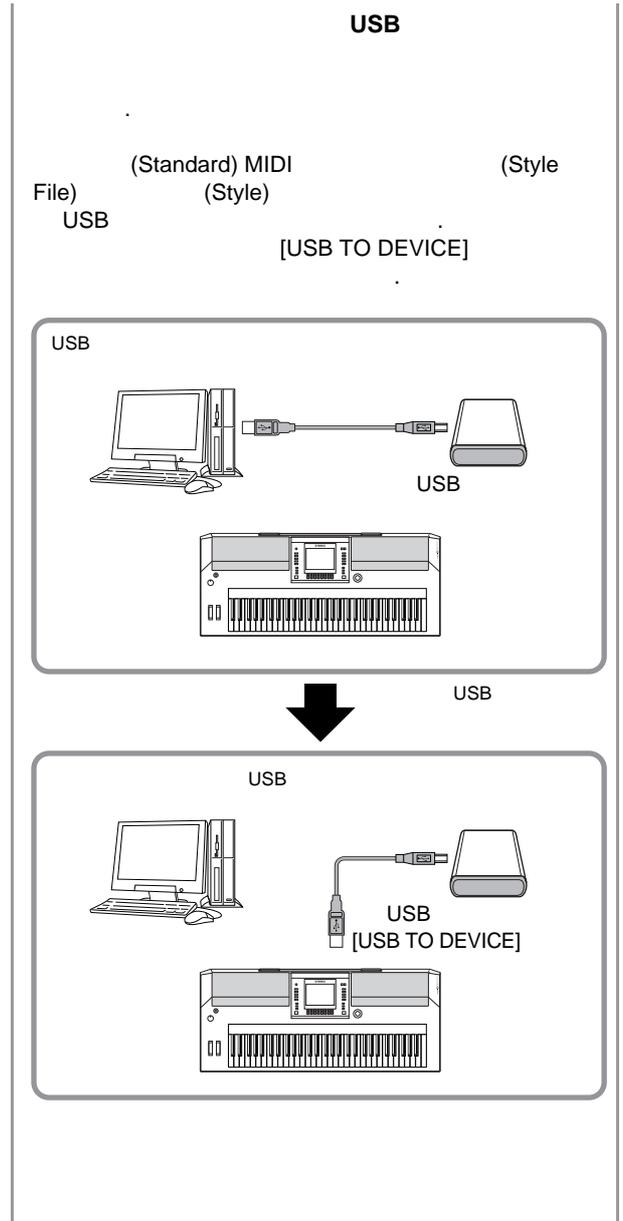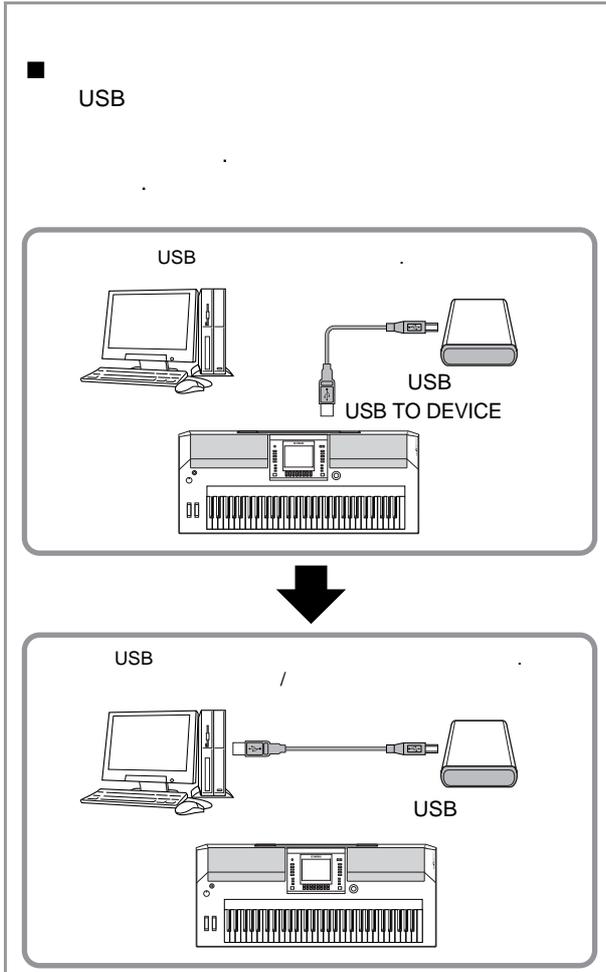

⑨ [LAN])

[LAN]


3가

171


MIDI ?

MIDI / 가
 . MIDI

(String)

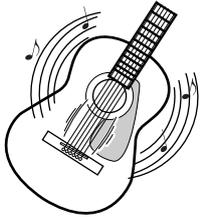

가

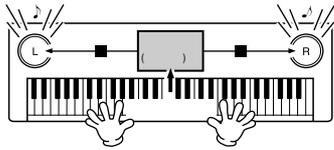


()

()

CD()

MIDI ()

()

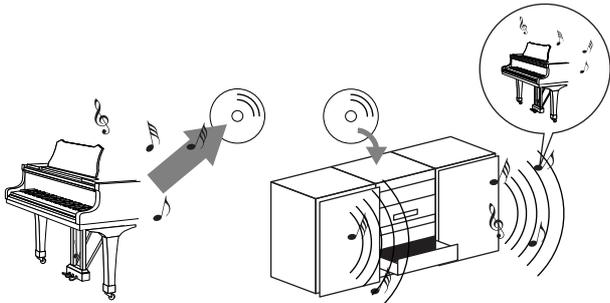


가

CD

가

CD

(MIDI)

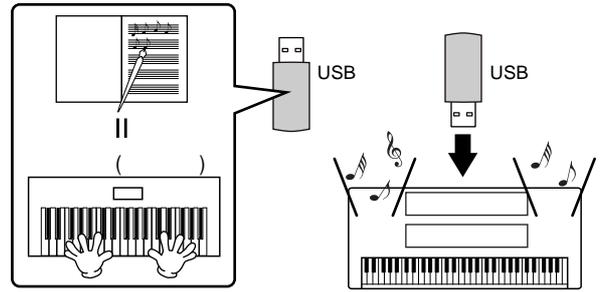

참고

[AUX OUT]


MIDI

)

가

S700
 가

PSR-S900/

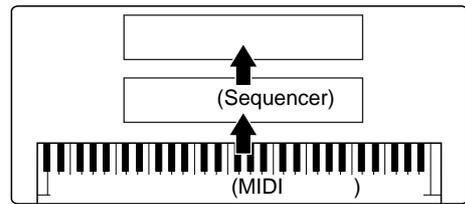

가

참고

PSR-S900/S700

	"C" 4
" "	" "
" "	" "
" "	" "
()	01 ()
()	60 (C3)
()	(4)
()	120 ()

MIDI (Musical Instrument Digital Interface)
 (Style) (Song) MIDI
 MIDI 가 가 (Note), (Program Change),
 Change) MIDI

MIDI , MIDI
 MIDI

참고
 MIDI 가

MIDI (System) (Channel) 가


(Channel Message)
 PSR-S900/S700 16 MIDI
 ([USB] MIDI 16
 32). " " 16
 / (Note ON/OFF),
 (Program Change) 16

	/
(Note ON/OFF)	.
(Program Change)	MSB/LSB ()
(Control Change)	(panpot) (), MODULATION ()
Bend (Pitch)	PITCH BEND ()


참고
 (Song) (Style) MIDI

MIDI MIDI 16 MIDI
 MIDI 1 - 16 MIDI
 16

MIDI TV TV 가 TV
 TV

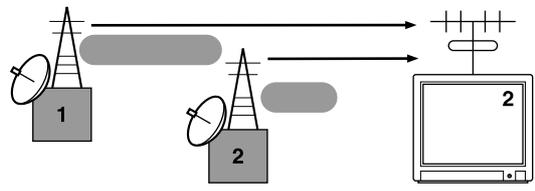


MIDI MIDI (MIDI) MIDI
 MIDI (MIDI (Receive Channel)) (Transmit Channel) 가

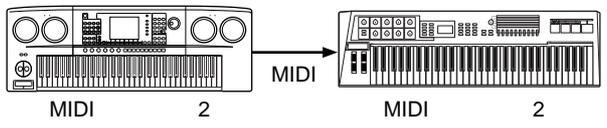

참고
 LOCAL CONTROL (207) MIDI
 (Style)

악기를 다른 기기와 함께 사용

: (Style)

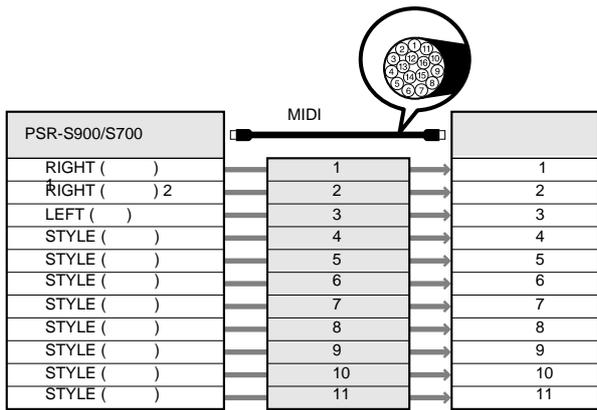


MIDI 가 MIDI (207).
(208) 가 .

MIDI (System Exclusive) (Realtime) 가 .

	/
(System Exclusive Message)	(Console)) (Mixing
(Realtime Message)	/ ,


PSR-S900/S700 / MIDI (Data Format) (Data List) (Implementation Chart) (Data List) Yamaha . (5 .)

MIDI 가 (1~16))

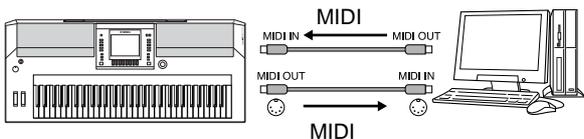

XG- 가 MIDI 1-16 MIDI (MIDI Receive) MIDI/USB 1 "SONG ()" (208) .

■ MIDI

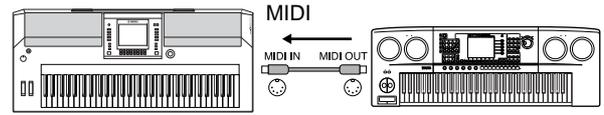

MIDI (Data Compatibility)

PSR-S900/S700 MIDI 가 , PSR-S900/S700 . MIDI

(Sequence Format)

(Song) 가 MIDI PSR-S900/S700

- SMF(MIDI) 가 (Format) 0 MIDI (Format) 1, 가 MIDI (Format) 0 가 (Format) 0
- PSR-S900/S700 (Format) 0 (Format) 1
- PSR-S900/S700 SMF (Format) 0

● ESEQ PSR-S900/S700 Yamaha MIDI Yamaha

• PSR-S900/S700 ESEQ

- XF Yamaha XF SMF (Standard MIDI File) 가 PSR-S900/S700 가 (SMF MIDI . PSR-S900/S700 SMF (Format) 0 1 SMF (Format) 0 " " .)

● (Style File) (SFF) Yamaha

여기를 다른 기기와의 함께

MIDI (Voice Allocation Format)
 (Voice) " " ()

가 MIDI . PSR-S900/S700

참고

가 가

● **GM (System Level) 1**
 가

GM (System Level) 1 MIDI

● **GM (System Level) 2**
 "GM (System Level) 2" "GM (Song)
 (System Level) 1"

가,

● **XG**
 XG 가 GM 1
 (Voice) (Voice)

Yamaha가

XG (Voice) PSR-S900/
 S700 (Song) XG 가

● **DOC (Disk Orchestra Collection)**

PSR-S900/S700
 Yamaha MIDI

● **GS**
 GS Roland Corporation
 Yamaha XG , GS (Voice)
 (Drum) , (Voice)
 가

GM

MIDI (Setting)

MIDI
 . PSR-S900/S700 MIDI

10 USER ()
 MIDI
 SETUP ()
 USB
 (가 [FUNCTION] [J]
 UTILITY TAB [◀][▶] SYSTEM RESET).


1 (MIDI)
 Function [I] MIDI



2 TAB () [◀] PRESET ()
 . [A] - [J] MIDI

USER ()
 TAB () [▶] USER ()
 . [A] - [J] MIDI

3 [8 ▼] (EDIT ())
 MIDI

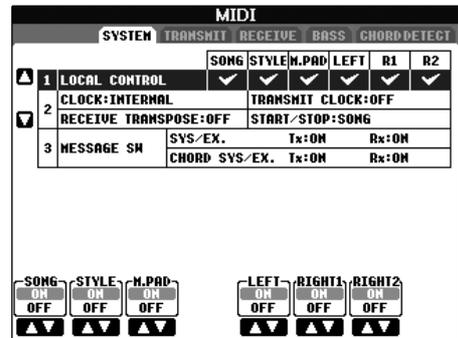

악기를 다른 기기와 함께 사용

4 TAB () [◀][▶]

SYSTEM ()	MIDI (System Setting)(207)
TRANSMIT ()	MIDI (Transmission Setting)(207)
RECEIVE ()	MIDI (Reception Setting)(208)
BASS ()	MIDI (Style)(209)
CHORD DETECT ()	MIDI (Style)(209)

5 [EXIT ()] MIDI
(PRESET ())

USER ())

6 TAB () [◀][▶]
USER ()
(73)

MIDI




All Parts ()	(Song) (RIGHT () 1, 2 LEFT ())
KBD & STYLE ()	가 "All Parts ()" RIGHT () 1 2 "UPPER ()" "LOWER ()"
Master KBD (KBD)	(/)
Song ()	(Song) 1 - 16 (Song)
Clock Ext	((Song) (Style)) MIDI MIDI
MIDI Accord1	MIDI (Accordion) / MIDI (Style)
MIDI Accord2	MIDI / MIDI "MIDI Accord 1"
MIDI Pedal1	MIDI (Style) / MIDI (
MIDI Pedal 2	MIDI (Style)
MIDI OFF	MIDI 가

악기를 다른 기기와 함께 사용

SYSTEM ()
MIDI (System Setting)

204 " " 4
 SYSTEM ()

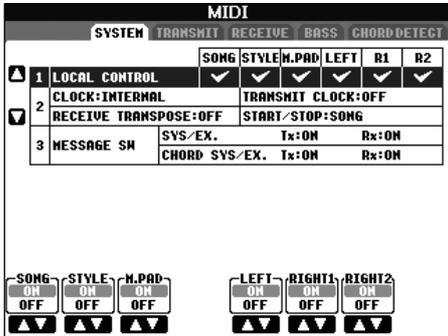

■ LOCAL CONTROL ()
 (Local Control)
 (Local Control) "ON"

()
 (Local) "OFF"

가

MIDI

■ (Clock)

● CLOCK ()
 가

MIDI
 가

INTERNAL () (Clock)
 , MIDI MIDI

MIDI, USB 1 USB 2
 가 (

MIDI IN) MIDI (MIDI, USB
 (Tempo)
 1 USB 2)가
 (Main) "Ext."

● TRANSMIT CLOCK ()
 MIDI (F8) . OFF ()
 (Song) (Style)
 MIDI / (Start/Stop)

● RECEIVE TRANPOSE ()
 (61) MIDI 가

● START/STOP (/)
 FA () FC () 가 (Song)
 (Style)

■ MESSAGE SW


● SYS/EX.
 "Tx" MIDI (System
 Exclusive) MIDI "Rx"
 MIDI
 (System Exclusive) MIDI

● CHORD SYS/EX.

"Tx" MIDI (,
) MIDI "Rx"
 MIDI

TRANSMIT ()
MIDI (Transmit Setting)

204 " " 4
 TRANSMIT ()
 가 MIDI 가 MIDI

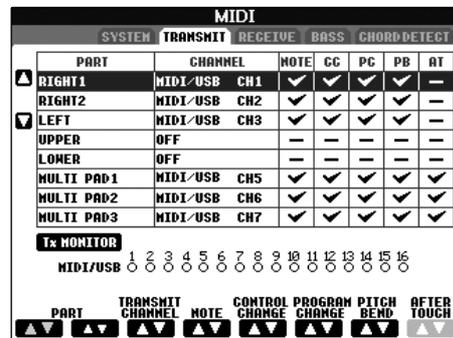

● 2

● UPPER ()
 (Voice) (Split Point)
 (RIGHT
 () 1 / 2).

● LOWER ()
 (Voice) (Split Point)
 . [ACMP]

/

● Tx MONITOR

가 (1-16)

참고

가

MIDI

MIDI

가

참고

(Song)

(Song) 1-16

(Song)

■

()

MIDI

MIDI TRANSMIT/RECEIVE (/)

- () 168
- CC (CONTROL CHANGE ()) 168
- PC (PROGRAM CHANGE ()) 168
- PB ((Pitch Bend)) 168
- AT ((Aftertouch)) 168

RECEIVE ()

MIDI (Receive Setting)

MIDI										
SYSTEM	TRANSMIT	RECEIVE	BASS	CHORD DETECT						
CHANNEL	PART	NOTE	CC	PC	PB	AT				
MIDI/USB 1 CH1	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH2	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH3	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH4	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH5	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH6	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH7	SONG	✓	✓	✓	✓	✓				
MIDI/USB 1 CH8	SONG	✓	✓	✓	✓	✓				

Rx MONITOR																
MIDI/USB1	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
MIDI/USB1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
USB2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

CHANNEL	PART	NOTE CHANGE	CONTROL CHANGE	PROGRAM CHANGE	PITCH BEND	AFTER TOUCH
▲▼	▲▼	▲▼	▲▼	▲▼	▲▼	▲▼

204 " " 4

RECEIVE ()

가 MIDI

가

MIDI

- PSR-S900/S700 USB 32 (16 X 2) MIDI

- 2

• KEYBOARD ()

• EXTRA PART () 1-5

MIDI

5 가

S700

5

(

32

PSR-S900/

)

● Rx MONITOR ()

가

(1-16)

참고

(Parameter Lock)

, ,) " " (137) .

■ USB

MIDI

MIDI /


MIDI

/ 32

(16 X 2)

[USB]

[MIDI]

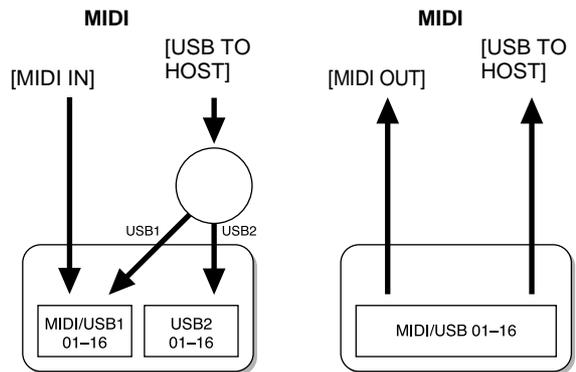


악기를 다른 기기와 함께 사용

BASS ()

MIDI

204 " " 4
 BASS ()
 MIDI (Style)
 "ON ()"
 / (Style)
 . [ACMP]
 "ON ()"
 MIDI

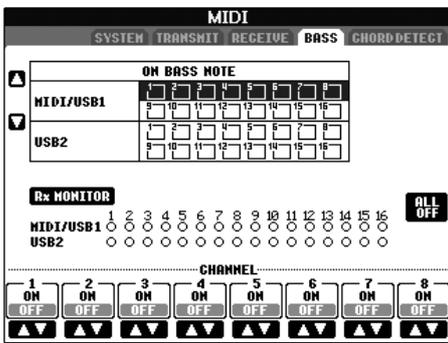


"ON/OFF (/)"
 OFF ()

CHORD DETECT ()

MIDI


204 " " 4
 CHORD DETECT ()
 MIDI (Style)
 "ON ()"
 / (Style)
 . [ACMP]
 "ON ()"
 MIDI

BASS ()

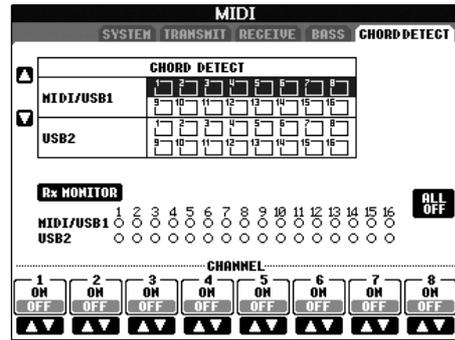

(Voice) 가 (Voice)
 (Voice) MIDI
 가 MSB/LSB

: [FUNCTION] [J] UTILITY TAB [◀][▶]
 CONFIG 2. DISPLAY VOICE NUMBER () ON() OFF()

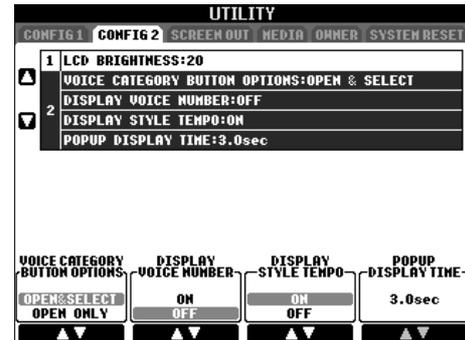

참고

- MIDI "1" 0
- GS (Voice) 가 ()



- 가
- (female) , (male)
AC
- 가
- 가
- 가 ()
- [LCD CONTRAST (LCD)]
- (19).
-
- [MASTER VOLUME ()]
- 가 PART ON/OFF ()
/) [RIGHT 1 (1)]/[RIGHT 2 (2)]
[LEFT ()]
- BALANCE ()
(41).
- ON ()
(108).
- 가
- [FADE IN/OUT (/)]
가 [FADE IN/OUT (/)]
- (Local Control) ON ()
(207).
- (215)
가 가
- (Song)/ (Style)
- BALANCE ()
(41).
- (Performance Assistant)
(44).
- (Scale) 가 " (Equal)"
- (Scale Tune)
" (Equal)" (87)


- (Voice) 가
- (Voice) 가
- (Main) 가
- USB 가
USB
(Main) 가



- / 가
(19).
- (.MID,)가
- USB 가
- 50 가
50 가



- [EXIT ()] ?

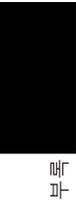

(Voice)

(Voice Selection)

(Voice)

- 가 (86).
- PART SELECT ((Voice)) [RIGHT () 1]
- PART SELECT ((Voice)) [RIGHT () 2]
- PART SELECT ((Voice)) [LEFT ()]

(Mixer) (Style) (Song)
(Voice) () 가

- VOICE () (Style) (Song)
/ (Voice) ()
- (Song) 가
- (Style) (Style)

(Tremolo)/ (Trill) (Organ Flute Voice)

- (Tremolo) / (Harmony/Echo)
(Organ Flute Voice) (Trill)

(Harmony)

- (Full Keyboard)
(AI Full Keyboard) (107)

(Voice)

- (Voice) (Voice Set)
(105).

(Voice)

- (Mixing Console)
FILTER () (Brightness)
(Harmonic Content) / (93).
- 가
- (95).
- (Master) EQ " EQ
(98) " 6
[8▲▼] (TOTAL GAIN ADJ.)

- VOICE SET () 가
(101)

- (Mixing Console) (Filter)
(Filter) (Harmonic
Content) (Brightness)
(93).

(Song Auto Revoice)

(Voice)

- (Song) 가 (Voice)
(Song Auto Revoice) 가

(Voice) (Voice) 가

- (Voice)

(Step) (Preset)

- (Voice)

(Style)

- STYLE CONTROL () [START/STOP (/)]
- MIDI (Clock) "EXTERNAL ()"
"INTERNAL ()"
(207).

- (Auto Accompaniment)
[ACMP]

- (Style) 가 (120KB)
(Style)

가

- (Data List) "
(Chord Types Recognized in the Fingered
Mode)" (Data List)
Yamaha (5)

- 가 (107).

(Synchro Stop)

- 가 " (Full Keyboard)" "
(AI Full Keyboard)"
- [ACMP]
(Synchro Stop) 가 "
(Full Keyboard)" (AI Full
Keyboard)"
- [ACMP]

- 가 가
가 " (Full Keyboard)" "
(AI Full Keyboard)" 가

(107).

- (Style) (Style) (Tempo) STYLE CHANGE BEHAVIOR () TEMPO ()
- (Style) (Song) 가 (Style) (Song) 가 (Style) (Song)
- (Song) (Style) (Synchro Start)
- (Song) (Style) (Style)
- (Song) (Style) (Voice) 가 가 (Voice)
- (Part) 가 (Part) 가 (Part) 가 (Part)
- (Assembly)(Play Type) "Off()"
- [1 ▼]-[8 ▼] (TAB () [◀] BASIC () [F] REC CH).
- (Channel Edit) BASS-PHR2 (Preset Style) BASS-PHR2

(Registration Memory)

- (Registration Memory) / (Song/Style) / (Song/Style) USB USB 가 (Song/Style) / (Song/Style) 가 USB
- 가 (Registration Memory) (Registration Sequence) 가 (136)
- (Registration Memory) (Freeze) (Registration Memory) (Left Part) / (On/Off) (Style) / (Left Part On/Off) (Freeze) "STYLE ()" (138)

- (User)/USB (Registration Memory) (File Selection) (Preset Voice) (Preset Voice) (User)/ (Voice) (Voice) (User)/USB (Voice)가 (User)/USB 2 (Preset Voice) 2) (Voice Set) (Voice) (User)/USB Memory) (Registration (Preset (User)/USB (Voice) (User)/USB (Voice)

(Song)

- (Song) (Song)
- (Song) 가 (300KB) (Song)
- (Song) " (New Song)" ((Song) (Song Selection) (Song) (36)
- SONG () [▶/||] (PLAY/PAUSE (/))
- (Song) (Song) SONG () [] (STOP ()) (Song) 가 ("Prot. 2 Edit" (Song)), ("Prot.2 Orig") (Song) 가 (Song) ("Prot. 2 Edit" (Song)), ("Prot. 2 Orig") (Song) 가 (Song) ("Prot. 2 Edit" (Song)), 가 (Song) "Prot.2 Orig")
- 가 (Song) ("Prot. 2 Edit" (Song)), (Song) "Prot.2 Orig")
- 가 (Song) ("Prot. 2 Edit" (Song)), 가 (Song) "Prot.2 Orig")
- MIDI (Clock) 'EXTERNAL ()' "INTERNAL ()" (207)
- (Song) (Song) (Guide) " " () [GUIDE ()]

(Song)

- (Song) USB
- (Song) USB
- 가 [◀◀]/[▶▶] (REW()/FF ((Song Position))
- 가
- **AB (Repeat) B**
- A . A B
- **(Song)**
- "OFF ()"
- "OFF ()' (146).
- 가 (Song)("Prot. 2 Edit" (Song)) SmartMedia
- 가 (Song) SmartMedia/ [USB TO USB DEVICE]

(SCORE)

(tie)

- (Step Record) (153) (Tenuto)"
- [H] 가
- (Song) "
- (free tempo)" (Song)
- 가
- 가
- / 가
- (Track) 1 (Track) 2 "AUTO ((145).
- 가
- **(Dotted note)가**
- 가
- 가 (Song) 가
- 가

(GUIDE)

- 가 **(Track) 1**
- 가 (Track) 1 (Track) 1 (145).

가 (KARAOKE)

- 가 가
- (Song) 가 가
- 가 가
- 가 가 (Song)
- **(Lyrics Background)**
- 가 가 (Lyrics Background)

		PSR-S900			PSR-S700		
		AWM					
		61 ((Initial Touch) C1 - C6)					
		320 X 240	QVGA	LCD	320 X 240	QVGA	LCD
,가							
()		128			96		
		392 GS + GM2 + GS	+ 480 XG 19 /SFX		317 GS + GM2 + GS	+ 480 XG 16 /SFX	
S.		23			-		
가		15			10		
Live! Voice (!)		20			14		
Cool! Voice (!)		26			18		
Sweet! Voice (!)		22			11		
Organ Flutes! Voice (!)		10			10		
Regular Voice ()		276			254		
()							
		/ /DSP			6		
		1			-		
		/ /DSP			: 34 + 3 : 29 + 3 DSP 1: 191 + 3 DSP 2-4: 106 + 10		
EQ		5			+ 2		
EQ		28					
		60 + 10			-		
		305			205		
		281			193		
		24			12		
가 /							
OTS()					4		
OTS							
RAM					120KB		
					5		
		Follow Lights, Any Key, Karao-Key, Vocal CueTIME			Follow Lights, Any Key, Karao-Key		
					16		
RAM					300KB		
USB					-		
		4 X 95			4 X 80		
		LAN ,			(LAN),		
					(USB TO DEVICE)		

		PSR-S900	PSR-S700
	USB		
	(2HD, 2DD)	(USB TO DEVICE)	
		(USB TO DEVICE)	
	()	1.4MB	560KB
	(SmartMedia)	(USB TO DEVICE)	
		5 - 500,	
		Bell on/off	
		8	
	/		
		6 (, , , , ,)	
		/ /	
		9	
	USB TO HOST		
	USB TO DEVICE		
		PHONES, MIDI (IN, OUT), FOOT PEDAL (1, 2), AUX IN (R, L/L+R), OUTPUT (R, L/L+R), LAN	
		MIC (INPUT VOLUME, MIC/LINE IN), VIDEO OUT	-
		VOLUME, SUSTAIN, SOSTENUTO, SOFT, GLIDE, PORTAMENTO, PITCHBEND, MODULATION, S.ARTICULATION (PSR-S900), DSP VARIATION, SONG PLAY/PAUSE, STYLE START/STOP	
/		12 W × 2	
		(12 cm + 4 cm (dome)) × 2	(12 cm + 5 cm) × 2
		40W	35W
[W × D × H]		1003mm × 433mm × 148mm (39 5/8" × 17 1/8" × 5 7/8")	
		11.5kg (25lbs., 5 5/8oz)	
		HPE-150/HPE-30	
		FC4/FC5	
		FC7	
		UD-FD01	
	AC	PA-300B/PA-300	
		(PSR-900/700	L-6/L-7 L-6

*

. Yamaha Corp.

Yamaha

1 - 16 152, 162

가

가 (Karaoke) 57
가 (Lyrics) 58, 170
 (Keyboard Parts) 84
 ((Music Finder Records)) ... 111
 79
 79
 28
) 180

() 147
() 118
(Record) 43

(Direct Access) 67
() 32
(Demo) 24
 (Data List) 5
 (Syncho Start)() 141
 (Syncho Start)() 48
 (Syncho Stop Window) 109
 (Syncho Stop) 49
 (Rewind) 142
(Drum) 83

(Repertoire) 56
(Revoice) 94

(Microphone) 57, 187
(Top) 142
 147
 (Multi Pad Creator) 132
(Multi Pad) 13
 66
 (Main Display) 26, 68
(Metronome) 34
(Contrast) 19
 (Modulation Wheel) 33
 146
 (Wireless Game Adaptor) 171, 183
(Wireless) LAN 180
 77
 77
 (Music Finder) 55

(Time Signature) 35
(가) 58
(Music Finder) 18
(Voice Set) 99
(Vocal Harmony) 60, 184
 41
(Browser) 179

(Brightness) 20
(VIDEO OUT) 59
(Vibrato) 102
(Quick Recording) 147
 142

..... 32
(Session) 106
 (Section Set) 110
 (Owner Name) 21
 151
(Song) 12, 36
 (Super Articulation) 83
 (Style Structure) 118
 (Style Change Behavior) 110
 (Style Assembly) 118
 (Style Creator) 118
 (Style Touch) 109
 (Style Creator: SFF) 203
(Style) 12, 46
(Step Recording) 118, 147
(Realtime Recording) 118

(Notation) 39
(Score) 39
(Guide) 40, 145
 19
 (Connection Status) 174
 (Practice Function) 145
 44
 (Organ Flute) 83, 103
 1 84
 2 84
 84
 (Left Hold) 50
 (One Touch Setting) 51
(Voice) 30, 83

(Voice Program Change Number) 209
 (Effect Return Level) 96
 (Effect Type) 95
() 59
(AI) 107
 (Initializing Internet Settings) 182
 (Internet Settings) 178
 183
 (Internet Direct Connection) 171
(Pause) 142

(Auto Accompaniment Feature) 46
() (Music Finder) 115
(Transpose) 59, 61, 87
(Favorite) 113

(Chain Playback) 142

(Chord Tutor) 50

(Tap)	141
(Text)	58
(Tempo)	34
.....	93

(File Selection Display Configuration)	70
---	----

(File Selection Display Basic Operation)	71
(File Selection Display)	27, 72
(File)	70
/ (File/Folder Operations)	72
(Part)	84
.....	32
(Pedal polarity)	195
.....	195
/ (Fade In/Out)	141
((EQ)	98
(가 (Lyrics))	162
((Music Finder))	114
((Vocal Harmony))	184
((Song))	162
((Style))	124
((Voice))	99
()	96
(Edit) ((Bookmark))	177
(OTS)	51
(Portamento Time)	100
(Format)	72
(Folder)	70
(Phrase Mark)	142
(Pro)	106
(Flash Memory)	23
(Pitch Bend Wheel)	33
(Pitch)	87

(One-Handed Practice)	40
(Headphone)	18
(Home Page)	181

A

A-B (Repeat)	42
ACMP (Stop ACMP)	109
AI FULL KEYBOARD ()	107
AL FINGERED ()	107
ARABIC ()	88
ASSEMBLY ()	123
AUTO REVOICE SETUP ()	94

B

BALANCE ()	41
BASIC ()	119
BASS ()	209
BOOKMARK ()	175

C

CHANNEL ()	127, 162
CHANNEL ON/OFF (/)	108
CHORD ()	152, 162
CHORD DETECT ()	209
CHORD FINGERING ()	106
COMMON ()	100
CONFIG 1	35, 48, 108
CONFIG 2	20, 209
CONTROLLER ()	100
Cool!	83
COPY ()	74
CUT ()	75

D

DELETE ()	75
[DEMO ()]	12
[DIGITAL RECORDING ()]	12
DOC((Disk Orchestra Collection))	204

E

EDIT ()	122
EFFECT ()	93
EFFECT/EQ (/EQ)	102
EQ((Equalizer))	93
EQUAL TEMPERAMENT ()	88
ESEQ	203
EXIT ()	71

F

FADE IN/OUT (/)()	141
FADE IN/OUT (/)()	48
FADE IN/OUT/HOLD TIME (/ /)	108
FILTER ()	93, 169
FINGERED ()	107
FINGERED ON BASS ()	107
Follow lights	146
FOOT PEDAL ()	195
FOOTAGE ()	103, 104
FREEZE ()	138
FULL KEYBOARD ()	107

G

GM (GM System Level) 1	204
GM (GM System Level) 2	204
GROOVE ()	125
GS	204

H

HARMONY ()	102
HARMONY/ECHO (/)	89
Hz	87

I

ICON ()	76
----------------	----

K

Karao-key (가)	146
KEYBOARD/PANEL (/)	33, 61
KIRNBERGER	88

L

LAN	179
LCD	12
Live!	83

M

MASTER TUNE ()	87
[MASTER VOLUME ()]	17
MEAN-TONE ()	88
MEDIA ()	72, 144, 199
Mega Voice (가)	83
MELODIC MINOR ()	130
MIC SETTING ()	187
MIDI	201
MIDI	43, 147
MIDI (Setting)	204
MIDI (Template)	206
MIXING CONSOLE ()	91
MULTI FINGER ()	107

N

NAME ()	76
----------	----

O

OTS (Link Timing)	109
OTS (Link)	51
OVERALL SETTING ()	188

P

PANEL PART ()	92
PARAMETER ()	128
PASTE ()	74, 75
PRESET ()	27
PROPERTY ()	199
Prot. 1	74
Prot. 2 Edit	74
Prot. 2 Orig	74
PURE MAJOR	88
PURE MINOR	88
PYTHAGOREAN ()	88

Q

QUANTIZE ()	127
QUICK START ()	143

R

RANDOM ()	142
REC MODE ()	162
RECEIVE ()	208
REGISTRATION MEMORY ()	135
REGISTRATION SEQUENCE ()	138
REPEAT MODE ()	37, 142

S

SAVE ()	73
SCALE TUNE ()	87
SFX	83
SINGLE FINGER ()	107
SMF(MIDI)	203
SONG () CH 1-8/9-16	92
SOUND ()	101
[STANDBY/ON (/)]	12, 17
STYLE PART ()	92, 151
STYLE SETTING/SPLIT POINT (/)	109
Sweet!	83
SYS/EX.	162
SYSTEM ()	207

T

TALK ()	62
TALK SETTING ()	191
TAP TEMPO ()	48
TOUCH ()	33, 53
TRANSMIT ()	207

U

UP ()	71
USB (Audio Recorder)	63
USB (Storage Device)	23
[USB TO DEVICE]	13
[USB TO HOST]	13
USER ()	27

V

Vocal CueTIME ()	146
VOCAL HARMONY EDIT ()	185, 186
VOCAL HARMONY TYPE ()	184
VOICE ()	13
VOL/VOICE (/)	92
VOLUME/ATTACK (/)	104

W

WERCKMEISTER	88
--------------	----

X

XF	203
XG	204

[1▲ ▼] - [8▲ ▼]..... 42

A

[A] - [J]..... 37

[ACMP]..... 28

[AUTO FILL IN ()]..... 27

B

[BALANCE ()]..... 33

[BREAK ()]..... 31

C

[CHANNEL ON/OFF (/)]..... 40

D

DATA ENTRY () 48

[DEMO ()]..... 6

[DIRECT ACCESS ()]..... 41

[Drum Kit Icon ()]..... 63

[DSP] 65

E

ENDING ()/rit. [I]/[II]/[III] 32

[ENTER ()]..... 49

[EXIT ()]..... 47

[EXTRA TR]..... 15

F

[FADE IN/OUT (/)]..... 25

[FREEZE ()]..... 54

[FUNCTION ()]..... 44

G

[GUIDE ()]..... 12

H

[HARMONY/ECHO (/)]..... 61

I

[INTERNET ()]..... 46

INTRO () [I]/[II]/[III]..... 29

L

[LCD CONTRAST ()]..... 36

[LYRICS/TEXT (가 /)] (PSR-S900)..... 10

[LYRICS (가)] (PSR-S700)..... 10

M

MAIN VARIATION () [A]/[B]/[C]/[D]..... 30

[MASTER VOLUME ()]..... 2

[MEMORY ()]..... 55

[METRONOME ()]..... 22

MIC SETTING/VOCAL HARMONY

(/)..... 7

[MIXING CONSOLE ()]..... 39

[MODULATION ()]..... 4

[MONO ()]..... 64

MULTI PAD CONTROL () [1] - [4]..... 58

MULTI PAD CONTROL ()

[SELECT ()]..... 57

MULTI PAD CONTROL ()

[STOP ()]..... 59

[MUSIC FINDER ()]..... 50

O

ONE TOUCH SETTING () [1] - [4]..... 60

[OTS LINK ()]..... 26

P

[PART SELCT ()],

[PART ON/OFF (/)]..... 51

[PITCH BEND ()]..... 3

R

REGIST BANK () [-]/[+]..... 53

REGISTRATION MEMORY () [1] - [8]..... 56

[REPEAT ()]..... 11

S

[SCORE ()]..... 9

SONG () [▶/■] (PLAY/PAUSE (/))..... 18

SONG () [◀◀/▶▶] (REW/FF

(/))..... 19

SONG () [] (STOP ())..... 17

SONG () [REC ()]..... 16

SONG () [SELECT ()]..... 8

[STANDBY/ON (/)]..... 1

STYLE ()..... 20

STYLE CONTROL ()

[START/STOP (/)]..... 35

[SUSTAIN ()]..... 63

[SYNC START ()]..... 34

[SYNC STOP ()]..... 33

T

TAB () [◀][▶]..... 43

[TAP TEMPO ()]..... 23

TEMPO () [-]/[+]..... 24

[TOUCH ()]..... 62

[TR 1]..... 15

[TR 2]..... 14

TRANSPOSE () [-]/[+]..... 21

U

UPPER OCTAVE () [-]/[+]..... 67

[USB]..... 45

V

[VARI. ()]..... 66

VOICE ()..... 52



YAMAHA

YAMAHA MUSIC KOREA LTD.

야마하뮤직코리아(주)

야마하 서비스 센터

고객지원센터(수신자부담) : 080-004-0022

용산 02)790-0617, 080-904-6601

두일 02)702-0664~5

구로 02)892-0661

안산 031)411-6689

수원 031)253-5504

인천 032)434-0661

포항 054)282-8523

홍성 041)634-7827

대전 042)221-6681

청주 043)268-6631

부산 051)554-6610

울산 052)293-9228

대구 053)653-0662

광주 062)225-0661

전주 063)282-0661

제주 064)724-0660

강릉 033)655-0663

www.yamaha-music.co.kr