



**PORTATONE**

# **PSR-292**

English

Deutsch

Français

Español

**Owner's Manual  
Bedienungsanleitung  
Mode D'emploi  
Manual de instrucciones**



# SPECIAL MESSAGE SECTION

This product utilizes batteries or an external power supply (adapter). DO NOT connect this product to any power supply or adapter other than one described in the manual, on the name plate, or specifically recommended by Yamaha.

This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by Yamaha. If a cart, etc., is used, please observe all safety markings and instructions that accompany the accessory product.

## **SPECIFICATIONS SUBJECT TO CHANGE:**

The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.

**IMPORTANT:** The louder the sound, the shorter the time period before damage occurs.

## **NOTICE:**

Service charges incurred due to a lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

## **ENVIRONMENTAL ISSUES:**

Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:

### **Battery Notice:**

This product MAY contain a small non-rechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

This product may also use "household" type batteries. Some of these may be rechargeable. Make sure that the battery being charged is a rechargeable type and that the charger is intended for the battery being charged.

When installing batteries, do not mix batteries with new, or with batteries of a different type. Batteries MUST be installed correctly. Mismatches or incorrect installation may result in overheating and battery case rupture.

### **Warning:**

Do not attempt to disassemble, or incinerate any battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by the laws in your area. Note: Check with any retailer of household type batteries in your area for battery disposal information.

### **Disposal Notice:**

Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc. If your dealer is unable to assist you, please contact Yamaha directly.

## **NAME PLATE LOCATION:**

The name plate is located on the bottom of the product. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

**Model**

---

**Serial No.**

---

**Purchase Date**

---

# PLEASE KEEP THIS MANUAL

## FCC INFORMATION (U.S.A.)

### 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

**2. IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

**3. NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance

with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(class B)

### OBSERVERA!

Apparaten kopplas inte ur växelströmskällan (nätet) så länge som den är ansluten till vägguttaget, även om själva apparaten har stängts av.

**ADVARSEL:** Netspændingen til dette apparat er IKKE afbrudt, så længe netledningen sidder i en stikkontakt, som er tændt — også selvom der er slukket på apparatets afbryder.

**VAROITUS:** Laitteen toisiopiiriin kytketty käyttökytkin ei irroita koko laitetta verkosta.

(standby)

### Entsorgung leerer Batterien (nur innerhalb Deutschlands)

Leisten Sie einen Beitrag zum Umweltschutz. Verbrauchte Batterien oder Akkumulatoren dürfen nicht in den Hausmüll. Sie können bei einer Sammelstelle für Altbatterien bzw. Sondermüll abgegeben werden. Informieren Sie sich bei Ihrer Kommune.

(battery)

# PRECAUTIONS

## PLEASE READ CAREFULLY BEFORE PROCEEDING

\* Please keep this manual in a safe place for future reference.



### WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

#### Power supply/AC power adaptor

- Only use the voltage specified as correct for the instrument. The required voltage is printed on the name plate of the instrument.
- Use the specified adaptor (PA-3C or PA-3B or an equivalent recommended by Yamaha) only. Using the wrong adaptor can result in damage to the instrument or overheating.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.
- Do not place the AC adaptor cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.

#### Do not open

- Do not open the instrument or attempt to disassemble the internal parts or modify them in any way. The instrument contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

#### Water warning

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place containers on it containing liquids which might spill into any openings.
- Never insert or remove an electric plug with wet hands.

#### Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

#### If you notice any abnormality

- If the AC adaptor cord or plug becomes frayed or damaged, or if there is a sudden loss of sound during use of the instrument, or if any unusual smells or smoke should appear to be caused by it, immediately turn off the power switch, disconnect the adaptor plug from the outlet, and have the instrument inspected by qualified Yamaha service personnel.



### CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the instrument or other property. These precautions include, but are not limited to, the following:

#### Power supply/AC power adaptor

- When removing the electric plug from the instrument or an outlet, always hold the plug itself and not the cord.
- Unplug the AC power adaptor when not using the instrument, or during electrical storms.
- Do not connect the instrument to an electrical outlet using a multiple-connector. Doing so can result in lower sound quality, or possibly cause overheating in the outlet.

#### Battery

- Always make sure all batteries are inserted in conformity with the +/- polarity markings. Failure to do so might result in overheating, fire, or battery fluid leakage.
- Always replace all batteries at the same time. Do not use new batteries together with old ones. Also, do not mix battery types, such as alkaline batteries with manganese batteries, or batteries from different makers, or different types of batteries from the same maker, since this can cause overheating, fire, or battery fluid leakage.
- Do not dispose of batteries in fire.

- Do not attempt to recharge batteries that are not intended to be charged.
- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument to prevent possible leakage of the battery fluid.
- Keep batteries away from children.
- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

#### Location

- Do not expose the instrument to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration or damage to the internal components.
- Do not use the instrument in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, the instrument, TV, or radio may generate noise.

## Connexions

- Avant de raccorder l'instrument à d'autres éléments électroniques, mettre ces derniers hors tension. Et avant de mettre sous/hors tension tous les éléments, toujours ramener le volume au minimum. En outre, veillez à régler le volume de tous les composants au minimum et à augmenter progressivement le volume sonore des instruments pour définir le niveau d'écoute désiré.

## Entretien

- Utiliser un linge doux et sec pour le nettoyage de l'instrument. Ne jamais utiliser de diluants de peinture, dissolvants, produits de nettoyage, ou tampons nettoyeurs à imprégnations chimiques.

## Précautions d'utilisation

- Ne pas glisser vos doigts ou votre main dans les fentes de l'instrument.
- N'insérez jamais d'objets en papier, métalliques ou autres dans les fentes du panneau ou du clavier. Si c'est le cas, mettez immédiatement l'appareil hors tension et débranchez le cordon d'alimentation de la prise secteur. Faites ensuite contrôler l'appareil par un membre qualifié du service Yamaha.
- Ne pas déposer d'objets de plastique, de vinyle, ou de caoutchouc sur l'instrument, ce qui risque de décolorer le panneau ou le clavier.
- Ne pas s'appuyer sur l'instrument, ni y déposer des objets pesants. Ne pas manipuler trop brutalement les boutons, commutateurs et connecteurs.
- Ne pas jouer trop longtemps sur l'instrument à des volumes trop élevés, ce qui risque d'endommager durablement l'ouïe. Si l'on constate une baisse de l'acuité auditive ou des sifflements d'oreille, consulter un médecin sans tarder.

## Sauvegarde des données

### Sauvegarde des données

Les données sauvegardées peuvent être perdues à la suite d'une défectuosité ou d'une opération incorrecte. Sauvegardez toutes les données importantes sur un support externe tel que l'archiveur de données MIDI Yamaha MDF3.

Yamaha n'est pas responsable des détériorations causées par une utilisation impropre de l'instrument, ou par des modifications apportées par l'utilisateur, pas plus qu'il ne peut couvrir les données perdues ou détruites.

Toujours laisser l'appareil hors tension lorsqu'il est inutilisé.

Lors de l'utilisation de l'adaptateur secteur, même lorsque le commutateur est en position « STANDBY », une faible dose d'électricité circule toujours dans l'instrument. Lorsque vous n'utilisez pas l'instrument pendant une longue période, veillez à débrancher l'adaptateur secteur de la prise murale.

Veillez à éliminer les piles usées selon les règlements locaux.

Les illustrations et écrans LCD de ce mode d'emploi sont fournis à titre d'information uniquement et peuvent être différents de ceux apparaissant sur votre instrument.

## ● A propos du morceau (ou de la composition) « Just The Way You Are » proposé(e) sur ce clavier

Titre du morceau : Just The Way You Are

Nom du compositeur : Billy Joel

Nom du détenteur des droits d'auteur : EMI MUSIC PUBLISHING LTD

PRECAUTION : Tous droits réservés. Toute copie, performance en public et radiodiffusion non autorisées sont strictement interdites.

## ● AVIS DE DROIT D'AUTEUR

Ce produit rassemble des programmes informatiques et des textes pour lesquels Yamaha détient des droits d'auteur ou pour lesquels Yamaha est autorisé à utiliser les droits d'auteur appartenant à des tiers. Les matériaux protégés par les droits d'auteur incluent, sans s'y limiter, tous les logiciels informatiques, fichiers de style, fichiers MIDI, données WAVE et enregistrements audio. Toute utilisation non autorisée de ces programmes et de leur contenu à des fins autres que personnelles est strictement interdite en vertu des lois sur les droits d'auteur en vigueur. Toute violation des droits d'auteur aura des conséquences juridiques. **IL EST STRICTEMENT INTERDIT DE FAIRE, DE DISTRIBUER OU D'UTILISER DES COPIES ILLEGALES.**

## ● Marques déposées

- Apple et Macintosh sont des marques de Apple Computer, Inc., déposées aux Etats-Unis et dans d'autres pays.
- Windows est une marque déposée de Microsoft® Corporation.

Toutes les autres marques commerciales sont la propriété de leurs détenteurs respectifs.

*Congratulations on your purchase of the Yamaha PSR-292 PortaTone!*

*You now own a portable keyboard that combines advanced functions, great sound and exceptional ease-of-use in a highly compact package. Its outstanding features also make it a remarkably expressive and versatile instrument.*

*Read this Owner's Manual carefully while playing your new PSR-292 in order to take full advantage of its various features.*

---

## Main Features

---

The PSR-292 is a sophisticated yet easy-to-use keyboard with the following features and functions:



■ **Stereo Sampled Piano** ..... **page 20**

The PSR-292 has a special Portable Grand Piano Voice — created by state-of-the-art stereo sampling technology and using Yamaha's sophisticated AWM (Advanced Wave memory) tone generation system.



■ **Touch Response** ..... **page 30**

The exceptionally natural Touch Response feature, with a convenient front panel on/off switch, gives you maximum expressive level control over the voices. It also works in conjunction with the Dynamic Filter, which dynamically adjusts the timbre or tone of a voice according to your playing strength — just a like a real musical instrument!



■ **Yamaha Education Suite** ..... **pages 43, 45, 61**

The PSR-292 features the new Yamaha Education Suite — a set of learning tools that utilize the latest technology to make studying and practicing music more fun and fulfilling than ever before!



■ **One Touch Setting** ..... **page 28**

The One Touch Setting feature lets you automatically call up an appropriate voice for playing with the selected style. Each style has memory space for two One Touch Settings, and you can change them to your own desired voice setting — letting you save your custom panel settings for instant recall.



■ **Powerful Speaker System**

The built-in stereo amplifier/speaker system of the PSR-292 — with a special Bass Boost feature — provides exceptionally powerful, high-quality sound, letting you hear the full dynamic range of the PSR-292's authentic voices.

■ **Music Database** ..... **page 48**

The PSR-292 has an advanced, easy-to-use Music Database feature that automatically selects the style, voice, and effect settings for playing in a specific type of music. This can be a big help if you know what genre of music you want to play, but you don't know what settings to make. Just select the genre, and the PSR-292 takes care of the rest!



■ **GM System Level 1**

"GM System Level 1" is an addition to the MIDI standard which ensures that any GM-compatible music data can be accurately played by any GM-compatible tone generator, regardless of manufacturer. The GM mark is affixed to all software and hardware products that support GM System Level.



■ **XGlite**

As its name implies, "XGlite" is a simplified version of Yamaha's high-quality XG tone generation format. Naturally, you can play back any XG song data using an XGlite tone generator. However, keep in mind that some songs may play back differently compared to the original data, due to the reduced set of control parameters and effects.

---

# Contents


---

<b>Panel Controls and Terminals</b> .....	<b>8</b>	<b>Selecting and Playing Songs</b> .....	<b>51</b>
<b>Setting Up</b> .....	<b>10</b>	• Selecting a Song.....	51
• Power Requirements .....	10	• Playing the Songs.....	53
• Turning On the Power.....	11	• A-B Repeat .....	54
• Accessory Jacks .....	11	• Melody Voice Change.....	55
		• Adjusting the Song Volume .....	55
<b>Quick Guide</b> .....	<b>12</b>	<b>Song Recording</b> .....	<b>56</b>
<b>Step 1 Voices</b> .....	<b>12</b>	• Recording a User Song .....	56
<b>Step 2 Songs</b> .....	<b>14</b>	• Song Clear .....	59
<b>Step 3 Music Database</b> .....	<b>16</b>	• Track Clear .....	60
<b>Panel Display Indications</b> .....	<b>18</b>	<b>Song Lesson</b> .....	<b>61</b>
<b>Portable Grand</b> .....	<b>20</b>	• Using the Lesson Feature.....	61
• Playing the Portable Grand.....	20	• Select the Lesson Track .....	63
• Using the Metronome .....	20	• Lesson 1 — Timing.....	63
<b>DJ</b> .....	<b>22</b>	• Lesson 2 — Waiting.....	64
• Playing the DJ.....	22	• Lesson 3 — Minus One .....	64
<b>Playing Voices</b> .....	<b>23</b>	• Lesson 4 — Both Hands.....	65
• Playing a Voice .....	23	• Grade.....	65
• #000 OTS .....	26	<b>MIDI Functions</b> .....	<b>66</b>
• Dual Voice .....	26	• What Is MIDI? .....	66
• Split Voice.....	27	• Connecting to a Personal Computer.....	68
• Setting the Split Point .....	27	• Local Control.....	69
• One Touch Setting.....	28	• Using Initial Setup Send with a Sequencer.....	69
• Transpose and Tuning.....	29	• External Clock.....	69
• Touch and Touch Sensitivity.....	30	• Bulk Data Send.....	69
<b>Effects</b> .....	<b>31</b>	• Keyboard Out.....	70
• Harmony .....	31	• Style Out.....	70
• Reverb .....	31	• Song Out.....	70
• Chorus .....	32	• Loading a Song into PSR-292's Flash Memory ...	71
• DSP .....	32	• PC Mode.....	73
<b>Selecting and Playing Styles</b> .....	<b>35</b>	<b>Function</b> .....	<b>74</b>
• Selecting a Style .....	35	• Using the Function parameters.....	74
• Playing the Styles .....	36	<b>Troubleshooting</b> .....	<b>77</b>
• Sync Stop .....	40	<b>Data Backup &amp; Initialization</b> .....	<b>78</b>
• Changing the Tempo .....	41	<b>Index</b> .....	<b>79</b>
• Accompaniment Sections		<b>Voice List</b> .....	<b>82</b>
(Main A/B and Fill-ins) .....	42	<b>Style List</b> .....	<b>90</b>
• Adjusting the Style Volume.....	42	<b>Music Database List</b> .....	<b>91</b>
• Using Auto Accompaniment — Multi Fingering....	43	<b>Drum Kit List</b> .....	<b>92</b>
• Dictionary .....	45	<b>MIDI Implementation Chart</b> .....	<b>94</b>
<b>Using the Music Database</b> .....	<b>48</b>	<b>Effect map</b> .....	<b>97</b>
• Data stored by the Music Database.....	50	<b>Specifications</b> .....	<b>98</b>



# Panel Controls and Terminals

## ■ Front Panel

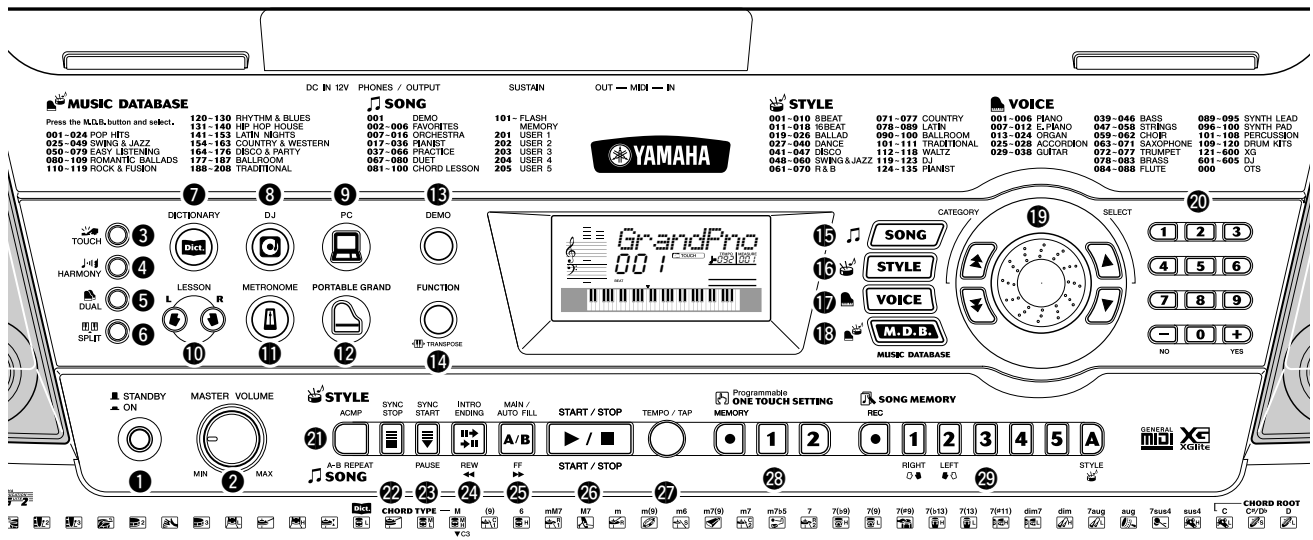

### 1 Power switch ([STANDBY/ON])

2 [MASTER VOLUME] dial  
This determines the overall volume of the PSR-292.

### 3 [TOUCH] button

This turns the Touch function on and off. (See page 30.)

### 4 [HARMONY] button

This turns the Harmony effect on and off. (See page 31.)

### 5 [DUAL] button

This turns the Dual voice on or off. (See page 26.)

### 6 [SPLIT] button

This turns the Split voice on and off. (See page 27.)

### 7 [DICTIONARY] button

This calls up the Dictionary function (page 45).

### 8 [DJ] button

This instantly calls up a special DJ voice and style.

### 9 [PC] Button

This exceptionally convenient control lets you store and instantly call up the specified MIDI settings for optimum use with a connected computer or other MIDI device. (See page 73.)

### 10 LESSON [L] (Left) and [R] (Right) buttons

These call up the Lesson exercises for the corresponding hand (left or right) for the selected song. (See page 62.)

### 11 [METRONOME] button

This turns the metronome on and off. (See page 20.)

### 12 [PORTABLE GRAND] button

This instantly calls up the Grand Piano voice. (See page 12.)

### 13 [DEMO] button

This is used to play the Demo song. (See page 14.)

### 14 [FUNCTION] Button

This calls up the Function mode and stores the specified panel setting to the flash memory (see pages 74, 78).

### 15 [SONG] button

This is for enabling song selection. (See page 51.)

### 16 [STYLE] button

This is for enabling style selection. (See page 35.)

### 17 [VOICE] button

This is for enabling voice selection. (See page 23.) Holding down this button calls up the Melody Voice Change function. (See page 55.)

### 18 [M.D.B.] (MUSIC DATABASE) button

This calls up the optimum panel settings for selected music genre. (See page 48.)

### 19 Dial, CATEGORY [▲]/[▼] buttons, SELECT [▲]/[▼] buttons

This dial is used to select the number of the desired song, voice, style or M.D.B.. (See page 24.) This also used to set the Tempo and Function value. The CATEGORY [▲]/[▼] buttons are used to select



the category of songs, voices, styles, M.D.B. or Functions. Pressing the buttons steps through the various categories.

The SELECT [▲]/[▼] buttons are used to decrease or increase the number of the desired song, voice, style, M.D.B., or specific Function, as well as to adjust certain settings.

## 20 Numeric keypad, [+ / YES] and [- / NO] buttons

These are used for selecting songs, voices, and styles. (See pages 24.) They are also used for adjusting certain settings and answering certain display prompts.

## 21 [ACMP] / [A-B REPEAT] button

When the Style mode is selected, this turns the auto accompaniment on and off. (See page 36.) In the Song mode, this calls up the A-B Repeat function. (See page 54.)

## 22 [SYNC STOP] button

This turns the Sync Stop function on and off. (See page 40.)

## 23 [SYNC START] / [PAUSE] button

This turns the Sync Start function on and off. (See page 37.) In the Song mode, it is used to temporarily pause song playback. (See page 53.)

## 24 [INTRO ENDING] / [REW ◀◀] button

When the Style mode is selected, this is used to control the Intro and Ending functions. (See page 36.) When the Song mode is selected, this is used as a

“rewind” control, or move the song playback point back toward the beginning.

## 25 [MAIN/AUTO FILL] / [FF ▶▶] button

When the Style mode is selected, these are used to change auto accompaniment sections and control the Auto Fill function. (See page 42.) When the Song mode is selected, this is used as a “fast forward” control, or move the song playback point toward the end.

## 26 [START/STOP] button

When the Style mode is selected, this alternately starts and stops the style. (See page 36.) In the Song mode, this alternately starts and stops song playback. (See page 54.)

## 27 [TEMPO/TAP] button

This button is used to call up the Tempo setting, letting you set the Tempo with the dial, numeric keypad or [+]/[-] buttons. (See page 20.) It also allows you to tap out the tempo and automatically start a selected song or style at that tapped speed. (See page 37.)


## 28 ONE TOUCH SETTING buttons

These buttons ([MEMORY], [1], [2]) are used to select the One Touch Setting registrations. (See page 28.)

## 29 SONG MEMORY buttons

These buttons ([REC], [1] - [5], [A]) are used for song recording, letting you record up to six different tracks of a song (including a special Chord track). (See page 57.)

## ■ Rear Panel

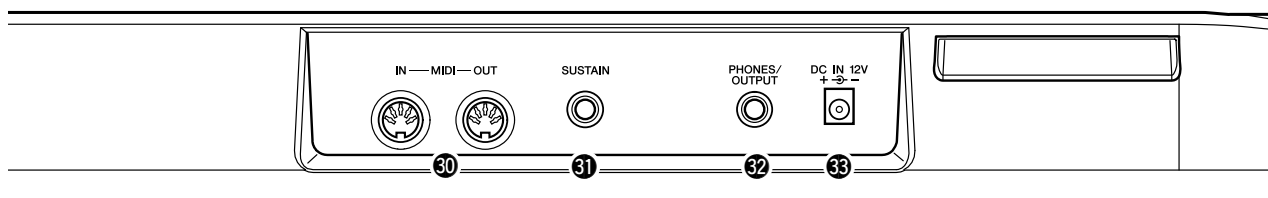

## 30 MIDI IN, OUT terminals

These are for connection to other MIDI instruments and devices. (See page 67.)

## 31 SUSTAIN jack

This is for connection to an optional FC4 or FC5 Footswitch for control over sustain, just like the damper pedal on a piano. (See page 11.)

## 32 PHONES/OUTPUT jack

This is for connection to a set of stereo headphones or to an external amplifier/speaker system. (See page 11.)

## 33 DC IN 12V jack

This is for connection to a PA-3C or PA-3B AC power adaptor. (See page 10.)



# Setting Up

This section contains information about setting up your PSR-292 for playing. Make sure to read this section carefully before using the instrument.

## Power Requirements


Although the PSR-292 will run either from an optional AC adaptor or batteries, Yamaha recommends use of an AC adaptor whenever possible. An AC adaptor is more environmentally friendly than batteries and does not deplete resources.

### **CAUTION**

- Never interrupt the power supply (e.g. remove the batteries or unplug the AC adaptor) during any PSR-292 record operation! Doing so can result in a loss of data.
- Never attempt to turn the power off when a "WRITING!" message is shown in the display. Doing so can damage the internal flash memory and result in loss of data.

### ■ Using an AC Power Adaptor

- ① Make sure that the [STANDBY/ON] switch of the PSR-292 is set to STANDBY.
- ② Connect the AC adaptor (PA-3C, PA-3B, or other adaptor specifically recommended by Yamaha) to the power supply jack.
- ③ Plug the AC adaptor into an AC outlet.

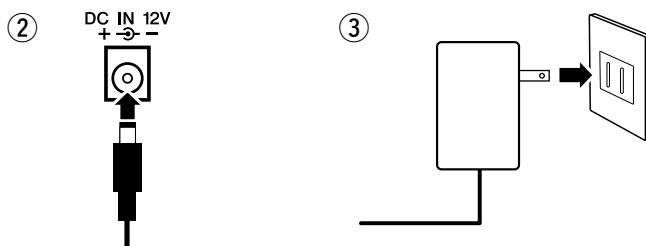


### **WARNING**

- Use ONLY a Yamaha PA-3C or PA-3B AC Power Adaptor (or other adaptor specifically recommended by Yamaha) to power your instrument from the AC mains. The use of other adaptors may result in irreparable damage to both the adaptor and the PSR-292.
- Unplug the AC Power Adaptor when not using the PSR-292, or during electrical storms.

### ■ Using Batteries

For battery operation the PSR-292 requires six 1.5V "D" size, R20P (LR20) or equivalent batteries. (Alkaline batteries are recommended.) When the batteries need to be replaced, the volume may be reduced, the sound may be distorted, and other problems may occur. When this happens, turn the power off and replace the batteries, as described below

- ① Open the battery compartment cover located on the instrument's bottom panel.
- ② Insert the six new batteries, being careful to follow the polarity markings on the inside of the compartment.
- ③ Replace the compartment cover, making sure that it locks firmly in place.

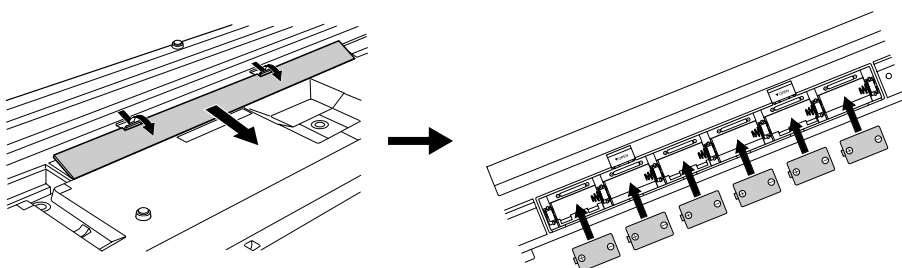


### **CAUTION**

- When the batteries run down, replace them with a complete set of six new batteries. NEVER mix old and new batteries.
- Do not use different kinds of batteries (e.g. alkaline and manganese) at the same time.
- If the instrument is not to be in use for a long time, remove the batteries from it, in order to prevent possible fluid leakage from the battery.

## Turning On the Power

With the AC power adaptor connected or with batteries installed, simply press the power switch until it locks in the ON position. When the instrument is not in use, be sure to turn the power off. (Press the switch again so that it pops up.)

 ■ STANDBY  
■ ON




### CAUTION

- Even when the switch is in the "STANDBY" position, electricity is still flowing to the instrument at the minimum level. When you are not using the PSR-292 for a long time, make sure you unplug the AC power adaptor from the wall AC outlet, and/or remove the batteries from the instrument.
- Never attempt to turn the power off when a "WRITING!" message is shown in the display. Doing so can damage the internal flash memory and result in loss of data.

## Accessory Jacks


### Using Headphones

For private practicing and playing without disturbing others, connect a set of stereo headphones to the rear panel PHONES/OUTPUT jack. Sound from the built-in speaker system is automatically cut off when you insert a headphone plug into this jack.

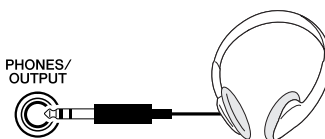

### Connecting a Keyboard Amplifier or Stereo System

Though the PSR-292 is equipped with a built-in speaker system, you can also play it through an external amplifier/speaker system. First, make sure the PSR-292 and any external devices are turned off, then connect one end of a stereo audio cable to the LINE IN or AUX IN jack(s) of the other device and the other end to the rear panel PHONES/OUTPUT jack on the PSR-292.

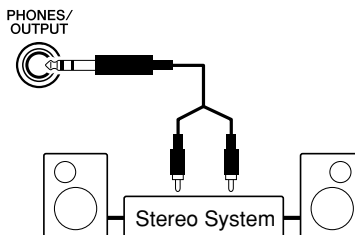


### CAUTION

- To prevent damage to the speakers, set the volume of the external devices at the minimum setting before connecting them. Failure to observe these cautions may result in electric shock or equipment damage. Also, be sure to set the volumes of all devices at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

### Using a Footswitch

 This feature lets you use an optional footswitch (Yamaha FC4 or FC5) to sustain the sound of the voices. The footswitch functions the same way as a damper pedal on an acoustic piano — press and hold down the footswitch as you play the keyboard to sustain the sound.





### NOTE

- Make sure that the footswitch plug is properly connected to the SUSTAIN jack before turning on the power.
- Do not press the footswitch while turning the power on. Doing this changes the recognized polarity of the footswitch, resulting in reversed footswitch operation.

### Using the MIDI Terminals

The PSR-292 also features MIDI terminals, allowing you to interface the PSR-292 with other MIDI instruments and devices. (For more information, see page 67.)

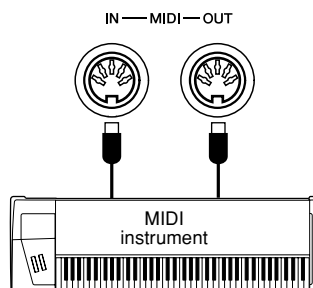


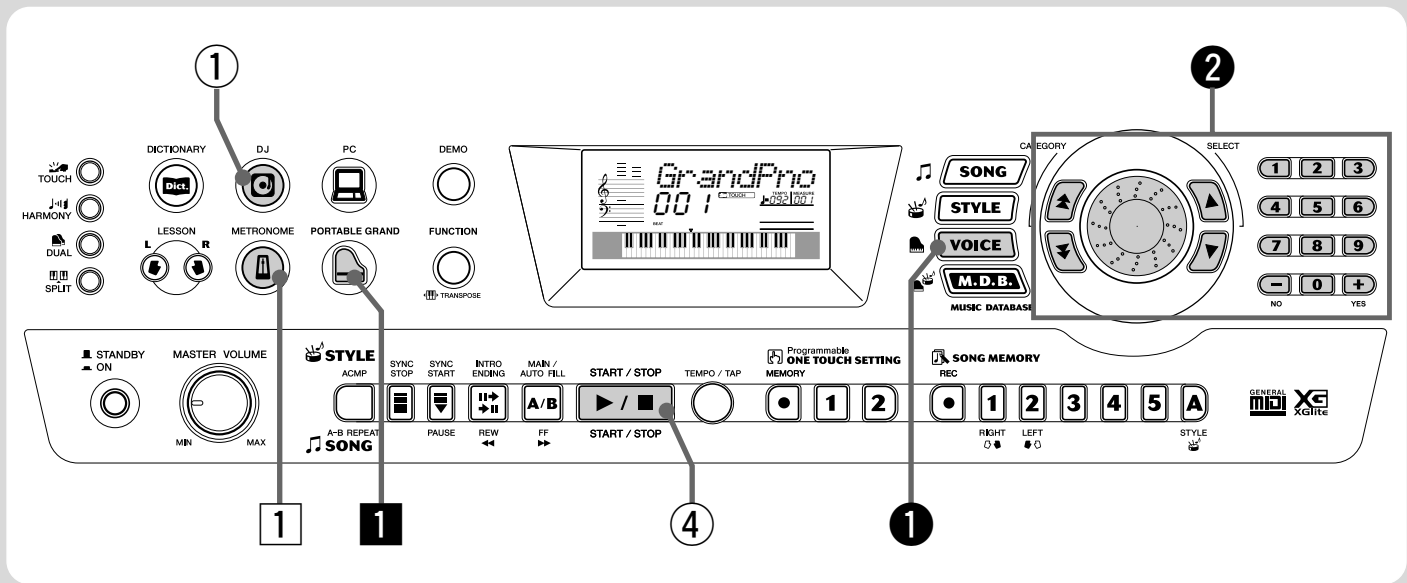

### Playing the Piano

Simply by pressing the [PORTABLE GRAND] button, you can automatically select the Grand Piano voice.

 - 1 Press the [PORTABLE GRAND] button.



- 2 Play the keyboard.



Want to find out more? See page 20.

### Playing along with the Metronome

- 1 Press the [METRONOME] button.



Want to find out more? See page 20.

### Panel Voice List

No.	Voice Name
<b>PIANO</b>	
001	Grand Piano
002	Bright Piano
003	Honky-tonk Piano
004	MIDI Grand Piano
005	CP 80
006	Harpsichord
<b>E.PIANO</b>	
007	Galaxy EP
008	Funky Electric Piano
009	DX Modern Elec. Piano
010	Hyper Tines
011	Venus Electric Piano
012	Clavi

No.	Voice Name
<b>ORGAN</b>	
013	Jazz Organ 1
014	Jazz Organ 2
015	Click Organ
016	Bright Organ
017	Rock Organ
018	Purple Organ
019	16'+2' Organ
020	16'+4' Organ
021	Theater Organ
022	Church Organ
023	Chapel Organ
024	Reed Organ

No.	Voice Name
<b>ACCORDION</b>	
025	Traditional Accordion
026	Musette Accordion
027	Bandoneon
028	Harmonica
<b>GUITAR</b>	
029	Classical Guitar
030	Folk Guitar
031	12Strings Guitar
032	Jazz Guitar
033	Octave Guitar
034	Clean Guitar
035	60's Clean Guitar
036	Muted Guitar
037	Overdriven Guitar

No.	Voice Name
038	Distortion Guitar
<b>BASS</b>	
039	Acoustic Bass
040	Finger Bass
041	Pick Bass
042	Fretless Bass
043	Slap Bass
044	Synth Bass
045	Hi-Q Bass
046	Dance Bass
<b>STRINGS</b>	
047	String Ensemble
048	Chamber Strings
049	Synth Strings
050	Slow Strings

No.	Voice Name
051	Tremolo Strings
052	Pizzicato Strings
053	Orchestra Hit
054	Violin
055	Cello
056	Contrabass
057	Banjo
058	Harp
<b>CHOIR</b>	
059	Choir
060	Vocal Ensemble
061	Vox Humana
062	Air Choir

\* This list includes only a portion of the total available voices.


## Selecting and Playing Other Voices

The PSR-292 has a huge total of 605 dynamic and realistic instrument voices. Let's try a few of them out now...

### 1 Press the [VOICE] button.




### 2 Select a voice.

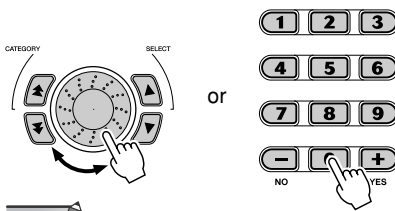

NOTE

 - You can also select the appropriate category by using the [▲]/[▼] buttons.



### 3 Play the keyboard.



Want to find out more? See page 23.


## Playing with the DJ Feature

The exciting new DJ feature gives you a full variety of dance and DJ sounds — letting you create your own real-time mixes and groove along with various contemporary rhythms.

### 1 Press the [DJ] button.




### 2 Play the DJ style.

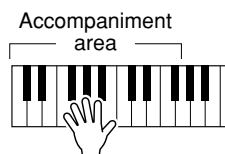


The DJ starts as soon as you play keys in the accompaniment area of the keyboard.

### 3 Play the DJ voices.

 


### 4 Stop the DJ style.

 

Want to find out more? See page 22.

No.	Voice Name	No.	Voice Name	No.	Voice Name	No.	Voice Name	No.	Voice Name
<b>SAXOPHONE</b>		075	Trombone Section	087	Recorder	099	Equinox	111	Room Kit
063	Soprano Sax	076	French Horn	088	Ocarina	100	Dark Moon	112	Rock Kit
064	Alto Sax	077	Tuba	<b>SYNTH LEAD</b>		<b>PERCUSSION</b>		113	Electronic Kit
065	Tenor Sax	<b>BRASS</b>		089	Square Lead	101	Vibraphone	114	Analog Kit
066	Breathy Tenor	078	Brass Section	090	Sawtooth Lead	102	Marimba	115	Dance Kit
067	Baritone Sax	079	Big Band Brass	091	Voice Lead	103	Xylophone	116	Jazz Kit
068	Oboe	080	Mellow Horns	092	Star Dust	104	Steel Drums	117	Brush Kit
069	English Horn	081	Synth Brass	093	Brightness	105	Celesta	118	Symphony Kit
070	Bassoon	082	Jump Brass	094	Analogon	106	Tubular Bells	119	SFX Kit 1
071	Clarinet	083	Techno Brass	095	Fargo	107	Timpani	120	SFX Kit 2
<b>TRUMPET</b>		<b>FLUTE</b>		<b>SYNTH PAD</b>		108	Music Box	<b>DRUM KITS</b>	
072	Trumpet	084	Flute	096	Fantasia	<b>DRUM KITS</b>		109	Standard Kit 1
073	Muted Trumpet	085	Piccolo	097	Bell Pad	<b>DRUM KITS</b>		110	Standard Kit 2
074	Trombone	086	Pan Flute	098	Xenon Pad	<b>DRUM KITS</b>			

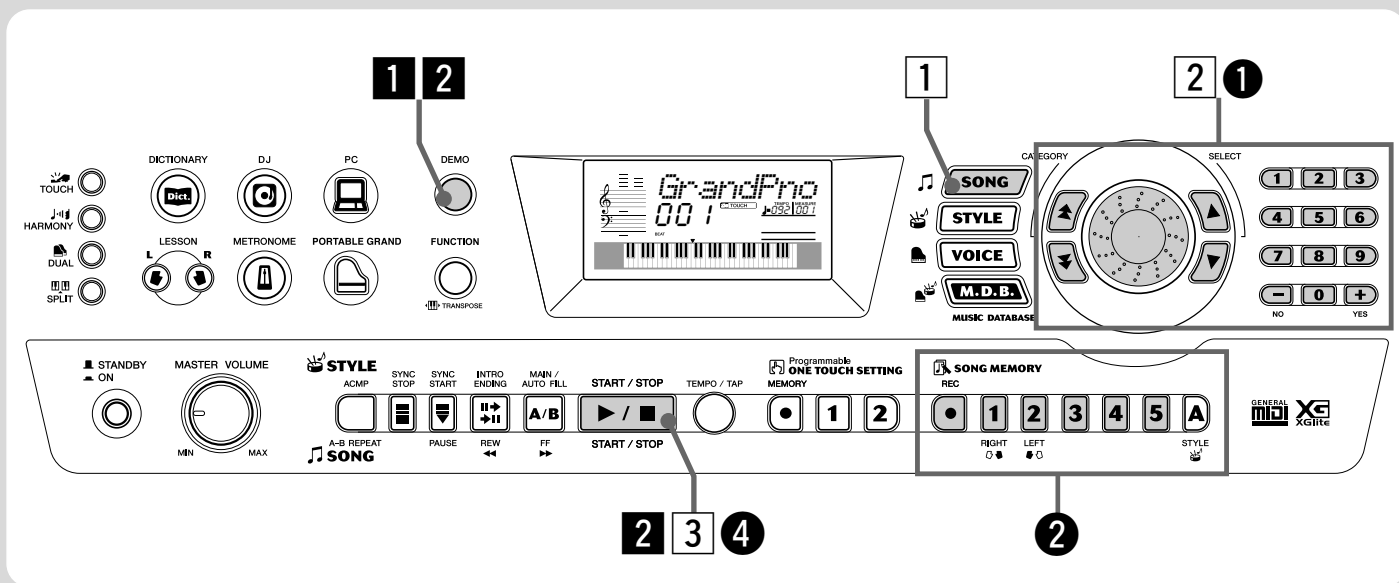

### Playing the Songs

 
The PSR-292 is packed with a total of 100 songs, including one Demo song — which has been specially created to showcase the rich and dynamic sounds of the instrument. There are also 99 additional songs, designed to be used with the educational Lesson feature.

You can also play songs loaded to the PSR via MIDI. The songs can be stored to song numbers 101-199. (See page 71.)

#### Playing the Demo song


Let's play the Demo song now, Repeating with #001.

##### 1 Start the Demo song.



You can also play back songs of other categories. Simply select the appropriate number of the desired song during playback.

##### 2 Stop the Demo song.

 


#### NOTE

- The PSR-292 also has a Demo and DJ Cancel function that allows you to disable Demo song and DJ function. Set Demo and DJ Cancel in the Function mode (page 76).


#### Playing a single song

Naturally, you can also individually select and play back the PSR-292's songs (001 - 205).

##### 1 Press the [SONG] button.

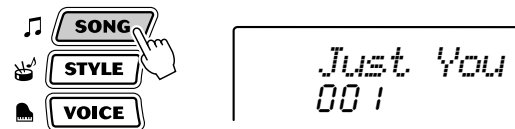


##### 2 Select a song.

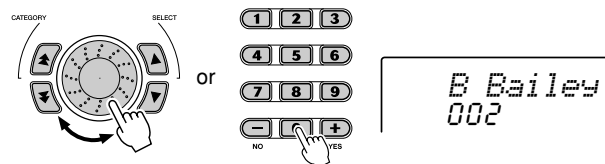

#### NOTE

- You can also select the appropriate category by using the [▲]/[▼] buttons.
 
##### 3 Start (and stop) the song.




Want to find out more? See page 51.

## Recording Your Own Song

Much like a multi-track tape recorder, the PSR-292 lets you play and record the individual parts of your own song in real time.


### 1 Select the desired User song (201 - 205) for recording.

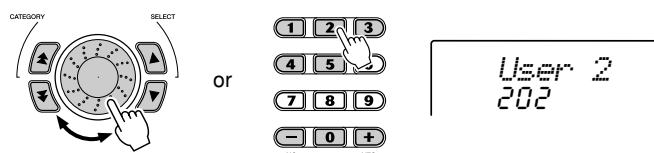

#### NOTE


- You can also select the appropriate category by using the [▲]/[▼] buttons.

### 2 Simultaneously hold down the [REC] button and press the desired track number button ([1] - [5]).

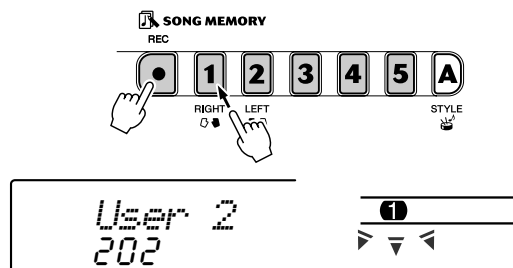


### 3 Start recording by playing a melody on the keyboard.

 The PSR-292 starts recording as soon as you play the first note on the keyboard.




### 4 To stop recording, press the [START/STOP] button.

 

Want to find out more? See page 56.


## Song List

No.	Song Name	No.	Song Name	No.	Song Name	No.	Song Name
<b>Demo</b>							
001	Just The Way You Are	023	Progrès	051	Muss I Denn	077	Close Your Hands, Open Your Hands
<b>Favorites</b>							
002	Bill Bailey (Won't You Please Come Home)	024	Tarentelle	052	Liebesträume Nr.3	078	The Cuckoo
003	When Irish Eyes Are Smiling	025	La Chevaleresque	053	Jesu, Joy Of Man's Desiring	079	O Du Lieber Augustin
004	Down By The Riverside	026	Etude Op.10-3 "Chanson De L'adieu"	054	Symphonie Nr.9	080	London Bridge
005	America The Beautiful	027	Marcia Alla Turca	055	Song Of The Pearl Fisher	<b>Chord Lesson</b>	
006	When The Saints Go Marchin' In	028	Turkish March	056	Gavotte	081	Twinkle Twinkle Little Star
<b>Orchestra</b>							
007	Frühlingsstimmen	029	Valse Op.64-1 "Peiti Chien"	057	String Quartet No.17 2nd Mov. "Serenade"	082	Close Your Hands, Open Your Hands
008	Danse Des Mirlitons From "The Nutcracker"	030	Menuett	058	Menuett	083	The Cuckoo
009	"Orphée Aux Enfers" Overture	031	Nocturne Op.9-2	059	Canon	084	O Du Lieber Augustin
010	Slavonic Dances No.10	032	Moments Musicaux Op.94-3	060	The Danube Waves	085	London Bridge
011	La Primavera (From Le Quattro Stagioni)	033	The Entertainer	061	From "The Magic Flute"	086	American Patrol
012	Méditation De Thais	034	Prelude (Wohltemperierte Klavier 1-1)	062	Piano Sonate Op.27-2 "Mondschein"	087	Beautiful Dreamer
013	Guillaume Tell	035	La Violette	063	"The Surprise" Symphony	088	Battle Hymn Of The Republic
014	Camptown Races	036	Für Elise	064	To A Wild Rose	089	Home Sweet Home
015	Frühlingslied	<b>Practice</b>					
016	Ungarische Tänze Nr.5	037	Little Brown Jug	065	Air de Toréador "Carmen"	090	Valse Des Fleurs (From "The Nutcracker")
<b>Pianist</b>							
017	Dolly's Dreaming And Awakening	038	Loch Lomond	066	O Mio Babbino Caro (From "Gianni Schicchi")	091	Aloha Oe
018	La Candeur	039	Oh! Susanna	<b>Duet</b>			
019	Arabesque	040	Greensleeves	067	Row Row Row Your Boat	092	I've Been Working On The Railroad
020	Pastorale	041	Aura Lee	068	On Top Of Old Smoky	093	My Darling Clementine
021	Petite Réunion	042	Londonderry Air	069	We Wish You A Merry Christmas	094	Auld Lang Syne
022	Innocence	043	Ring De Banjo	070	Scarborough Fair	095	Grandfather's Clock
		044	Wenn Ich Ein Vöglein Wär ?	071	Im Mai	096	Amazing Grace
		045	Die Lorelei	072	O Christmas Tree	097	My Bonnie
		046	Funiculi-Funicula	073	Mary Had A Little Lamb	098	Yankee Doodle
		047	Turkey In The Straw	074	Ten Little Indians	099	Joy To The World
		048	Old Folks At Home	075	Pop Goes The Weasel	100	Ave Maria
		049	Silent Night	076	Twinkle Twinkle Little Star		
		050	Jingle Bells				

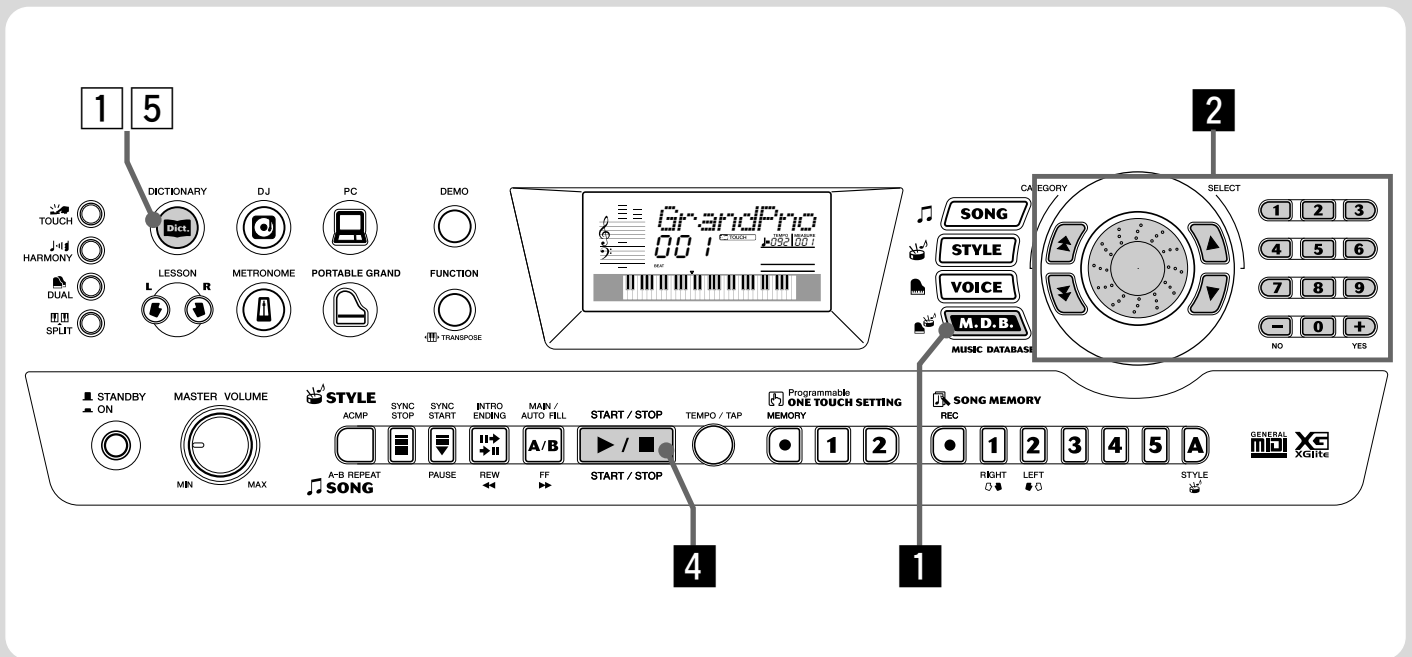

## Music Database

Here's a convenient feature that lets you instantly reconfigure the PSR-292 for playing in different music styles. If you want to perform in a certain genre but don't know what settings to make, simply select the genre from the Music Database — and the PSR-292 makes all the right settings for you!

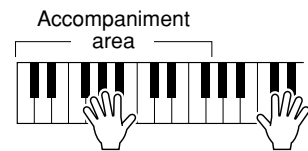

Left hand + Right hand

**Auto accompaniment**  
(for example,  
bass + guitar + drums)

**Melody**

**NOTE**


- For more information on playing proper chords for the auto accompaniment, see "Using Auto Accompaniment — Multi Fingering" on page 43 and "Looking up Chords in the Dictionary" on the next page.

**1** Press the [M.D.B.] (MUSIC DATABASE) button.



**2** Select a Music Database.

Refer to the Music Database List on page 91.

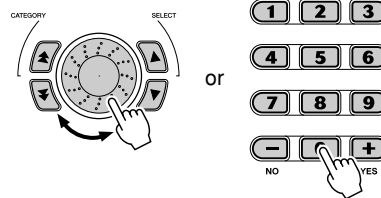


**NOTE**

- You can also select the appropriate category by using the [▲]/[▼] buttons.



## Looking up Chords in the Dictionary


The convenient Dictionary function teaches you how to play chords by showing you the individual notes. In the example below, we'll learn how to play a GM7 chord...

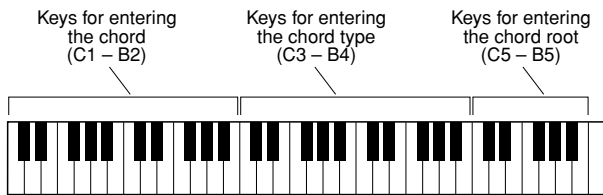


### Learning how to play a specific chord



 
1 Press the [DICTIONARY] button.




2 Specify the root note of the chord (in this case, G).

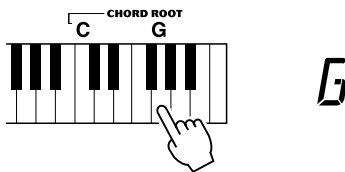

3 Specify the chord type of the chord (in this case, M7).

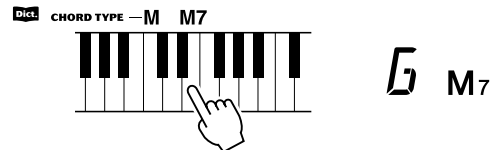

4 Play the notes of the chord as indicated in the keyboard diagram in the display. The chord name flashes when the chord is played properly.

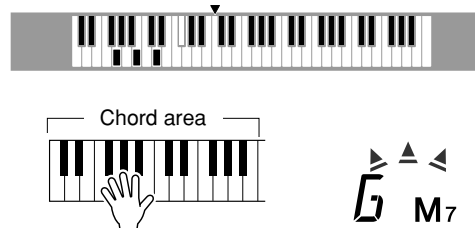


5 To leave the Dictionary function, press the [DICTIONARY] button again




Want to find out more? See page 45.

3 Play a chord with your left hand.

The style starts as soon as you play the keyboard, letting you play the melody along with accompaniment. For more on chords, see "Looking up Chords in the Dictionary" above.

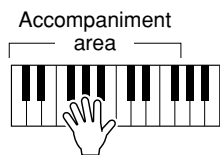

4 Stop the style.

 


Want to find out more? See page 48.



# Indications de l'écran

Le PSR-292 est doté d'un grand écran multifonctions qui affiche tous les réglages importants de l'instrument. La section qui suit décrit brièvement les différents icônes et autres indications apparaissant sur cet écran.

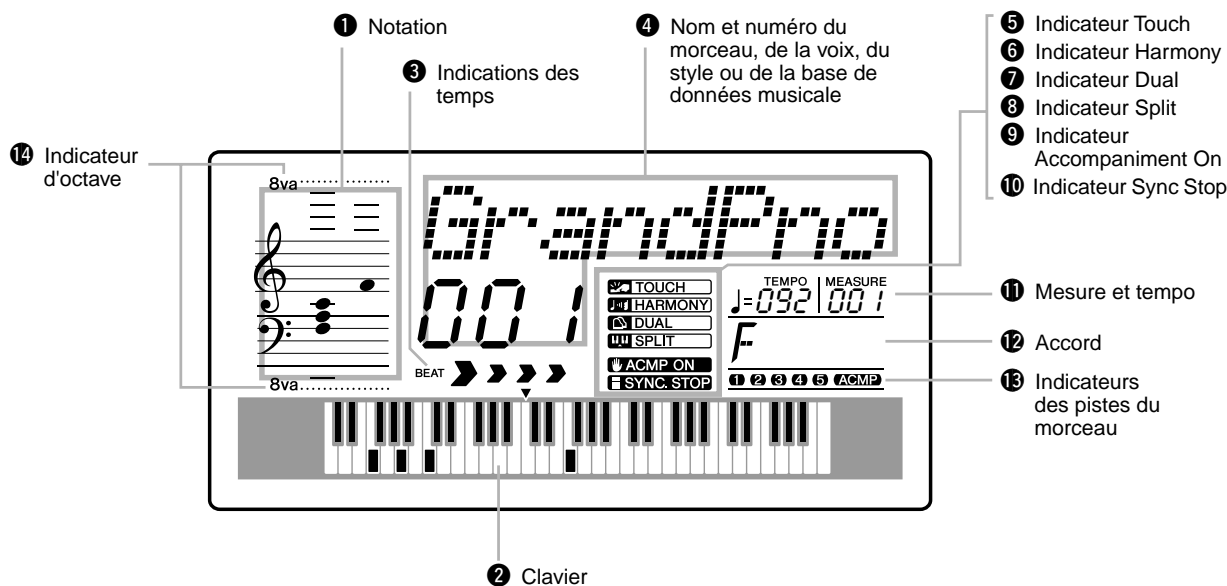

## 1 Notation / 2 Clavier

Ces deux parties de l'écran sont très pratiques pour l'indication de notes. Lorsqu'un morceau est reproduit, elles montrent la mélodie et les notes successives de l'accord. Lorsque vous jouez au clavier, l'écran affiche les notes que vous êtes en train d'interpréter.

### NOTE

- Il est possible que certaines notes n'apparaissent pas dans la section notation de l'écran mais cela ne concerne qu'un nombre limité d'accords spécifiques. C'est dû à une limitation de l'espace disponible sur l'écran.

## 3 Indications des temps

Ces indications (une grande et trois petites) clignotent en séquence et en mesure avec le morceau ou le style. La grande flèche indique le premier temps de la mesure.

## 4 Nom et numéro du morceau, de la voix, du style ou de la base de données musicale

Cette partie de l'écran affiche le nom et le numéro du morceau, de la voix, du style ou de la base de données musicale qui est actuellement sélectionné. Elle affiche également le nom de la catégorie lorsque vous utilisez la touche Category, ou le nom et le réglage/la valeur actuel(le) d'autres fonctions, en plus d'autres messages importants liés aux opérations.

## 5 Indicateur Touch

Cet indicateur apparaît à l'écran lorsque la fonction Touch est activée. (Voir page 30.)

## 6 Indicateur Harmony

Cet indicateur apparaît à l'écran lorsque l'effet Harmony est activé. (Voir page 31.)

## 7 Indicateur Dual

Cet indicateur apparaît à l'écran lorsque la fonction Dual est activée. (Voir page 26.)

## 8 Indicateur Split

Cet indicateur apparaît à l'écran lorsque la fonction Split est activée. (Voir page 27.)

## 9 Indicateur Accompagnement On

Cet indicateur apparaît à l'écran lorsque l'accompagnement automatique est activé. (Voir page 36.)

### ⑩ Indicateur Sync Stop

Cet indicateur apparaît à l'écran lorsque la fonction Sync Stop est activée. (Voir page 40.)

### ⑪ Mesure et tempo

Ces valeurs indiquent la mesure appliquée pendant la reproduction d'un morceau ou d'un style et la valeur actuelle du tempo d'un morceau ou d'un style.

### ⑫ Accord

Cette valeur indique la note fondamentale de l'accord et son type lors de la reproduction d'un morceau (avec accords). Elle indique également les accords qui sont joués dans la section ACMP du clavier lorsque le mode Style et l'accompagnement automatique sont activés.

### ⑬ Indicateurs des pistes du morceau


Lors de l'enregistrement et de la reproduction de morceaux, ces indicateurs montrent l'état actuel des pistes. (Voir page 57.)

### ⑭ Indicateur d'octave

Lorsque les données de note dépassent les limites d'affichage des notes, l'indication « 8va » apparaît à l'écran.

### Pupitre à musique

Introduisez le bord inférieur du pupitre dans la rainure située sur la partie supérieure arrière du panneau de commandes du PSR-292.

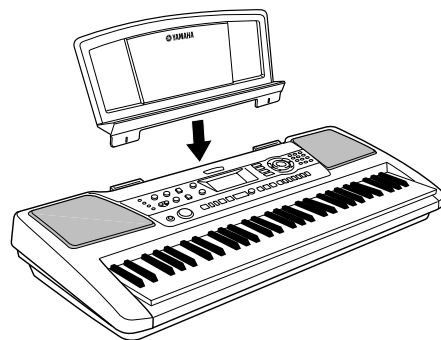




# Portable Grand

This convenient function lets you instantly call up the Grand Piano voice.

## Playing the Portable Grand

Press the [PORTABLE GRAND] button.

 PORTABLE GRAND




Doing this automatically selects the special “Stereo Sampled Piano” Grand Piano voice.

## Using the Metronome

### 1 Call up the Tempo setting.

Press the [TEMPO/TAP] button.


TEMPO / TAP

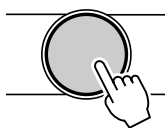


Current Tempo value

### 2 Change the value.

Use the dial or numeric keypad to set the desired Tempo value, or use the [+]/[-] buttons to increase or decrease the value.

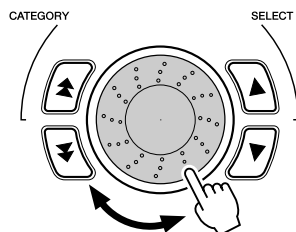

or

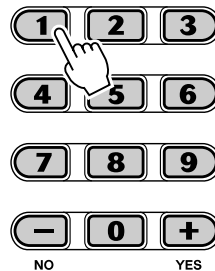

NO

YES

### Restoring the Default Tempo Value


Each song and style has been given a default or standard Tempo setting. If you've changed the Tempo, you can instantly restore the default setting by pressing both [+]/[-] buttons simultaneously (when Tempo is selected).

You can also restore the default Tempo easily by simultaneously holding the [TEMPO/TAP] button and moving the dial.

### 3 Turn on the Metronome.

Press the [METRONOME] button.

METRONOME

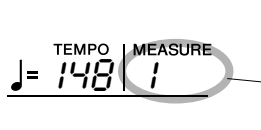

Indicates the beat number in the measure.

To turn the Metronome off, press the [METRONOME] button again.

#### Setting the Metronome Time Signature

The time signature of the Metronome can be set to various quarter-note based meters.

*The Time Signature can be set in the Function mode (page 76).*



- The time signature changes automatically when a style or song is selected.

Numeric keypad	Time signature
01	1/4 — Plays only “1” beats (all high clicks)
02	2/4
03	3/4
04	4/4
:	:
15	15/4
0	Plays no “1” beats (all low clicks)



Indicates current beat number.

#### Adjusting the Metronome Volume

You can adjust the volume of the Metronome sound in the *Function mode (page 76)*. The volume range is 000 - 127.



This exciting feature lets you instantly call up a dynamic DJ voice and style for playing contemporary dance music.

## Playing the DJ

**1** Press the [DJ] button.




**NOTE**

• The PSR-292 has a Demo song and DJ Cancel function that allows you to disable Demo song and DJ function. Set Demo and DJ Cancel in the Function mode (page 76).

Doing this automatically resets the entire instrument for playing the specially programmed DJ voice.

**2** Play the DJ style.

Play keys in the accompaniment area of the keyboard.

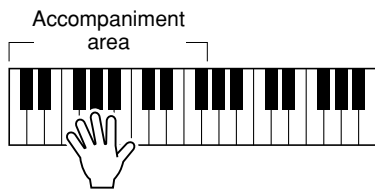


**NOTE**


• When the DJ style is selected, the accompaniment is triggered by only the root of the chord, letting you play with one finger.

**3** Play the DJ voices.


Play the upper area of the keyboard.

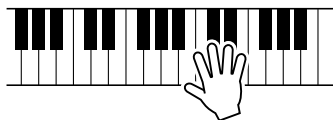

**4** Stop the DJ style.

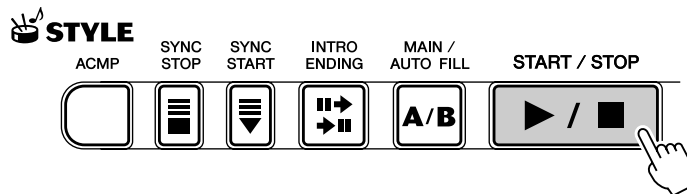

● For example, when 601 “DJ Set 1” is selected:

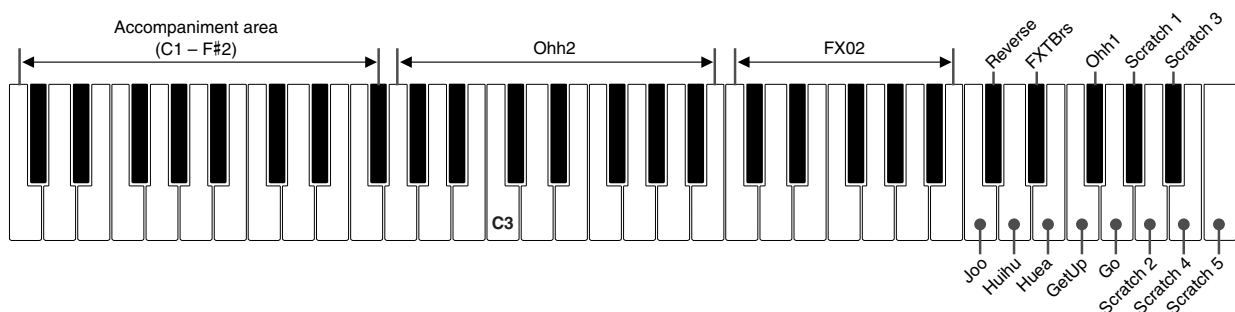




# Playing Voices

The PSR-292 features a total of 605 authentic voices — all of which have been created with Yamaha’s sophisticated AWM (Advanced Wave Memory) tone generation system. These include 480 XG voices and drum kits.

The PSR-292 also has a Dual Voice or Split Voice function that lets you combine two different voices in a layer, or play from separate areas of the keyboard, play the two together across the keyboard.

## Playing a Voice

**1** Press the [VOICE] button.

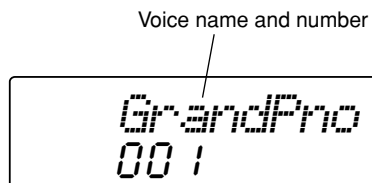

**2** Select the desired voice number.

The categories of each voice and their numbers are shown on the panel. A complete voice list of the available voices is given on page 83.

### VOICE

<b>001~006</b> PIANO	<b>039~046</b> BASS	<b>089~095</b> SYNTH LEAD
<b>007~012</b> E.PIANO	<b>047~058</b> STRINGS	<b>096~100</b> SYNTH PAD
<b>013~024</b> ORGAN	<b>059~062</b> CHOIR	<b>101~108</b> PERCUSSION
<b>025~028</b> ACCORDION	<b>063~071</b> SAXOPHONE	<b>109~120</b> DRUM KITS
<b>029~038</b> GUITAR	<b>072~077</b> TRUMPET	<b>121~600</b> XG
	<b>078~083</b> BRASS	<b>601~605</b> DJ
	<b>084~088</b> FLUTE	<b>000</b> OTS



#### NOTE

- Selecting the #000 OTS voice calls up a convenient feature — automatically selecting an appropriate voice to best match the current style or song.

■ Use the CATEGORY [▲]/[▼] buttons, dial or the SELECT [▲]/[▼] buttons.


#### ● Select the voice CATEGORY

Using the CATEGORY [▲]/[▼] button jumps through the voice numbers according to their category divisions.

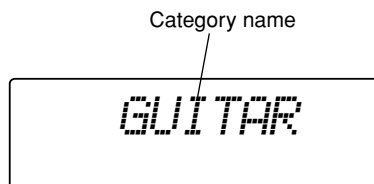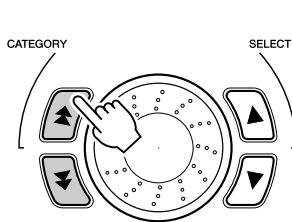

## ● Select the voice number

Select a voice by using the dial or the SELECT [▲]/[▼] buttons.


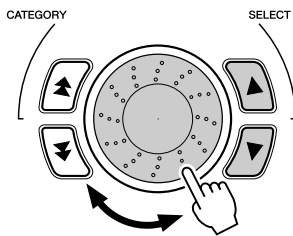


## ■ Use the numeric keypad.

There are two ways to select voices: 1) directly entering the voice number with the numeric keypad, or 2) using the [+]/[-] buttons to step up and down through the voice numbers.


### ● Using the numeric keypad

 Enter the digits of the voice number as listed on page 83. For example, to select voice #109, press “1” on the numeric keypad, then “0”, “9.” For voice numbers beginning with zeroes (such as #042 or #006), the initial zeroes may be omitted. In this case, there is a short pause before the indication appears.

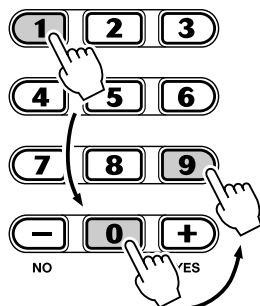

### ● Using the [+]/[-] buttons

Press the [+] button to select the next voice number, and press the [-] button to select the previous voice. Holding down either button continuously scrolls up or down through the numbers.

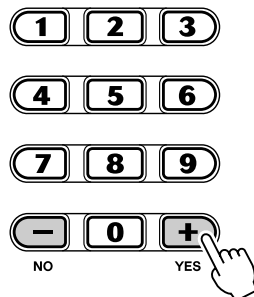


#### NOTE

- Each voice is automatically called up with the most suitable octave range setting. Thus, playing middle C with one voice may sound higher or lower than another voice at the same key.



## 3 Play the selected voice.

Since either the Style, Song or M.D.B. mode is active in the background, you can also play styles, songs or M.D.B., respectively, in the Voice mode by simply pressing the [START/STOP] button. The last selected style, song or M.D.B. will be played.

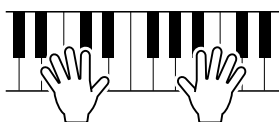

*The following parameters can be set in the Function mode (page 75).*

CATEGORY	SELECT
Main Voice	Volume
	Octave
	Pan
	Reverb Send Level
	Chorus Send Level
	DSP Send Level

### Drum Kit Voice List (voices 109-120)


When one of the 12 Drum Kit voices is selected, you can play different drum and percussion instrument sounds from the keyboard.



• For more details, see page 92.

No.	Name	LCD
109	Standard Kit 1	Std.Kit1
110	Standard Kit 2	Std.Kit2
111	Room Kit	Room Kit
112	Rock Kit	Rock Kit
113	Electronic Kit	Elct.Kit
114	Analog Kit	AnlogKit
115	Dance Kit	DanceKit
116	Jazz Kit	Jazz Kit
117	Brush Kit	BrushKit
118	Symphony Kit	SymphKit
119	SFX Kit 1	SFX Kit1
120	SFX Kit 2	SFX Kit2

● For example, when 109 “Standard Kit 1” is selected:

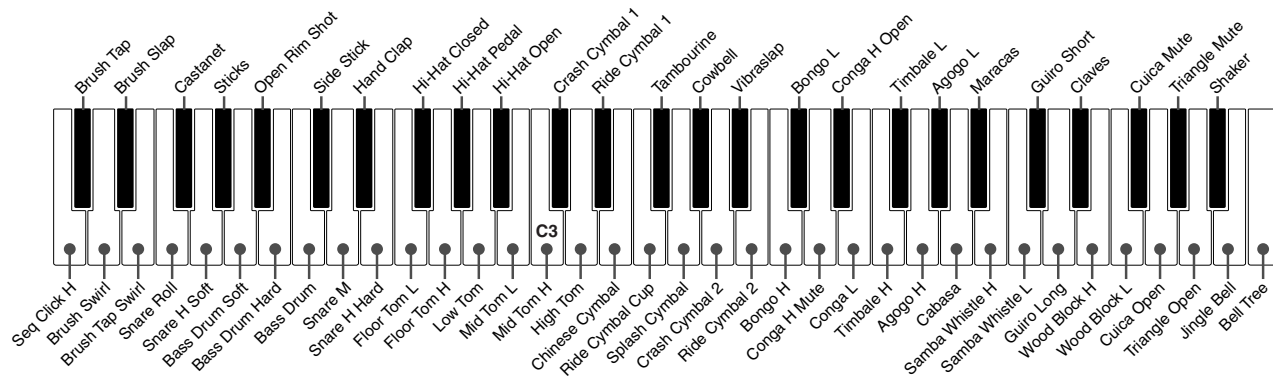


# Playing Voices

## #000 OTS

This special “voice” is actually a convenient feature which automatically selects a suitable voice for you when you select a style. The voice is selected to best match the style or song you’ve called up.

### Select voice #000 (OTS).

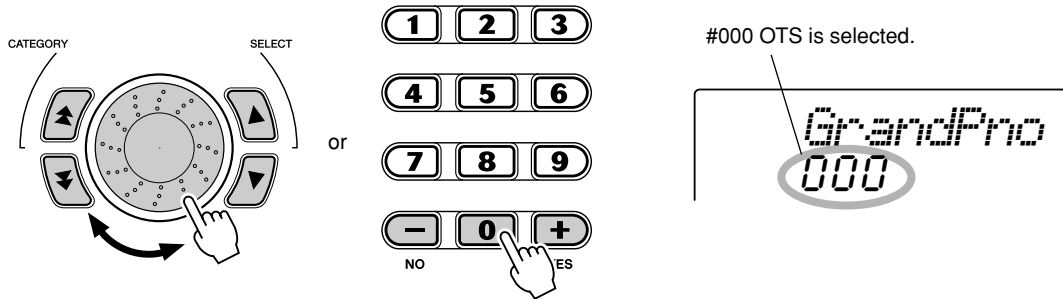


## Dual Voice

The Dual Voice function lets you combine two different voices in a layer — one the Main voice, which is selected normally, and the other the Dual voice, which is selected in the *Function mode* (page 75). You can also set various parameters independently for these voices, such as giving them separate volume, octave, Pan, Reverb, Chorus, and DSP settings. This lets you create an optimum mix for the voices, and enhance the way they blend together.

*The following parameters can be set in the Function mode (page 75).*

CATEGORY	SELECT
Dual Voice	Voice
	Volume
	Octave
	Pan
	Reverb Send Level
	Chorus Send Level
	DSP Send Level

To turn the Dual Voice on or off, press the [DUAL] button.

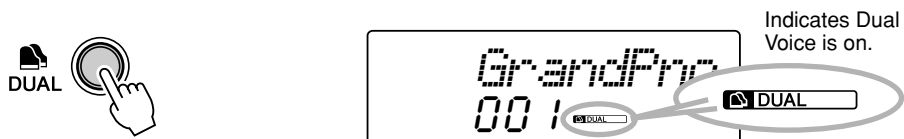

## Split Voice

The Split Voice function lets you assign two different Voices to opposite areas of the keyboard, and play one Voice with your left hand while your right plays another.

For example, you could play bass with the left hand and play piano with the right. The right-hand (or upper) Voice is selected in the Main Voice mode (page 23), and the left-hand (or lower) Voice is selected in the *Function mode* (page 75), along with the other Split Voice parameters shown below.

*The following parameters can be set in the Function mode (page 75).*


CATEGORY	SELECT
Split Voice	Voice
	Volume
	Octave
	Pan
	Reverb Send Level
	Chorus Send Level
	DSP Send Level

To turn the Split Voice on or off, press the [SPLIT] button.



## Setting the Split Point

The Split Point determines the highest key for the split voice and sets the split point.

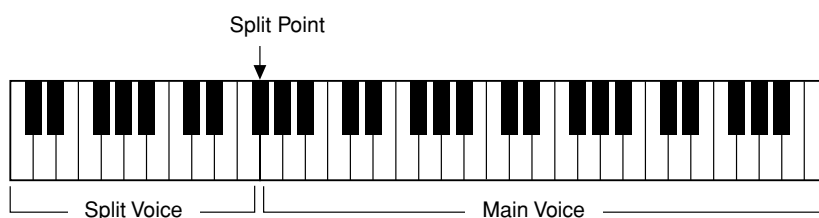

**NOTE**

- This setting also affects the split point for the accompaniment area.

*Split Point can be set in the Function mode (page 75).*

## One Touch Setting (Présélection immédiate)

Cette fonction très utile sélectionne automatiquement la voix qui correspond le mieux au style sélectionné, simplement en appuyant sur l'une des deux touches One Touch Setting. Il existe deux sortes de réglages de présélection immédiate. Vous pouvez créer et stocker vos propres réglages de présélection immédiate pour chaque style.

NOTE

- Vous ne pouvez pas utiliser la fonction One Touch Setting dans le mode Song.


### ● Paramètres One Touch Setting

Voix principale	Voice Number (N° de voix)	Effet	DSP Type
	Volume		On/Off
	Octave	Harmonie	Harmony Type
	Pan		Harmony Volume
	Reverb Send Level		
	Chorus Send Level		
	DSP Send Level		
	Duo de voix	ON/Off	
Voice Number			
Volume			
Octave			
Pan			
Reverb Send Level			
Chorus Send Level			
DSP Send Level			


\* L'accompagnement est automatiquement activé.  
La fonction Synchro Start est automatiquement activée (lorsque le style est arrêté).

### ■ Sélection d'un réglage de présélection immédiate.....

#### 1 Sélectionnez le style.

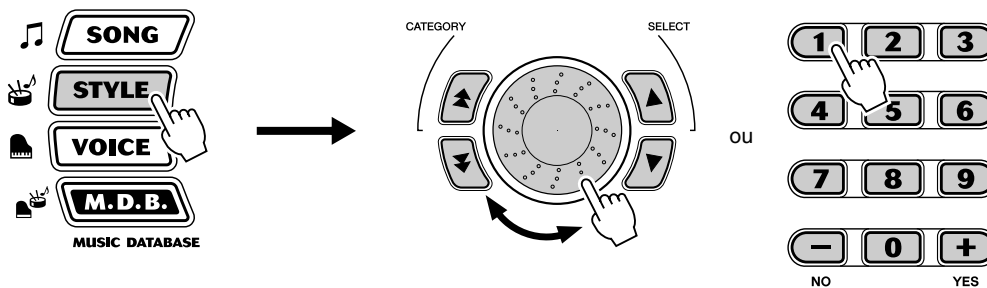

#### 2 Appuyez sur la touche ONE TOUCH SETTING [1] ou [2].

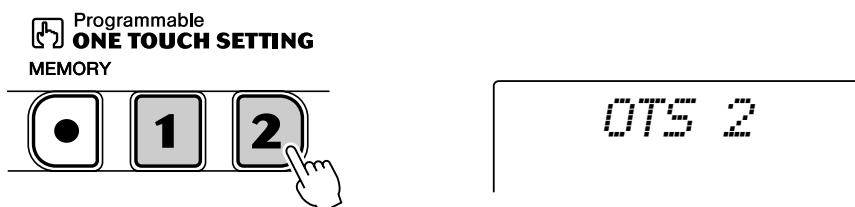

## ■ Creating and Storing a One Touch Setting. •••••


You can also create and store your own custom One Touch Settings for each of the styles.

**1** Select the desired style.

**2** Make the desired settings.

Change the voice and make any other settings you want to use with the selected style and the One Touch Setting buttons.

**3** Press and hold the [MEMORY] button then press the appropriate button — ONE TOUCH SETTING button [1] or [2].

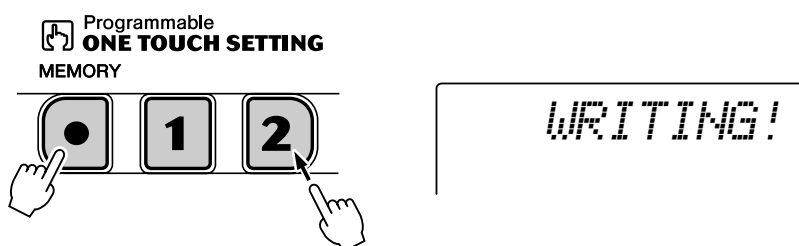

### Restoring the Default One Touch Setting data

Each One Touch Setting can be restored to its default. To do this, simply press and hold the appropriate One Touch Setting button, [1] or [2]. To restore both buttons to their defaults, simultaneously press and hold both the [1] and [2] buttons.

## Transpose and Tuning

You can also adjust the tuning and change the transposition (key) of the entire PSR-292 sound with the Transpose and Tuning functions.

### ■ Transpose •••••

Transpose determines the key of both the main voice and the bass/chord accompaniment. It also determines the pitch of the songs. This allows you to easily match the pitch of the PSR-292 to other instruments or singers, or play in a different key without changing your fingering. The Transpose settings can be adjusted over a range of  $\pm 12$  semitones ( $\pm 1$  octave).

*Transpose can be set in the Function mode (page 75).*

#### NOTE

- The Transpose function has no effect on the Drum Kits voices (#109 - #120) and DJ voices (#601 - #605).

### ■ Tuning •••••

Tuning determines the fine pitch setting of both the main voice and the bass/chord accompaniment. It also determines the pitch of the songs. This allows you to accurately match the tuning with that of other instruments. The Tuning settings can be adjusted over a range of  $\pm 100$  (approx.  $\pm 1$  semitone).

*Tuning can be set in the Function mode (page 75).*

#### NOTE

- The Tuning settings have no effect on the Drum Kit voices (#109 - #120).

## Touch and Touch Sensitivity

The Touch function gives you dynamic, expressive control over the voices, letting you determine how loud or soft the sound is by your playing strength.

**Turn the Touch function on or off as desired by pressing the [TOUCH] button.**

**NOTE**

- To save the Touch on/off status and the Function parameters to internal memory (flash memory), press and hold the [FUNCTION] button. (See page 78.)



Touch Sensitivity lets you set how the PSR-292 responds to your playing strength, allowing you to customize the keyboard to suit your own playing style. The default Touch Sensitivity is 2 (Medium).

*Sensitivity can be set in the Function mode (page 75).*

● **Settings:**

<b>1 (Soft)</b>	This results in limited touch response, and produces a relatively narrow dynamic range, no matter how lightly or strongly you play the keys.
<b>2 (Medium)</b>	This lets you play over a normal dynamic range (soft to loud).
<b>3 (Hard)</b>	This is designed for playing very soft passages, giving you slightly more detailed control in the soft volume range.

When Touch is turned off, a constant volume (corresponding to a velocity value of 80) is produced.



The PSR-292 is equipped with a wide variety of effects that can be used to enhance the sound of the voices. The PSR-292 has four separate effect systems — Harmony, Reverb, Chorus and DSP — and each has many different effect types to choose from.

## Harmony

The Harmony section features a variety of performance effects that enhance the melodies you play when using the accompaniment styles of the PSR-292. A total of twenty-six Harmony types are available. (See page 33.)

Tremolo, Trill and Echo effects can be used even if accompaniment is off. There are five different Harmony Types that automatically create harmony parts (for notes played in the upper section of the keyboard) to match the accompaniment chords.

### Turn on/off the Harmony effect.

Press the [HARMONY] button.



Indicates Harmony effect is on.

#### IMPORTANT

- For the first five Harmony Types (Duet, Trio, Block, Country, and Octave), chords must be played in the Accompaniment area of the keyboard. The Harmony voice(s) change in pitch to best match the chords you play.
- The speed of the Trill, Tremolo, and Echo effects depends on the Tempo setting (page 33).

#### NOTE

- Each voice of the PSR-292 has its own independent Harmony setting.

Harmony type and Harmony Volume (when Harmony Type 1 - 5 is selected) can be set in the Function mode (page 76).

## Reverb

The Reverb effect reproduces the natural ambient “wash” of sound that occurs when a instrument is played in a room or concert hall. A total of eight different Reverb types simulating various different performance environments are available. (See page 33.)

The following parameters can be set in the Function mode (pages 75, 76).

CATEGORY	SELECT
Effect	Reverb Type
Main Voice	Reverb Send Level
Dual Voice	Reverb Send Level
Split Voice	Reverb Send Level

#### NOTE

- Twelve additional Reverb Types are available when controlling the PSR-292 from a MIDI device. (For details, See page 97.)
- Each style of the PSR-292 has its own independent Reverb setting.

## Chorus

The Chorus effect lets you enhance the sound of the voices with the use of pitch modulation. Two basic types are provided: Chorus and Flanger. Chorus produces a thicker, warmer, and more animated sound, whereas Flanger creates a swirling, metallic effect. A total of four Chorus types are available. (See page 34.)

*The following parameters can be set in the Function mode (pages 75, 76).*

CATEGORY	SELECT
Effect	Chorus Type
Main Voice	Chorus Send Level
Dual Voice	Chorus Send Level
Split Voice	Chorus Send Level

## DSP

The DSP effect section provides distortion and chorus effects, plus a wealth of other useful and dynamic effects for enhancing and changing the sound of the voices. Included among these miscellaneous effects are reverse gate reverb, phaser, rotary speaker, tremolo, echo, delay, distortion, equalization, and wah. A total of thirty-eight DSP types are available. (See page 34.)

*The following parameters can be set in the Function mode (pages 75, 76).*

CATEGORY	SELECT
Effect	DSP Type
Main Voice	DSP Send Level
Dual Voice	DSP Send Level
Split Voice	DSP Send Level

### NOTE

- Each voice of the PSR-292 has its own independent DSP setting.
- Fifty-one additional DSP Types are available when controlling the PSR-292 from a MIDI device. (For details, see page 97.)



## ■ Effect Types

### ● Harmony Types

No.	Harmony Type	Display Name	Description
1	Duet	Duet	Harmony types 1 - 5 are pitch-based and add one-, two- or three-note harmonies to the single-note melody played in the right hand. These types only sound when chords are played in the auto accompaniment area of the keyboard.
2	Trio	Trio	
3	Block	Block	
4	Country	Country	
5	Octave	Octave	
6	Trill 1/4 note	Tril1/4	<p>Types 6 - 26 are rhythm-based effects and add embellishments or delayed repeats in time with the auto accompaniment. These types sound whether the auto accompaniment is on or not; however, the actual speed of the effect depends on the Tempo setting (page 41). The individual note values in each type let you synchronize the effect precisely to the rhythm. Triplet settings are also available: 1/6 = quarter-note triplets, 1/12 = eighth-note triplets, 1/24 = sixteenth-note triplets.</p> <ul style="list-style-type: none"> <li>• The Trill effect Types (6 - 12) create two-note trills (alternating notes) when two notes are held.</li> <li>• The Tremolo effect Types (13 - 19) repeat all held notes (up to four).</li> <li>• The Echo effect Types (20 - 26) create delayed repeats of each note played.</li> </ul>
7	Trill 1/6 note	Tril1/6	
8	Trill 1/8 note	Tril1/8	
9	Trill 1/12 note	Tril1/12	
10	Trill 1/16 note	Tril1/16	
11	Trill 1/24 note	Tril1/24	
12	Trill 1/32 note	Tril1/32	
13	Tremolo 1/4 note	Trem1/4	
14	Tremolo 1/6 note	Trem1/6	
15	Tremolo 1/8 note	Trem1/8	
16	Tremolo 1/12 note	Trem1/12	
17	Tremolo 1/16 note	Trem1/16	
18	Tremolo 1/24 note	Trem1/24	
19	Tremolo 1/32 note	Trem1/32	
20	Echo 1/4 note	Echo1/4	
21	Echo 1/6 note	Echo1/6	
22	Echo 1/8 note	Echo1/8	
23	Echo 1/12 note	Echo1/12	
24	Echo 1/16 note	Echo1/16	
25	Echo 1/24 note	Echo1/24	
26	Echo 1/32 note	Echo1/32	

### ● Reverb Types

No.	Reverb Type	Display Name	Description
1	Hall 1	Hall1	Concert hall reverb.
2	Hall 2	Hall1	
3	Room 1	Room1	Small room reverb.
4	Room 2	Room2	
5	Stage 1	Stage1	Reverb for solo instruments.
6	Stage 2	Stage2	
7	Plate 1	Plate1	Simulated steel plate reverb.
8	Plate 2	Plate2	
9	Off	Off	No effect.

# Effects

## ● Chorus Types

No.	Chorus Type	Display Name	Description
1	Chorus 1	Chorus1	Conventional chorus program with rich, warm chorusing.
2	Chorus 2	Chorus2	
3	Flanger 1	Flanger1	Pronounced three-phase modulation with a slight metallic sound.
4	Flanger 2	Flanger2	
5	Off	Off	No effect.

## ● DSP Types

No.	DSP Type	Display Name	Description
1	Hall 1	Hall1	Concert hall reverb.
2	Hall 2	Hall2	
3	Room 1	Room1	Small room reverb.
4	Room 2	Room2	
5	Stage 1	Stage1	Reverb for solo instruments.
6	Stage 2	Stage2	
7	Plate 1	Plate1	Simulated steel plate reverb.
8	Plate 2	Plate2	
9	Early Reflection 1	ER1	Early reflections only.
10	Early Reflection 2	ER2	
11	Gate Reverb	Gate1	Gated reverb effect, in which the reverberation is quickly cut off for special effects.
12	Reverse Gate	Gate2	Similar to Gate Reverb, but with a reverse increase in reverb.
13	Chorus 1	Chorus1	Conventional chorus effect with rich, warm chorusing.
14	Chorus 2	Chorus2	
15	Flanger 1	Flanger1	Pronounced three-phase modulation with slight metallic sound.
16	Flanger 2	Flanger2	
17	Symphonic	Symphony	Exceptionally rich & deep chorusing.
18	Phaser	Phaser	Pronounced, metallic modulation with periodic phase change.
19	Rotary Speaker 1	Rotary1	Rotary speaker simulation.
20	Rotary Speaker 2	Rotary2	
21	Tremolo 1	Tremolo1	Rich Tremolo effect with both volume and pitch modulation.
22	Tremolo 2	Tremolo2	
23	Guitar Tremolo	Guitar Tremolo	Simulated electric guitar tremolo.
24	Auto Pan	AutoPan	Several panning effects that automatically shift the sound position (left, right, front, back).
25	Auto Wah	AutoWah	Repeating filter sweep "wah" effect.
26	Delay Left - Center - Right	DelayLCR	Three independent delays, for the left, right and center stereo positions.
27	Delay Left - Right	DelayLR	Initial delay for each stereo channel, and two separate feedback delays.
28	Echo	Echo	Stereo delay, with independent feedback level settings for each channel.
29	Cross Delay	CrossDly	Complex effect that sends the delayed repeats "bouncing" between the left and right channels.
30	Karaoke	Karaoke	Deep, pronounced echo effect.
31	Distortion Hard	D Hard	Hard-edged, warm distortion.
32	Distortion Soft	D Soft	Soft, warm distortion.
33	Overdrive	Overdrv	Natural distortion, like that of an overdriven amplifier.
34	Amp Simulation	AmpSimu	Characteristic sound of a guitar amplifier/speaker.
35	EQ Disco	EQ Disco	Equalizer effect that boosts both high and low frequencies, as is typical in most disco music.
36	EQ Telephone	EQ Tel	Equalizer effect that cuts both high and low frequencies, to simulate the sound heard through a telephone receiver.
37	3Band EQ	3BandEQ	Equalizer with three separate frequency bands.
38	2Band EQ	2BandEQ	Equalizer with two separate frequency bands.
39	No Effect	Off	No effect



# Selecting and Playing Styles

The PSR-292 provides dynamic rhythm/accompaniment patterns (styles) — as well as voice settings appropriate for each style — for various popular musical categories.

A total of 135 different styles are available, in several different categories. Each style is made up of separate “sections” — Intro, Main A and B, and Ending — letting you call up different accompaniment sections as you perform.

The auto accompaniment features that are built into the rhythms add the excitement of instrumental backing to your performance, letting you control the accompaniment by the chords you play. Auto accompaniment effectively splits the keyboard into two areas: The upper is used for playing a melody line, and the lower (set by default to keys F#2 and lower) is for the auto accompaniment function.

The PSR-292 also features the convenient Dictionary function (page 45). Dictionary provides you with a built-in “chord encyclopedia” that teaches you how to play any chord you specify by showing you the appropriate notes in the display.

## Selecting a Style

**1** Press the [STYLE] button.



Style name and number



**2** Select the desired style number.


The categories of each styles and their numbers are shown on the panel. A complete style list of the available styles is given on page 90.

### STYLE

<b>001~010</b> 8BEAT	<b>071~077</b> COUNTRY
<b>011~018</b> 16BEAT	<b>078~089</b> LATIN
<b>019~026</b> BALLAD	<b>090~100</b> BALLROOM
<b>027~040</b> DANCE	<b>101~111</b> TRADITIONAL
<b>041~047</b> DISCO	<b>112~118</b> WALTZ
<b>048~060</b> SWING & JAZZ	<b>119~123</b> DJ
<b>061~070</b> R & B	<b>124~135</b> PIANIST

■ Use the dial. You can also use the CATEGORY and/or SELECT buttons.


Turn the dial and select the desired style. Select the appropriate category by using the CATEGORY [▲]/[▼] buttons. When you come close to the desired number, use the SELECT [▲]/[▼] buttons to step down and up through the style numbers.

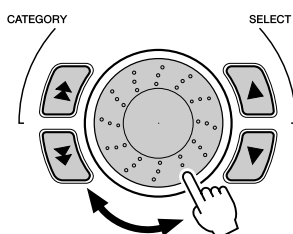

# Selecting and Playing Styles

## ■ Use the numeric keypad.

Style numbers can be selected in the same way as with the voices (page 24). You can use the numeric keypad to directly enter the style number, or use the [+]/[-] buttons to step up and down through the styles.

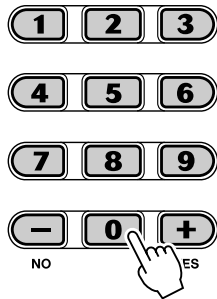

## Playing the Styles

The panel buttons below function as style controls.

Pressing this button alternately enables and cancels the bass and chord accompaniment. (See below.)

Pressing this button alternately enables and cancels the Sync Stop function. (See page 40.)

Pressing this button alternately enables and cancels the Sync Start function. (See page 37.)

Pressing this button switches between the Main A and Main B sections, automatically adding a fill-in pattern before changing the section. (See page 42.)

Pressing this button alternately starts and stops style playback.

This controls the Intro and Ending sections. (See pages 38, 39.)

**STYLE** ACMP SYNC STOP SYNC START INTRO ENDING MAIN / AUTO FILL START / STOP

### 1 Turn on the auto accompaniment.

Press the [ACMP] button to turn on (enable) the auto accompaniment.

**STYLE** ACMP SYNC STOP SYNC START INTRO ENDING MAIN / AUTO FILL START / STOP


Indicates that auto accompaniment is on.

## 2 Start the style.


You can do this in one of the following ways:

### ■ Pressing the [START/STOP] button

The rhythm starts playing immediately without bass and chord accompaniment. The currently selected Main A or B section will play.

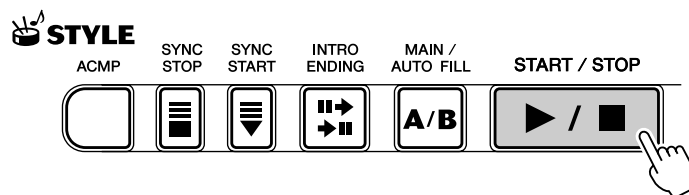


You can select the Main A or B section by pressing the appropriate button — [MAIN A/B] — before pressing the [START/STOP] button. (The display briefly shows the letter of the selected section: “MAIN A” or “MAIN B.”)

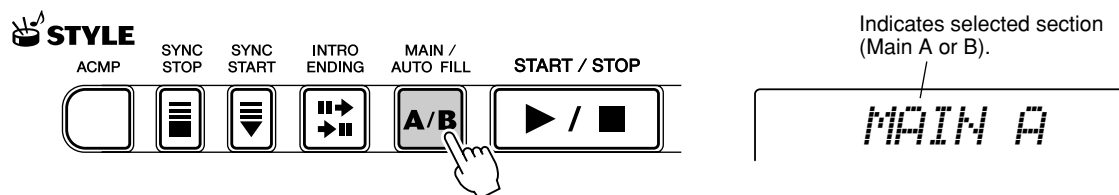

### ■ Using Tap Tempo to Start


This useful feature lets you tap out the speed (tempo) of the style and automatically start the style at that tapped speed.

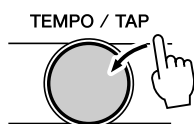

Simply tap the [TEMPO/TAP] button four times (or three times for a 3/4 time style), and the style starts automatically at the tempo you tapped. You can also change the tempo while the style is playing by tapping the [TEMPO/TAP] button twice at the desired tempo.

### ■ Using Sync Start

The PSR-292 also has a Sync Start function that allows you to start the style by simply pressing a key on the keyboard. To use Sync Start, first press the [SYNC START] button (the beat marks all flash to indicate Sync Start standby), then press any key on the keyboard. (When auto accompaniment is on, play a key or chord in the auto accompaniment area of the keyboard.)

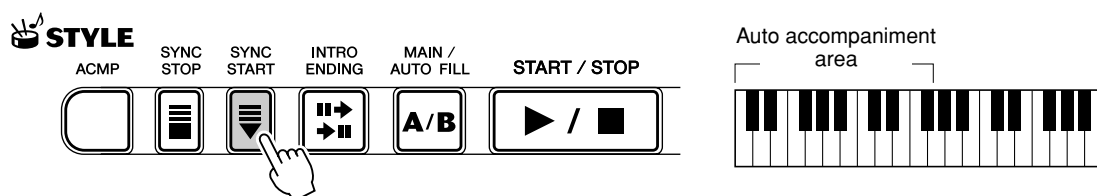


# Selecting and Playing Styles

## Starting with an Intro section


Each style has its own two- or four-measure Intro section. When used with the auto accompaniment, many of the Intro sections also include special chord changes and embellishments to enhance your performance.

### To start with an Intro section:

- 1) Press the [MAIN/AUTO FILL] button — to select which section (A or B) is to follow the Intro.

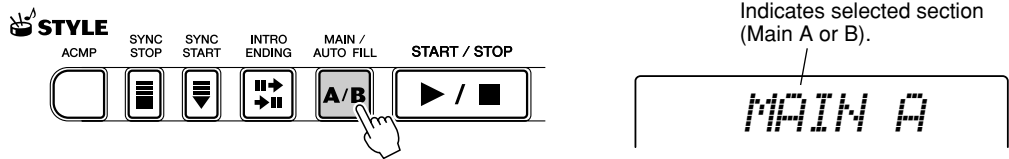

- 2) Press the [INTRO ENDING] button.

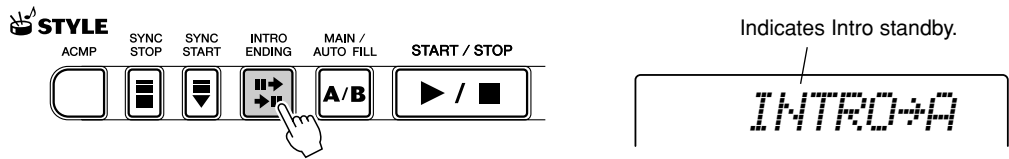


To actually start the Intro section, press the [START/STOP] button.

## Using Sync Start with an Intro section


You can also use the Sync Start function with the special Intro section of the selected style.

### To use Sync Start with an Intro section:


- 1) Press the [MAIN/AUTO FILL] button — to select which section (A or B) is to follow the Intro.

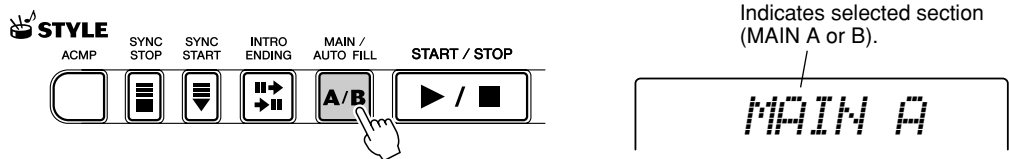

- 2) Press the [INTRO ENDING] button.

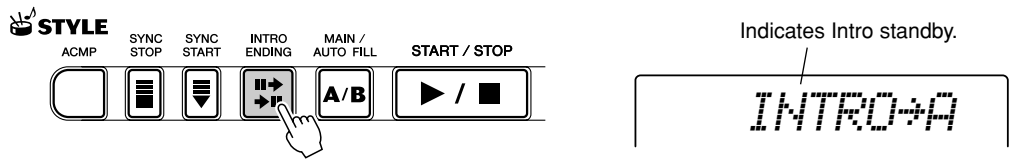

- 3) Press the [SYNC START] button to enable Sync Start, and start the Intro section and accompaniment by playing any key on the keyboard. (When auto accompaniment is on, play a key or chord in the auto accompaniment area of the keyboard.)

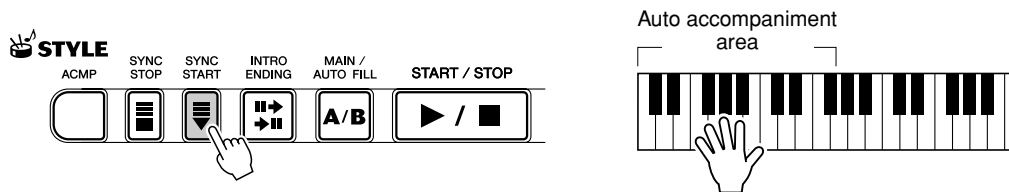

## 3 Change chords using the auto accompaniment feature.

Try playing a few successive chords with your left hand, and notice how the bass and chord accompaniment change with each chord you play. (Refer to page 43 for more information on how to use auto accompaniment.)

HINT

- The [ACMP] button can also be used to turn off and on the bass/chord accompaniment while playing — allowing you to create dynamic rhythmic breaks in your performance.

NOTE

- Chords played in the auto accompaniment area of the keyboard are also detected and played when the style is stopped. In effect, this gives you a “split keyboard,” with bass and chords in the left hand and the normally selected voice in the right.

## 4 Stop the style.


You can do this in one of three ways:

### ■ Pressing the [START/STOP] button

The style stops playing immediately.

### ■ Using an Ending section

Press the [INTRO ENDING] button. The style stops after the Ending section is finished.

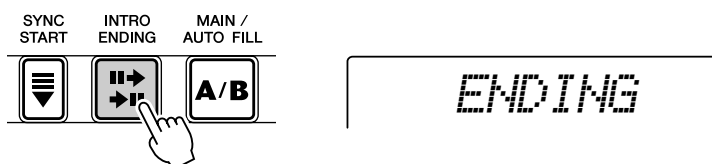

NOTE

- To have the Ending section gradually slow down (*ritardando*) as it is playing, press the [INTRO ENDING] button twice quickly.

END<sup>rit.</sup>

### ■ Pressing the [SYNC START] button


This immediately stops the style and automatically enables Sync Start, letting you restart the style by simply playing a chord or key in the auto accompaniment area of the keyboard.

# Selecting and Playing Styles


## Sync Stop

This convenient feature lets you stop (or pause) the style by releasing your fingers from the auto accompaniment area of the keyboard. Playing the chord again restarts the style. This is ideal for putting dynamic breaks in your performance — for example, stopping the rhythm and accompaniment briefly while you play a melodic break or solo with your right hand.

- 1 Press the [ACMP] button.**  
To turn accompaniment on.

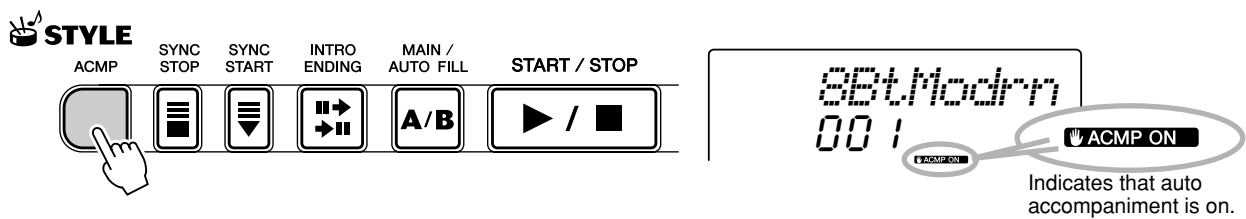


- 2 Press the [SYNC STOP] button.**  
Setting Sync Stop to on before starting the style automatically sets Sync Start to on as well.

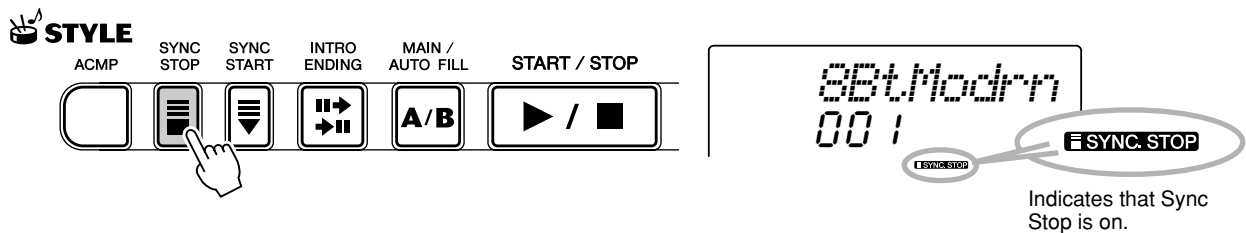

- 3 Play a chord on the keyboard (in the auto accompaniment area of the keyboard).**  
The style starts as soon as you play a chord.

- 4 Stop the style by releasing the chord.**

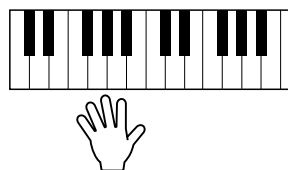

- 5 To start the style again, play a chord.**
- 6 To turn Sync Stop off, press the [SYNC STOP] button again.**  
To stop the style completely, press the [START/STOP] button.





## Changing the Tempo

The tempo of style playback can be adjusted over a range of 32 - 280 bpm (beats per minute).

### 1 Call up the Tempo setting.

Press the [TEMPO/TAP] button.

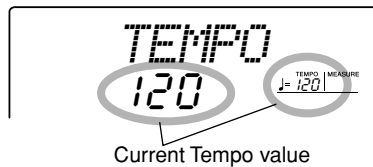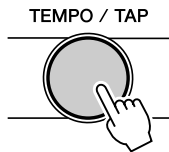


#### NOTE


- When style playback is stopped and a different style is selected, the tempo returns to the default setting of the new style. When switching styles during playback, the last tempo setting is maintained. (This allows you to keep the same tempo, even when changing styles.)

### 2 Change the value.

Use the dial or numeric keypad to set the desired Tempo value, or use the [+] / [-] buttons to increase or decrease the value.

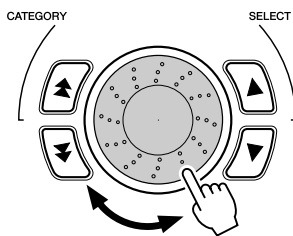

OR

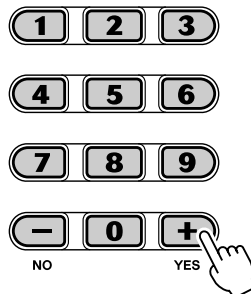

#### Restoring the Default Tempo Value

Each song and style has been given a default or standard Tempo setting. If you've changed the Tempo, you can instantly restore the default setting by pressing both [+] / [-] buttons simultaneously (when Tempo is selected).

You can also restore the default Tempo easily by simultaneously holding the [TEMPO/TAP] button and moving the dial.

#### HINT

- You can also use the convenient Tap Tempo function to change the tempo by "tapping" a new one in real time. (See page 37.)

## Selecting and Playing Styles


### Accompaniment Sections (Main A/B and Fill-ins)

While the style is playing, you can add variation in the rhythm/accompaniment by pressing the [MAIN/AUTO FILL] button. This switches between the Main A and Main B sections, automatically playing a fill-in pattern to smoothly lead into the next section. For example, if the Main A section is currently playing, pressing this button automatically plays a fill-in pattern, followed by the Main B section. (See illustration below.)

You can also select either the Main A or B section to start by pressing the [MAIN/AUTO FILL] button before starting the style.

NOTE

- Rhythm sounds and fill-in sections are not available when one of the Pianist styles (#124 - #135) are selected.

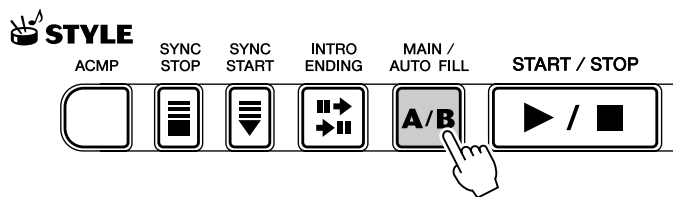

This appears while the fill-in pattern is playing.


Fill A+B

#### About the Fill-in Patterns

If you press the [MAIN/AUTO FILL] button before beat 4...

...a fill-in pattern plays immediately until the end of the measure...

...and the Main A or B section begins here.

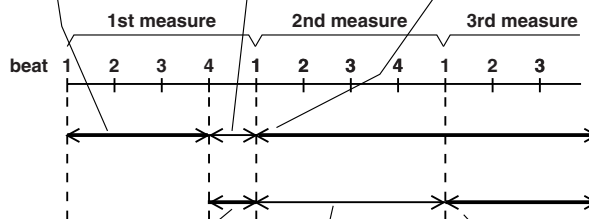

If you press the [MAIN/AUTO FILL] button here, after beat 4...

...a fill-in pattern plays from here...

...and the Main A or B section begins here.

### Adjusting the Style Volume

The playback volume of the style can be adjusted in the *Function mode* (page 76). This volume control affects only the Style volume. The volume range is 000 - 127.

NOTE

- Style Volume cannot be changed unless the Style mode is active.



## Selecting and Playing Styles

Chord Name/[Abbreviation]	Normal Voicing	Chord (C)	Display
Major [M]	1 - 3 - 5	C	C
Add ninth [(9)]	1 - 2 - 3 - 5	C(9)	C(9)
Sixth [6]	1 - (3) - 5 - 6	C6	C6
Sixth ninth [6(9)]	1 - 2 - 3 - (5) - 6	C6(9)	C6(9)
Major seventh [M7]	1 - 3 - (5) - 7 or 1 - (3) - 5 - 7	CM7	CM7
Major seventh ninth [M7(9)]	1 - 2 - 3 - (5) - 7	CM7(9)	CM7(9)
Major seventh add sharp eleventh [M7(#11)]	1 - (2) - 3 - #4 - 5 - 7 or 1 - 2 - 3 - #4 - (5) - 7	CM7(#11)	CM7(#11)
Flatted fifth [(b5)]	1 - 3 - b5	C(b5)	Cb5
Major seventh flatted fifth [M7b5]	1 - 3 - b5 - 7	CM7b5	CM7b5
Suspended fourth [sus4]	1 - 4 - 5	Csus4	Csus4
Augmented [aug]	1 - 3 - #5	Caug	Caug
Major seventh augmented [M7aug]	1 - (3) - #5 - 7	CM7aug	CM7aug
Minor [m]	1 - b3 - 5	Cm	Cm
Minor add ninth [m(9)]	1 - 2 - b3 - 5	Cm(9)	Cm(9)
Minor sixth [m6]	1 - b3 - 5 - 6	Cm6	Cm6
Minor seventh [m7]	1 - b3 - (5) - b7	Cm7	Cm7
Minor seventh ninth [m7(9)]	1 - 2 - b3 - (5) - b7	Cm7(9)	Cm7(9)
Minor seventh add eleventh [m7(11)]	1 - (2) - b3 - 4 - 5 - (b7)	Cm7(11)	Cm7(11)
Minor major seventh [mM7]	1 - b3 - (5) - 7	CmM7	CmM7
Minor major seventh ninth [mM7(9)]	1 - 2 - b3 - (5) - 7	CmM7(9)	CmM7(9)
Minor seventh flatted fifth [m7b5]	1 - b3 - b5 - b7	Cm7b5	Cm7b5
Minor major seventh flatted fifth [mM7b5]	1 - b3 - b5 - 7	CmM7b5	CmM7b5
Diminished [dim]	1 - b3 - b5	Cdim	Cdim
Diminished seventh [dim7]	1 - b3 - b5 - 6	Cdim7	Cdim7
Seventh [7]	1 - 3 - (5) - b7 or 1 - (3) - 5 - b7	C7	C7
Seventh flatted ninth [7(b9)]	1 - b2 - 3 - (5) - b7	C7(b9)	C7(b9)
Seventh add flatted thirteenth [7(b13)]	1 - 3 - 5 - b6 - b7	C7(b13)	C7(b13)
Seventh ninth [7(9)]	1 - 2 - 3 - (5) - b7	C7(9)	C7(9)
Seventh add sharp eleventh [7(#11)]	1 - (2) - 3 - #4 - 5 - b7 or 1 - 2 - 3 - #4 - (5) - b7	C7(#11)	C7(#11)
Seventh add thirteenth [7(13)]	1 - 3 - (5) - 6 - b7	C7(13)	C7(13)
Seventh sharp ninth [7(#9)]	1 - #2 - 3 - (5) - b7	C7(#9)	C7(#9)
Seventh flatted fifth [7b5]	1 - 3 - b5 - b7	C7b5	C7b5
Seventh augmented [7aug]	1 - 3 - #5 - b7	C7aug	C7aug
Seventh suspended fourth [7sus4]	1 - 4 - (5) - b7	C7sus4	C7sus4
One plus two plus five [1+2+5]	1 - 2 - 5	C1+2+5	C

### NOTE

 
- Notes in parentheses can be omitted.
- Playing two same root keys in the adjacent octaves produces accompaniment based only on the root.
- A perfect fifth (1 + 5) produces accompaniment based only on the root and fifth which can be used with both major and minor chords.
- The chord fingerings listed are all in "root" position, but other inversions can be used — with the following exceptions:  
  - m7, m7b5, 6, m6, sus4, aug, dim7, 7b5, 6(9), 1+2+5.
- Inversion of the 7sus4 and m7(11) chords are not recognized if the notes shown in parentheses are omitted.
- The auto accompaniment will sometimes not change when related chords are played in sequence (e.g. some minor chords followed by the minor seventh).
- Two-note fingerings will produce a chord based on the previously played chord.

## Dictionary

The Dictionary function is essentially a built-in “chord book” that shows you the individual notes of chords. It is ideal when you know the name of a certain chord and want to quickly learn how to play it.


### 1 Press the [DICTIONARY] button.

DICTIONARY




### 2 Specify the root of the chord.

Press the key on the keyboard that corresponds to the desired chord root (as printed on the panel).

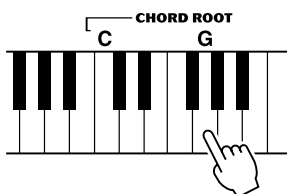


Pressing this key selects the root G.

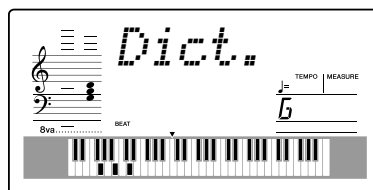


### 3 Specify the type of the chord (major, minor, seventh, etc.).

Press the key on the keyboard that corresponds to the desired chord type (as printed on the panel).

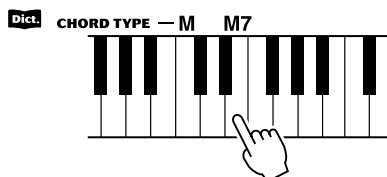

Pressing this key selects the major seventh chord type (M7).


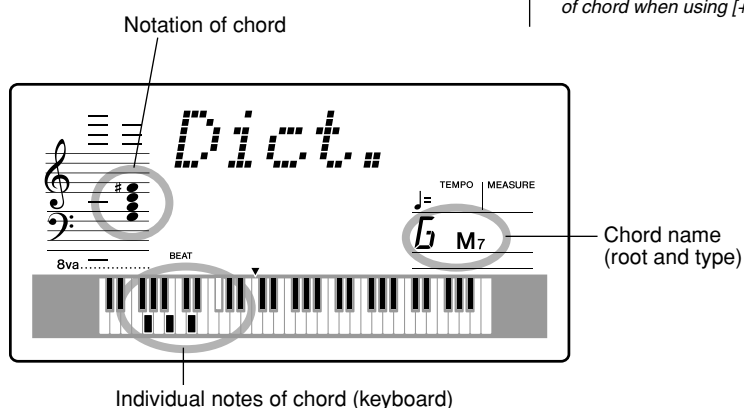


#### NOTE

- For a few specific chords, not all notes may be shown in the notation section of the display. This is due to space limitations in the display.
- You can also show the inversion of chord when using [+]/[-] button.

## 4 Play the chord.

Play the chord (as indicated in the display) in the chord area of the keyboard. The chord name flashes in the display when the correct notes are held down. (Inversions for many of the chords are also recognized.)

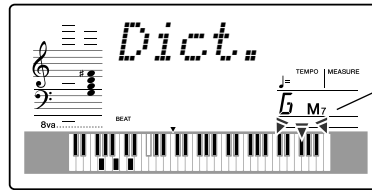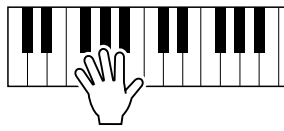


Indicates notes to be played. Flashes when correct notes are held.

To leave the Dictionary function, press the [DICTIONARY] button again.

### ..... What is a Chord? .....

**The simple answer:** Three or more notes played simultaneously is a chord. (Two notes played together is an “interval” — an interval being the distance between two different notes. This is also referred to as a “harmony.”) Depending on the intervals between the three or more notes, a chord can sound beautiful or muddy and dissonant.

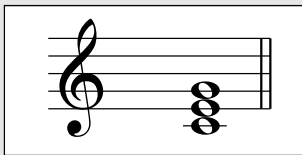

The organization of notes in the example at left — a triad chord — produces a pleasant, harmonious sound. Triads are made up of three notes and are the most basic and common chords in most music.

In this triad, the lowest note is the “root.” The root is the most important note in the chord, because it anchors the sound harmonically by determining its “key” and forms the basis for how we hear the other notes of the chord.

The second note of this chord is four semitones higher than the first, and the third is three semitones higher than the second. Keeping our root note fixed and changing these notes by a semitone up or down (sharp or flat), we can create four different chords.

<p><b>Major chord</b> (ex. C)</p> <p>Minor 3rd   Major 3rd</p>	<p><b>Minor chord</b> (ex. Cm)</p> <p>Major 3rd   Minor 3rd</p>	<p><b>Augmented chord</b> (ex. Caug)</p> <p>Major 3rd   Major 3rd</p>	<p><b>Diminished chord</b> (ex. Cdim)</p> <p>Minor 3rd   Minor 3rd</p>
--	---	---	--

Keep in mind that we can also change the “voicing” of a chord — for example, change the order of the notes (called “inversions”), or play the same notes in different octaves — without changing the basic nature of the chord itself.

#### Inversion examples for the key of C




Beautiful sounding harmonies can be built in this manner. The use of intervals and chords is one of the most important elements in music. A wide variety of emotions and feelings can be created depending on the types of chords used and the order in which they are arranged.

## ••••• Writing Chord Names •••••

Knowing how to read and write chord names is an easy yet invaluable skill. Chords are often written in a kind of shorthand that makes them instantly recognizable (and gives you the freedom to play them with the voicing or inversion that you prefer). Once you understand the basic principles of harmony and chords, it's very simple to use this shorthand to write out the chords of a song.

First, write the root note of the chord in an uppercase letter. If you need to specify sharp or flat, indicate that to the right of the root. The chord type should be indicated to the right as well. Examples for the key of C are shown below.

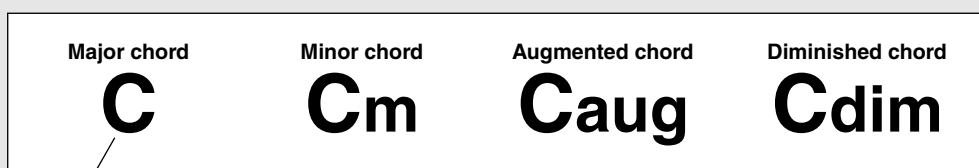


For simple major chords, the type is omitted.

**One important point:** Chords are made up of notes “stacked” on top of each other, and the stacked notes are indicated in the chord name of the chord type as a number — the number being the distance of the note from the root. (See the keyboard diagram below.) For example, the minor 6th chord includes the 6th note of the scale, the major 7th chord has the 7th note of the scale, etc.

### The Intervals of the Scale

To better understand the intervals and the numbers used to represent them in the chord name, study this diagram of the C major scale:

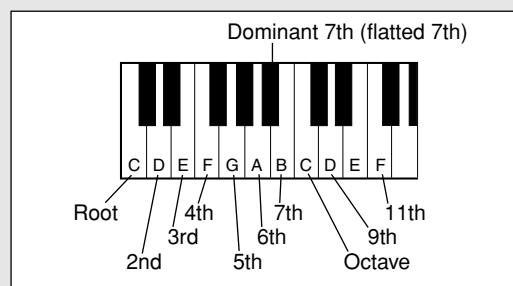

### Other Chords

**Csus4**

5th 4th

**C7**

Dominant 7th Major chord

**Cm7**

Dominant 7th Minor chord

**CM7**

7th Major chord

**Cm7b5**

Dominant 7th Diminished chord

**Cm6**

Minor chord 6th

**C(9)**

9th

**Cdim7**

Diminished 7th (double flatted 7th) Diminished chord

\* Bbb = A



# Using the Music Database

If you want to play in a certain genre of music but don't know which style and voice settings would be appropriate, simply select the desired genre from the Music Database. The PSR-292 automatically makes all appropriate panel settings to let you play in that music style!

## 1 Press the [M.D.B.] (MUSIC DATABASE) button.

The MUSIC DATABASE menu appears in the display.



### NOTE

- Press the [M.D.B.] (MUSIC DATABASE) button to automatically set the Style mode, turn AUTO ACCOMPANIMENT on, and turn SYNCHRONIZED START on. See page 37 for details.

## 2 Select a Music Database.

The categories of each Music Database and their numbers are shown on the panel. A complete list of the available styles in the Music Database is given on page 91.



### MUSIC DATABASE

Press the M.D.B. button and select.

**001 ~ 024** POP HITS

**025 ~ 049** SWING & JAZZ

**050 ~ 079** EASY LISTENING

**080 ~ 109** ROMANTIC BALLADS

**110 ~ 119** ROCK & FUSION

**120 ~ 130** RHYTHM & BLUES

**131 ~ 140** HIP HOP HOUSE

**141 ~ 153** LATIN NIGHTS

**154 ~ 163** COUNTRY & WESTERN


**164 ~ 176** DISCO & PARTY

**177 ~ 187** BALLROOM

**188 ~ 208** TRADITIONAL

### ■ Use the dial. You can also use the CATEGORY and/or SELECT buttons.

Turn the dial and select the Music Database. Select the appropriate category by using the CATEGORY [▲]/[▼] buttons. When you come close to the desired number, use the SELECT [▲]/[▼] buttons to step down and up through the Music Database numbers.

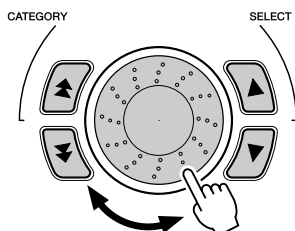

### ■ Use the numeric keypad.

Music Database numbers can be selected in the same way as with the voices (page 24). You can use the numeric keypad to directly enter the Music Database number, or use the [+]/[-] buttons to step up and down through the Music Database.



In this example, we will select #208 “Xmas Walz” and play the Song “Silent Night”.

♩ = 82 Silent Night


### 3 Play the chords with your left hand and the melody lines with your right hand along with the music.

As soon as you play a chord with your left hand, the style starts.  
For information on how to enter chords, see “Multi Fingering” on page 43.

**NOTE**  
• See pages 35 through 44 for details about the Style.

### 4 When you reach the point in the music indicated by the arrow above, press the [ENDING] button.

The style plays an ending phrase in ritardando.  
When the ending is finished, the style automatically stops.  
You can also stop the style by using the [STOP] button.

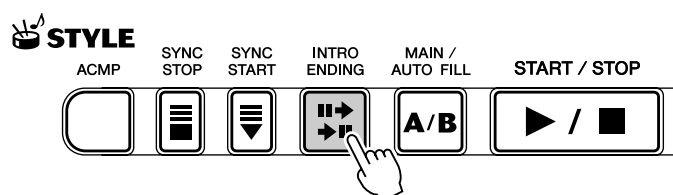

### Data stored by the Music Database

Each of the Music Database settings has been specially programmed to match the selected musical style and each features the best suited voice (or combination of voices), style and other settings. Pressing the [M.D.B.] (MUSIC DATABASE) button and selecting a number lets you instantly reconfigure all relevant settings, conveniently allowing you to start playing in the desired genre with all the appropriate sounds — without having to make each setting one by one.

#### ● M.D.B. Parameters

Style	Style Number	Split Voice	ON/Off
	Accompaniment Split Point		Voice Number
	MainA/MainB		Volume
	Style Volume		Octave
Main Voice	Voice Number		Pan
	Volume		Reverb Send Level
	Octave		Chorus Send Level
	Pan		DSP Send Level
	Reverb Send Level		Split Point
	Chorus Send Level		Effect
DSP Send Level	Chorus Type		
Dual Voice	ON/Off	DSP Type	
	Voice Number	Harmony	On/Off
	Volume		Harmony Type
	Octave		Harmony Volume
	Pan	Transpose	Transpose
	Reverb Send Level		Tempo
	Chorus Send Level		
	DSP Send Level		

\* Accompaniment is automatically set to on.  
Synchro Start is automatically set to on (when style is stopped).




# Selecting and Playing Songs

The PSR-292 features a total of 105 songs. These include 100 songs that showcase the rich and dynamic sounds of the instrument, and 99 of these songs can be used with the educational Lesson feature (page 61), a powerful tool that makes learning songs fun and easy. A special Demo song has also been included, and can be played automatically by pressing the [DEMO] button. Moreover, there are five special User songs to which you can record your own performance.

The User songs are “empty” and cannot be played until something has been recorded to them. (For instructions on recording your own songs, see page 56.)


You can also transfer song data from your computer to the PSR-292 for playback. For details, see page 71.

## ● Song Playback Display

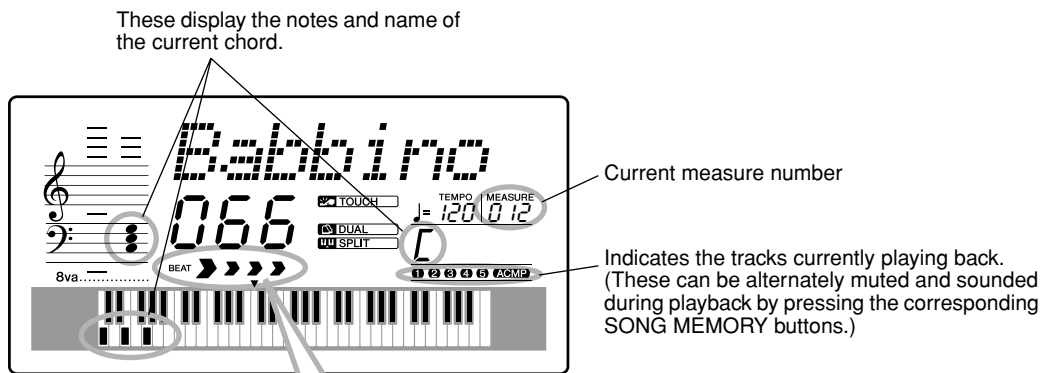

### About the Beat Display

 The arrow marks in the beat display flash in time with the rhythm of the song or style. The first arrow indicates the first beat of the measure, and the others flash in sequence.



## Selecting a Song

**1** Press the [SONG] button.



Song name and number



## Selecting and Playing Songs


### 2 Select the desired song number.

The categories of each song and their numbers are shown on the panel. A complete list of the available songs is given on page 15.

SONG			
001	DEMO	101~	FLASH
002~006	FAVORITES		MEMORY
007~016	ORCHESTRA	201	USER 1
017~036	PIANIST	202	USER 2
037~066	PRACTICE	203	USER 3
067~080	DUET	204	USER 4
081~100	CHORD LESSON	205	USER 5


#### ■ Use the dial. You can also use the CATEGORY and/or SELECT buttons.

Turn the dial and select the desired song. Select the appropriate category by using the CATEGORY [▲]/[▼] buttons. When you come close to the desired number, use the SELECT [▲]/[▼] buttons to step down and up through the song numbers.

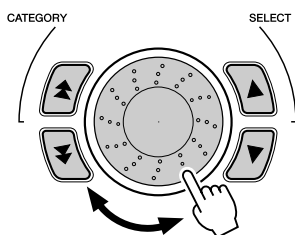

#### ■ Use the numeric keypad.

Song numbers can be selected in the same way as with the voices (page 24). You can use the numeric keypad to directly enter the song number, or use the [+]/[-] buttons to step up and down through the song.

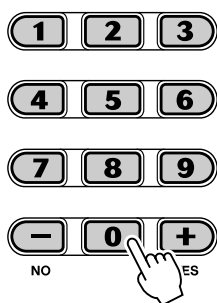


#### Listening to the Flash Memory Song

The PSR-292 can play a song loaded into its internal flash memory. To do this, you'll need to connect the PSR-292 to a personal computer, and use the "Song Filer" software to transmit the song from the computer. For more information on Flash songs and Song Filer, refer to page 71.


Select the song number 101-199 using the dial or numeric keypad in the same way as preset songs.

## Playing the Songs

The Panel buttons below function as Song controls.

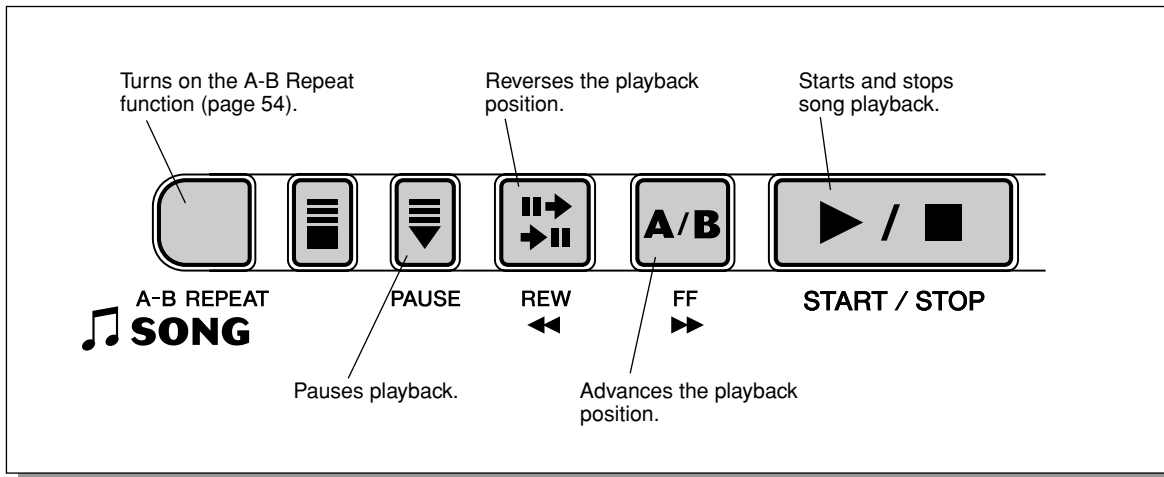


### About the Song Tracks

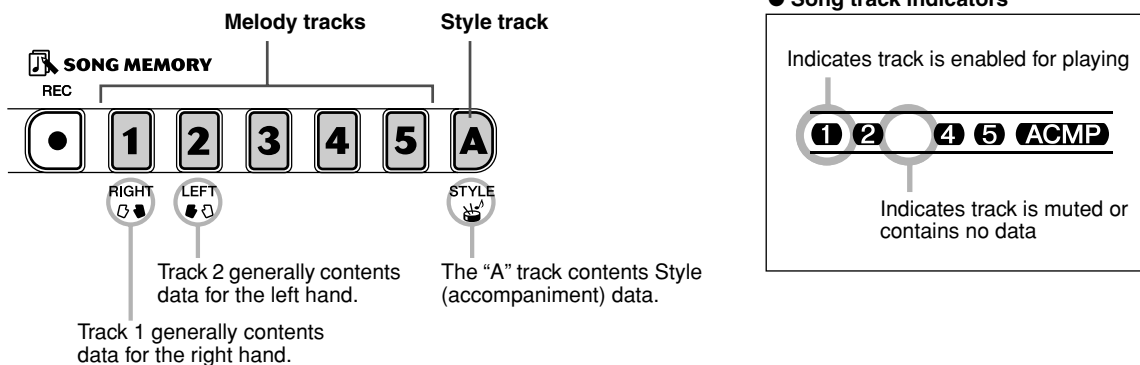

## 1 Start the selected song.

Press the [START/STOP] button. As the song plays back, the measure number and chords are shown in the display.

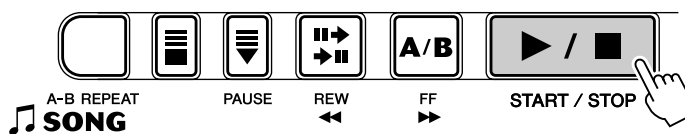

### NOTE

- You can play along with the song using the currently selected voice, or even select a different voice for playing along. Simply call up the Voice mode while the song is playing back and select the desired voice. (See page 23.)

## 2 Stop the song.

Press the [START/STOP] button. If playback was started by pressing the [START/STOP] button, the selected song stops automatically.

 

# Selecting and Playing Songs

## A-B Repeat

The convenient A-B Repeat function is an ideal aid for practicing and learning. It allows you to specify a phrase of a song (between point A and point B) and repeat it — while you play or practice along with it.

### 1 While playing a song, set point A (the start point).

During playback, press the [A-B REPEAT] button once, at the beginning point to be repeated.


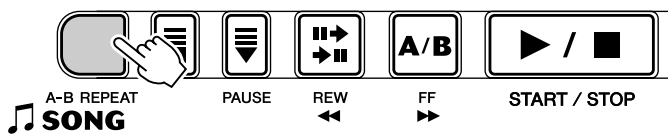


#### NOTE

- The A and B points can only be specified at the beginning of a measure (beat 1), and not at any point in the middle of a measure.
- To set the A point to the beginning of a song, press the [A-B REPEAT] button before starting playback.

### 2 Set point B (the end point).

 As the song continues playing, press the [A-B REPEAT] button once again, at the ending point to be repeated. The selected phrase repeats indefinitely until stopped.

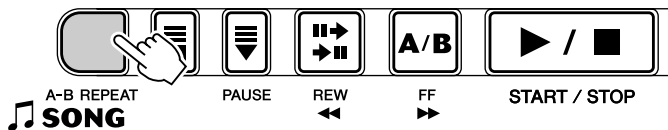


#### HINT

- If you're repeat practicing a particularly difficult section, try slowing down the Tempo to an appropriate speed to make it easier to play and master the part. You may also want to slow down the Tempo while setting the A and B points; this makes it easier to accurately set the points.
- You can also set the A-B Repeat function when the song is stopped. Simply use the [REW ◀] and [FF ▶] buttons to select the desired measures, pressing the [A-B REPEAT] button for each point, then start playback.

### 3 Pause or stop playback as needed.

Use the [PAUSE] button or [START/STOP] button. Stopping playback does not cancel the set A/B points or the A-B Repeat function.

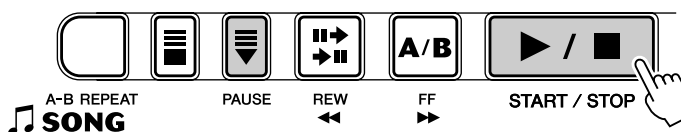

### 4 Turn off the A-B Repeat function.

Press the [A-B REPEAT] button.

## Melody Voice Change

The PSR-292 lets you play a melody on the keyboard along with each of the songs, either with the original melody voice or one of your own selection. The convenient Melody Voice Change feature takes this one step further — it lets you replace the original voice used for the melody of the song with the panel voice of your own selection. For example, if the current voice selected on the panel is piano but the song’s melody is being played by a flute voice, using Melody Voice Change will change the flute melody voice to piano.

### 1 Select the desired song.


Press the [SONG] button, then use the dial, numeric keypad or [+]/[-] buttons to select the desired song. (See page 51.)

### 2 Select the desired voice.

Press the [VOICE] button, then use the dial, numeric keypad or [+]/[-] buttons to select the desired voice. (See page 23.)

### 3 Press and hold down the [VOICE] button for at least one second.

“MELODY VOICE CHANGE” appears in the display, indicating that the selected panel voice has replaced the song’s original melody voice.

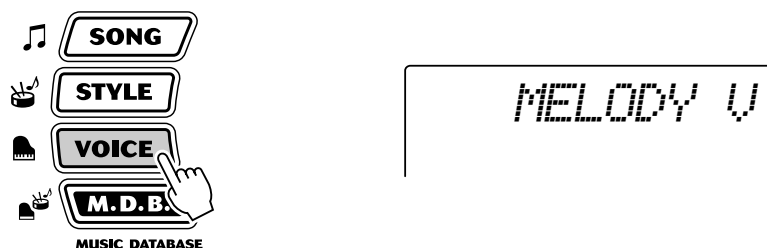

## Adjusting the Song Volume

The playback volume of the song can be adjusted in the *Function mode* (page 76). This volume control affects only the Song volume. The volume range is 000 - 127.


#### NOTE

- Song Volume cannot be changed unless the Song mode is active. (This function becomes Style Volume when the Style mode is active.)



# Enregistrement d'un morceau

Le PSR-292 est doté de fonctions d'enregistrement performantes et faciles à utiliser qui vous permettent d'enregistrer vos propres performances au clavier et ce, en utilisant jusqu'à six pistes différentes (dont une piste pour l'accompagnement) afin de créer des compositions entièrement orchestrées. Vous pouvez enregistrer et sauvegarder jusqu'à cinq morceaux utilisateur.

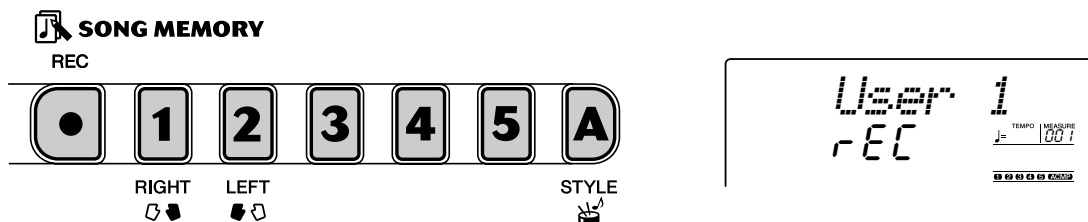

L'enregistrement de morceaux sur le PSR-292 est semblable à un enregistrement réalisé sur magnétophone. Tout ce que vous interprétez au clavier est enregistré en temps réel. Par ailleurs, au fur et à mesure que vous enregistrez les passages successifs sur les différentes pistes, vous pouvez réentendre les passages déjà enregistrés pendant l'enregistrement des nouveaux.

#### NOTE

##### Capacité de la mémoire de morceau

- Nombre maximum de notes : environ 10 000 (quand seules des pistes de « mélodie » sont enregistrées)
- Nombre maximum d'accords : environ 5 500 (lorsque seule la piste d'accords est enregistrée)

## Enregistrement d'un morceau utilisateur

### Données pouvant être enregistrées sur les pistes normales (mélodie) :

- Note on/off
- Velocity
- Voice Number
- Reverb Type\*
- Chorus Type\*
- DSP Type\*
- Sustain
- Tempo\*, Time Signature\* (s'il n'y a pas de données de ce type sur la piste Chord)

### Données pouvant être enregistrées sur la piste Chord :

- Style Number\*
- Changements et synchronisation d'accords
- Parties de changement (Intro, Main A/B, etc.)
- Style Volume\*
- Tempo, Time Signature\*

\* Ces réglages ne peuvent être enregistrés qu'une seule fois en début de morceau ; les autres réglages peuvent être modifiés en cours d'exécution de morceau.

## 1 Effectuez tous les réglages nécessaires du PSR-292.

Avant de pouvoir réellement commencer à enregistrer, vous devez effectuer différents réglages pour le morceau, tels que sélectionner un style et une voix et régler le tempo. (Reportez-vous aux pages 35, 41 et 23).

Si nécessaire, effectuez également d'autres réglages. Reportez-vous à la liste ci-dessus pour connaître les réglages qui peuvent être enregistrés dans un morceau.

#### NOTE

- Lorsque vous utilisez une voix partagée (Split Voice) pour l'enregistrement, la voix affectée gauche du point de partage ne peut pas être enregistrée.


### Utilisation du métronome

Vous pouvez, si vous le désirez, utiliser la fonction Métronome à la place d'un style. Cela vous permet de garder votre performance dans le rythme, même si vous enregistrez sans style. Pour ce faire, appuyez sur la touche [METRONOME] avant de procéder à l'enregistrement (étape 4 ci-après). Dès que le morceau est entièrement enregistré, il ne vous reste plus qu'à lancer sa reproduction en ayant au préalable désactivé la fonction Métronome. (Voir page 20.)




## 2 Select a User song number for recording.

Use the dial or numeric keypad to select the desired song: 201 - 205. If no song is manually selected, the PSR-292 automatically selects the first available empty song number.

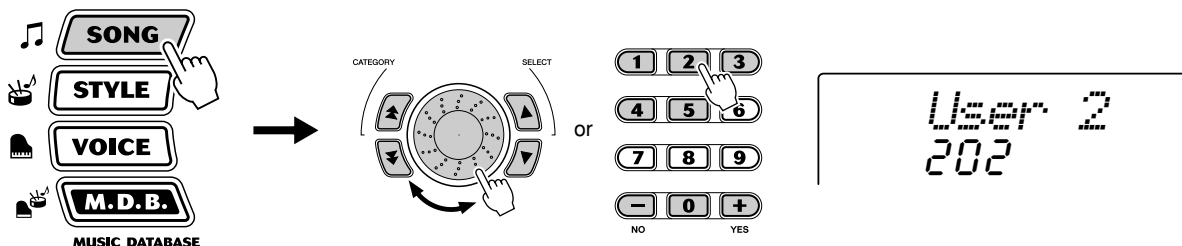

## 3 Select a track number for recording.

While holding down the [REC] button, press the appropriate SONG MEMORY button.

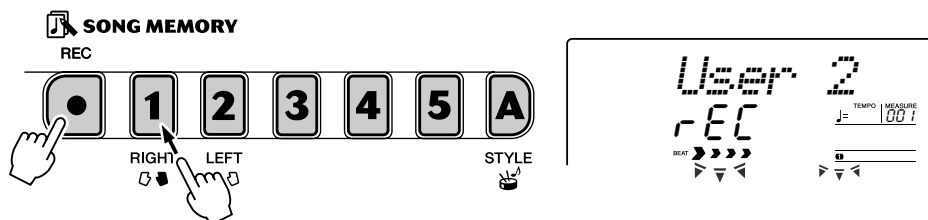


### CAUTION

- Keep in mind that all recording operations “replace” the data. In other words, if you record to a track that already has recorded data, all previous data in the track will be erased and replaced by the newly recorded data.

### Recording to the Chord Track

A special Chord track is provided for recording accompaniment data. This is automatically recorded to the Chord track (track A). Selecting the Chord track automatically turns on the accompaniment.

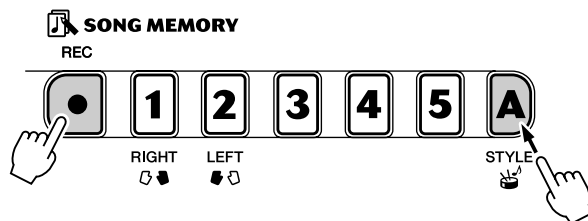

### NOTE

- If accompaniment has already been turned on before entering the Record mode, the Chord track is automatically selected.


### Recording to a Melody Track (1 - 5)

Five independent Melody tracks are provided for recording your keyboard performance. Normally, you'll want to record these after you've recorded the Chord track. You can also record the Chord track and one of the Melody tracks simultaneously.

## Muting Tracks During Playback


While recording is enabled, you can selectively mute different tracks. This is useful for when you want to clearly hear certain tracks, and not others, during recording. Muting can also be done “on the fly” during playback. To use muting, press the corresponding SONG MEMORY button, repeatedly if necessary, until the desired track number in the display is off.

Each press of a SONG MEMORY button (when playback is stopped) cycles through the following settings:

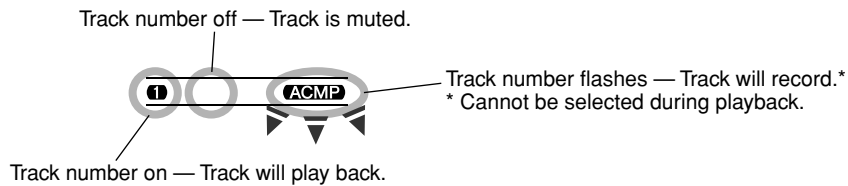

## 4 Start recording.

When the beat marks and track number start flashing, you can start recording simply by playing the keyboard (or by pressing the [START/STOP] button).

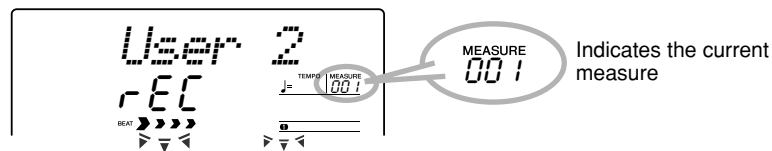

If you want to rehearse your part before recording, press the [SYNC START] button to turn Sync Start off. After rehearsing, press [SYNC START] again to return to the above condition.

### ■ When recording the Chord track

With Sync Start on, play the first chord of the song in the auto accompaniment area of the keyboard. The accompaniment starts automatically and you can continue recording, playing other chords in time with the accompaniment.

## 5 Stop recording.

After you’ve finished playing the part, press the [START/STOP] or [REC] button.

## 6 Record to other tracks as desired.

To do this, simply repeat steps #3 - #5 above. Make sure that when you press the SONG MEMORY button corresponding to the desired track, the track number in the display flashes.

## 7 Listen to your new recording.


To play back the song from the beginning, simply press the [START/STOP] button again. Playback stops when the [START/STOP] button is pressed again.

## Song Clear

The Song Clear operation completely erases all recorded data on all tracks of a selected User song. Use this operation only when you're sure you want to erase a song and record a new one. To erase an individual track of a song while leaving the other tracks intact, use the Track Clear operation (page 60).

### 1 Select the desired song.

Press the [SONG] button, then use the numeric keypad or [+]/[-] buttons to select the desired song (201 - 205).

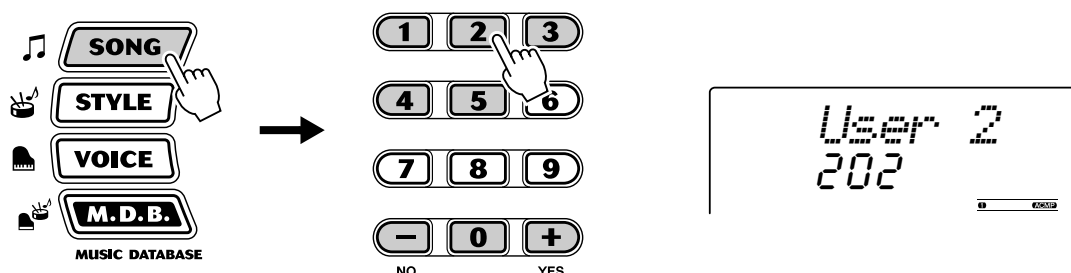

### 2 While holding down the [A] button, press SONG MEMORY button [1].


All track indications in the display flash, indicating that all tracks are to be erased.



### 3 Press the [+ / YES] button.

### 4 At the "Sure?" prompt, press the [+ / YES] button, or press the [- / NO] button to abort.

Pressing the [+ / YES] button executes the Song Clear operation. Pressing the [- / NO] button aborts.

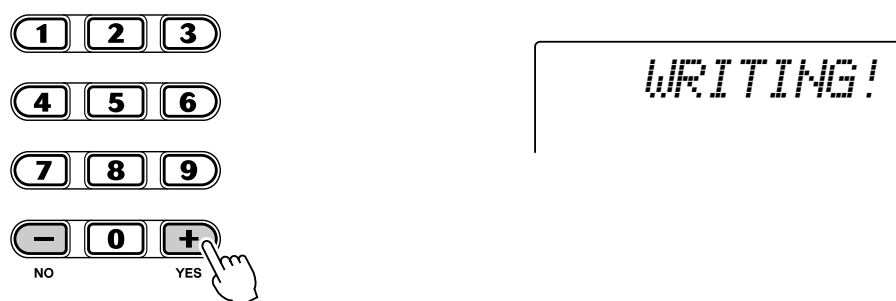


## Track Clear

The Track Clear operation completely erases all recorded data on a selected track of a selected User song, leaving the other tracks intact. Use this operation only when you're sure you want to erase a track and record a new one. To erase the data of an entire song, use the Song Clear operation (page 59).


### 1 Select the desired song.

Press the [SONG] button, then use the numeric keypad or [+]/[-] buttons to select the desired song (201 - 205).

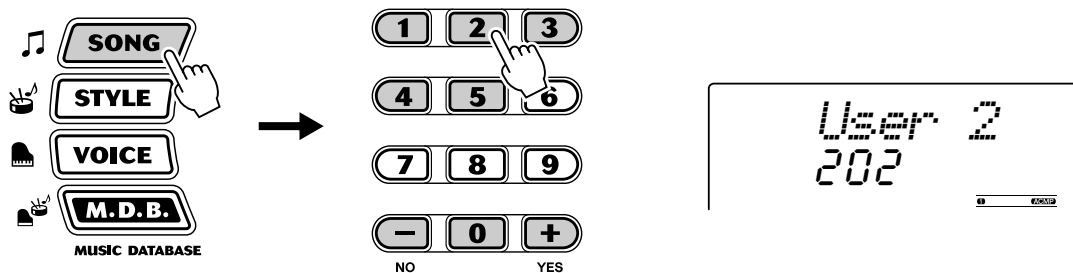

### 2 Press and hold down the button corresponding to the track to be erased.


Press and hold down the appropriate SONG MEMORY button ([1] - [5], [A]) for at least one second.

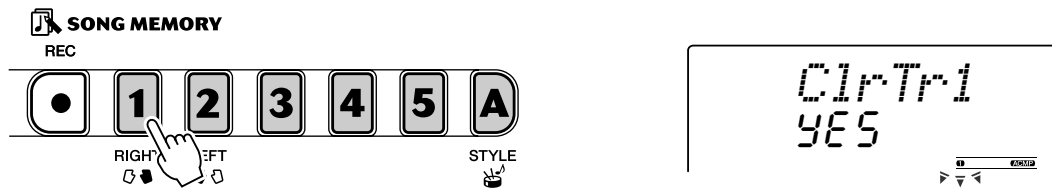

### 3 Press the [+ / YES] button.

### 4 At the "Sure?" prompt, press the [+ / YES] button, or press the [- / NO] button to abort.

Pressing the [+ / YES] button executes the Track Clear operation. Pressing the [- / NO] button aborts.

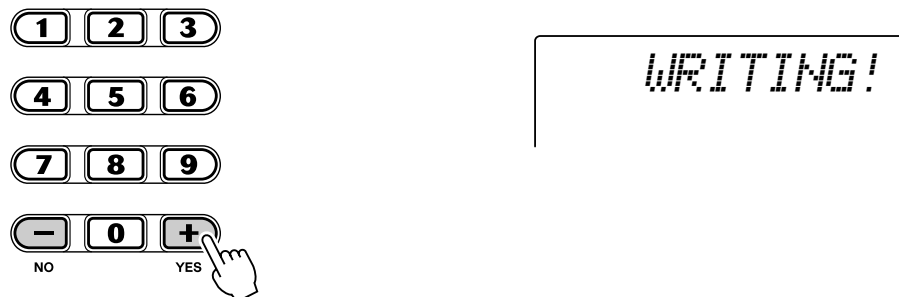



# Song Lesson

The Lesson feature provides an exceptionally fun and easy-to-use way to learn how to read music and play the keyboard. Lesson lets you practice the left- and right-hand parts of each song independently, step by step, until you've mastered them and are ready to practice with both hands together. These practices are divided into four Lesson steps, as described below. Lessons 1 - 3 apply to each hand; press the appropriate button, [L] (left) or [R] (right) to select the desired part for practice.

Naturally, you can also use Song data you've loaded from computer with the Lesson features.

## ■ Lesson 1 — Timing

This lesson step lets you practice just the timing of the notes — any note can be used, as long as you play in rhythm.

## ■ Lesson 2 — Waiting

In this lesson step, the PSR-292 waits for you to play the correct notes before continuing playback of the song.

## ■ Lesson 3 — Minus One

This lesson step plays back the song with one part muted, letting you play and master the missing part yourself — in rhythm and at the proper tempo.


## ■ Lesson 4 — Both Hands

Lesson 4 is a “Minus One” practice essentially the same as Lesson 3, except that both the left- and right-hand parts are muted — letting you play and master both hands at the same time.

## Using the Lesson Feature

### 1 Select one of the Lesson songs.


Press the [SONG] button, then use the dial or numeric keypad or [+]/[-] buttons to select the desired song.

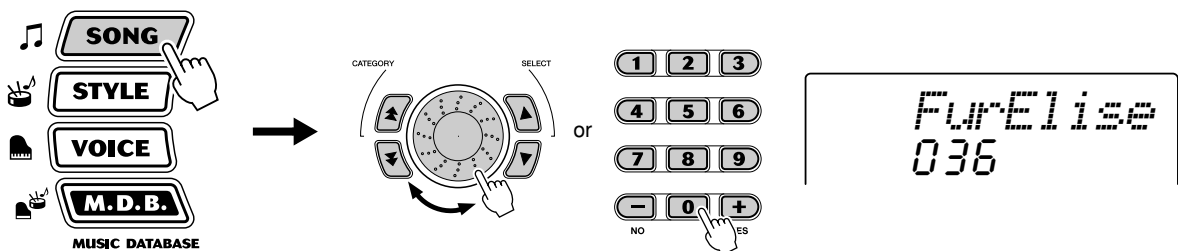


The songs are divided into several different categories or music genres.

## 2 Select the part you wish to work on (left or right) and the Lesson step.

If you want to work on the right-hand part, press the [R] button; to work on the left, press the [L] button. Pressing either button repeatedly cycles through the available Lesson steps in order: Lesson 1 → Lesson 2 → Lesson 3 → Off → Lesson 1, etc. The selected Lesson step is indicated in the display.

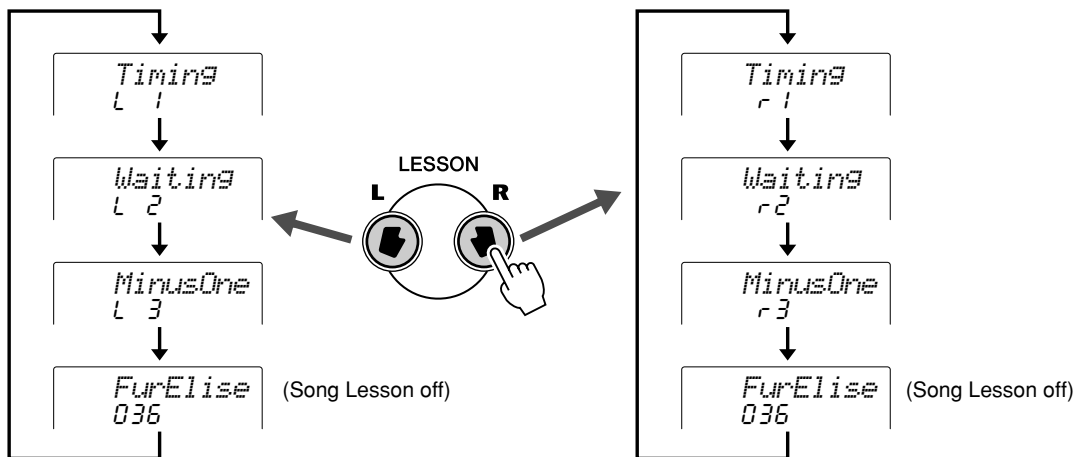


To select Lesson 4, press both [L] and [R] buttons simultaneously.

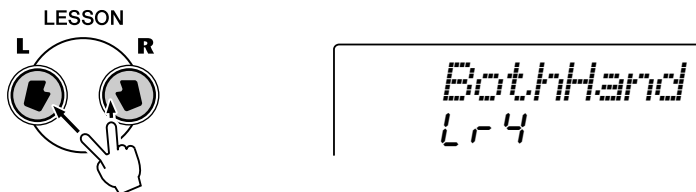


## 3 Start the Lesson.

The Lesson and song playback start automatically (following a lead-in count) as soon as the Lesson step is selected. When the Lesson is finished, your performance “grade” is shown in the display (if the Grade function is turned on; page 65). After a short pause, the Lesson begins again automatically.

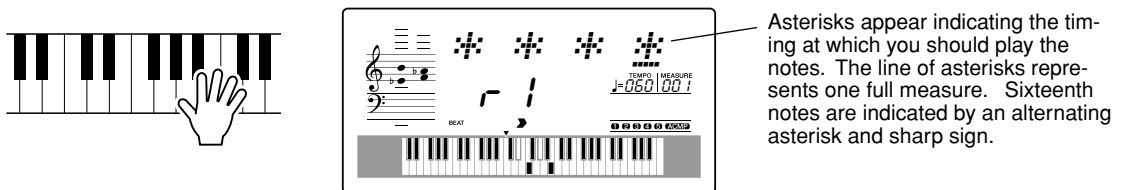

## 4 Press the [START/STOP] button to stop the Lesson.

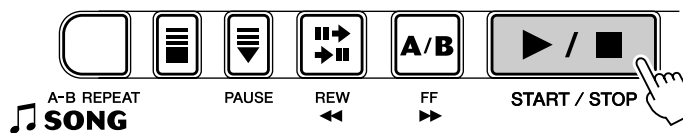

The PSR-292 exits from the Lesson feature automatically when the [START/STOP] button is pressed.

## Select the Lesson Track

This function allows you to select the track number of a loaded song from computer (only SMF format 0).

*The track number of the song can be specified in the Function mode (page 76).*

## Lesson 1 — Timing

This lesson step lets you practice just the timing of the notes — any note can be used, as long as you play in rhythm. Pick a note to play. For the left hand, use a note in the auto accompaniment area or play the appropriate left-hand note; for the right, play a note above F#2. Simply concentrate on playing each note in time with the rhythmic accompaniment.

 

### NOTE

- The melody note does not sound unless your playing is in time with the rhythm.

**1** Select one of the Lesson songs.

**2** Select Lesson 1.

Press the [L] or [R] button (repeatedly, if necessary) until Lesson 1 is indicated.

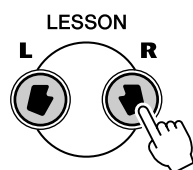


**3** Play the appropriate melody or chord with the song.

After the lead-in, the song starts automatically, and the appropriate notes appear in the display. In Lesson 1, simply play one note repeatedly in time with the music.

Regarding chords and the use of the left hand, the PSR-292 actually has two different types of songs: 1) songs with normal left-hand chords, and 2) songs in which the left hand plays arpeggios or melodic figures in combination with the right.

In the case of the first type, play the chords with your left hand in the auto accompaniment area of the keyboard.

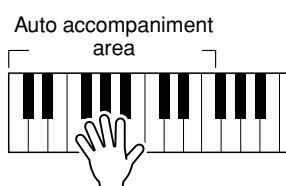



## Lesson 2 — Waiting

In this lesson step, the PSR-292 waits for you to play the correct notes before continuing playback of the song. This lets you practice reading the music at your own pace. The notes to be played are shown in the display, one after another, as you play them correctly.

**1** Select one of the Lesson songs.

**2** Select Lesson 2.

 Press the [L] or [R] button (repeatedly, if necessary) until Lesson 2 is indicated.

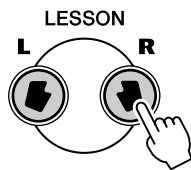

**3** Play the appropriate melody or chord with the song.

After the lead-in, the song starts automatically, and the appropriate notes appear in the display. In Lesson 2, play the correct notes at your own pace, until you can master playing them in rhythm.



## Lesson 3 — Minus One

 This lesson step lets you practice one part of the song in rhythm at the proper tempo. The PSR-292 plays back the song accompaniment with one part muted (either the left part or the right)— letting you play and master the missing part yourself. The notes you are to play are shown continuously in the display as the song plays back.

**1** Select one of the Lesson songs.

**2** Select Lesson 3.

Press the [L] or [R] button (repeatedly, if necessary) until Lesson 3 is indicated.

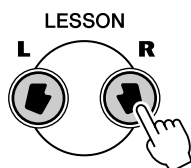



### 3 Play the appropriate part with the song.

After the lead-in, the song starts automatically, and the appropriate notes appear in the display. In Lesson 3, listen carefully to the un-muted part, and play the muted part yourself.

 

## Lesson 4 — Both Hands

Lesson 4 is a “Minus One” practice essentially the same as Lesson 3, except that both the left- and right-hand parts are muted — letting you play and master both hands at the same time. Go on to this lesson step after you’ve mastered each hand’s part in the previous three lesson steps. Practice both hands in time with the rhythm along with the notation in the display.

### 1 Select one of the Lesson songs.

### 2 Select Lesson 4.

Press the [L] and [R] buttons simultaneously, so that Lesson 4 is indicated.

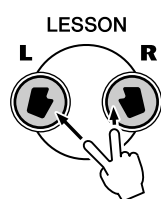

### 3 Play both the left- and right-hand parts with the song.

After the lead-in, the song starts automatically, and the appropriate notes appear in the display. In Lesson 4, both parts (left and right) are muted, letting you play the entire song by yourself.

## Grade

The Lesson feature has a built-in evaluation function that monitors your practicing of the Lesson songs, and just like a real teacher, it tells you how well you did each exercise. Four grades are assigned, depending on your performance: “OK,” “Good,” “Very Good,” and “Excellent.”



- Grade is automatically set to on as the default setting.

*The evaluation function can be set to on/off in the Function mode (page 76).*




# MIDI Functions

The PSR-292 is MIDI-compatible, featuring MIDI IN and MIDI OUT terminals and providing a variety of MIDI-related controls. By using the MIDI functions you can expand your musical possibilities. This section explains what MIDI is, and what it can do, as well as how you can use MIDI on your PSR-292.

## What Is MIDI?


No doubt you have heard the terms “acoustic instrument” and “digital instrument.” In the world today, these are the two main categories of instruments. Let’s consider an acoustic piano and a classical guitar as representative acoustic instruments. They are easy to understand. With the piano, you strike a key, and a hammer inside hits some strings and plays a note. With the guitar, you directly pluck a string and the note sounds. But how does a digital instrument go about playing a note?

Acoustic guitar note production

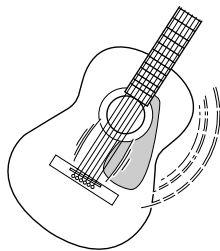

Pluck a string and the body resonates the sound.

Digital instrument note production

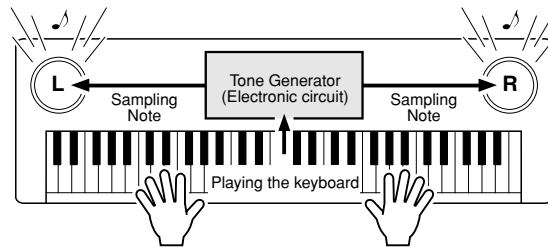

Based on playing information from the keyboard, a sampling note stored in the tone generator is played through the speakers.

As shown in the illustration above, in an electronic instrument the sampling note (previously recorded note) stored in the tone generator section (electronic circuit) is played based on information received from the keyboard. So then what is the information from the keyboard that becomes the basis for note production?

For example, let’s say you play a “C” quarter note using the grand piano sound on the PSR-292 keyboard. Unlike an acoustic instrument that puts out a resonated note, the electronic instrument puts out information from the keyboard such as “with what voice,” “with which key,” “about how strong,” “when was it pressed,” and “when was it released.” Then each piece of information is changed into a number value and sent to the tone generator. Using these numbers as a basis, the tone generator plays the stored sampling note.

### ● Example of Keyboard Information

Voice number (with what voice)	01 (grand piano)
Note number (with which key)	60 (C3)
Note on (when was it pressed) and note off (when was it released)	Timing expressed numerically (quarter note)
Velocity (about how strong)	20 (strong)

### GM System Level 1

“GM System Level 1” is an addition to the MIDI standard which ensures that any GM-compatible music data can be accurately played by any GM-compatible tone generator, regardless of manufacturer. The GM mark is affixed to all software and hardware products that support GM System Level 1. The PSR-292 supports GM System Level 1.



MIDI is an acronym that stands for Musical Instrument Digital Interface, which allows electronic musical instruments to communicate with each other, by sending and receiving compatible Note, Control Change, Program Change and various other types of MIDI data, or messages.

The PSR-292 can control a MIDI device by transmitting note related data and various types of controller data. The PSR-292 can be controlled by the incoming MIDI messages which automatically determine tone generator mode, select MIDI channels, voices and effects, change parameter values and of course play the voices specified for the various parts.

MIDI messages can be divided into two groups: Channel messages and System messages. Below is an explanation of the various types of MIDI messages which the PSR-292 can receive/transmit.

## ● Channel Messages

The PSR-292 is an electronic instrument that can handle 16 channels. This is usually expressed as “it can play 16 instruments at the same time.” Channel messages transmit information such as Note ON/OFF, Program Change, for each of the 16 channels.

Message Name	PSR-292 Operation/Panel Setting
Note ON/OFF	Messages which are generated when the keyboard is played. Each message includes a specific note number which corresponds to the key which is pressed, plus a velocity value based on how hard the key is struck.
Program Change	Voice number (along with corresponding bank select MSB/LSB settings, if necessary).
Control Change	Messages that are used to change some aspect of the sound (modulation, volume, pan, etc.).

## ● System Messages


This is data that is used in common by the entire MIDI system. System messages include messages like Exclusive Messages that transmit data unique to each instrument manufacturer and Realtime Messages that control the MIDI device.

Message Name	PSR-292 Operation/Panel Setting
Exclusive Message	Reverb/chorus/DSP settings, etc.
Realtime Messages	Start/stop operation

The messages transmitted/received by the PSR-292 are shown in the MIDI Implementation Chart on page 94.

### MIDI Terminals

In order to exchange MIDI data between multiple devices, each device must be connected by a cable. The MIDI terminals of the PSR-292 are located on the rear panel.

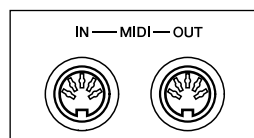

MIDI IN	Receives MIDI data from another MIDI device.
MIDI OUT	Transmits the PSR-292's keyboard information as MIDI data to another MIDI device.


#### NOTE

- Special MIDI cables (sold separately) must be used for connecting to MIDI devices. They can be bought at music stores, etc.
- Never use MIDI cables longer than about 15 meters. Cables longer than this can pick up noise which can cause data errors.


### Connexion à un ordinateur personnel

Vous pouvez avoir accès à une grande variété de logiciels de musique en raccordant les bornes MIDI du PSR-292 à un ordinateur personnel.


- Lorsque vous utilisez une interface MIDI sur votre ordinateur, raccordez les bornes MIDI de l'ordinateur personnel et du PSR-292.

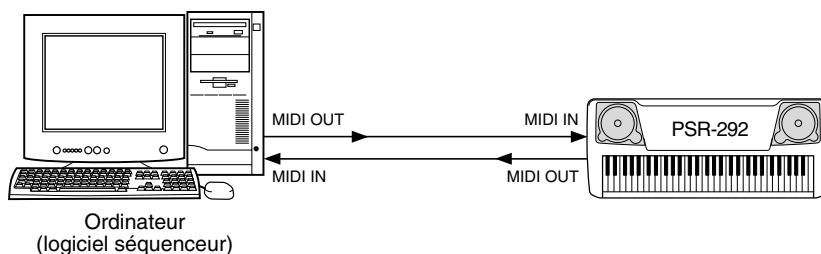

- Lorsque vous utilisez une interface MIDI avec un ordinateur Macintosh, connectez la borne RS-422 de l'ordinateur (borne du modem ou de l'imprimante) à l'interface MIDI, comme indiqué dans le schéma ci-dessous.

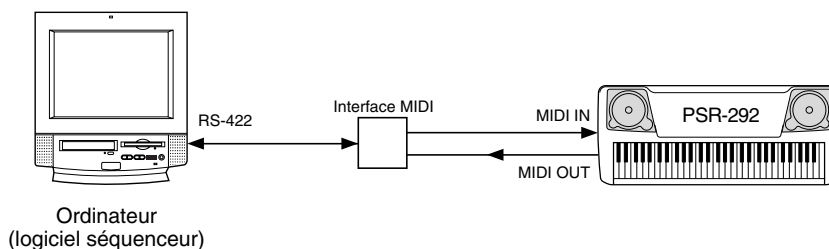

- Pour connecter un ordinateur via une interface USB, utilisez l'interface USB/MIDI UX16 de Yamaha. Connectez l'interface UX16 et l'ordinateur à l'aide d'un câble USB standard, puis effectuez les connexions MIDI appropriées entre le PSR-292 et l'UX16.

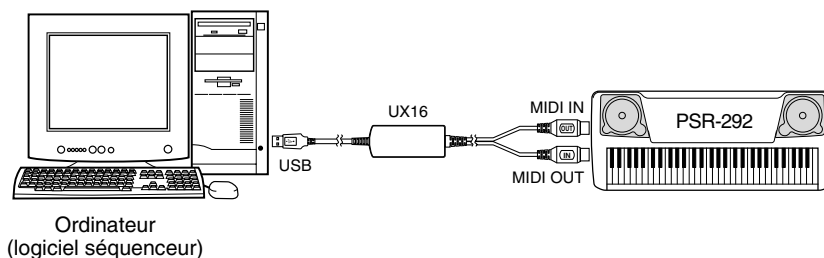

#### NOTE

- Lorsque vous utilisez un ordinateur Macintosh, réglez l'horloge de l'interface MIDI dans le logiciel d'application de manière à ce qu'elle corresponde au réglage de l'interface MIDI utilisée. Pour plus de détails, reportez-vous au mode d'emploi du logiciel que vous utilisez.

#### NOTE

##### Affichage de la notation avec le canal MIDI 1

- Le PSR-292 dispose d'une fonction spéciale qui vous permet d'afficher les notes des données MIDI (canal 1 uniquement) à l'écran.

## Local Control

This function lets you enable or disable keyboard control over the PSR-292's voices in the *Function mode* (page 76). This would come in handy, for example, when recording notes to MIDI sequencer. If you are using the sequencer to play back the voices of the PSR-292, you would want to set this to “off” — in order to avoid getting “double” notes, both from the keyboard and from the sequencer. Normally, when playing the PSR-292 by itself, this should be set to “on.”

### CAUTION

- No sound is output from the PSR-292 when Local ON/OFF is set to OFF.

## Using Initial Setup Send with a Sequencer

The most common use for the Initial Setup Send function is in recording a song on a sequencer that is intended for playback with the PSR-292. Essentially, this takes a “snapshot” of the PSR-292 settings and sends that data to the sequencer. By recording this “snapshot” at the start of the song (before any actual performance data), you can instantly restore the necessary settings on the PSR-292 in the *Function mode* (page 76). Provided there is a pause in the song, you could also do this in the middle of a song — for example, completely changing the PSR-292 settings for the next section of the song.

### NOTE

- When the Initial Setup Send operation is completed, the PSR-292 automatically returns to the previous panel condition.

## External Clock

This determines whether the style and song playback functions are controlled by the PortaTone's internal clock (off) or by MIDI clock data from an external sequencer or computer (on).

This should be set to on when you want to have style or song playback follow the external device (such as a rhythm machine or a sequencer). The default setting is off.

*These settings can be made in the Function mode (page 76).*

### CAUTION

- If External Clock is set to ON, style or song playback will not start unless external clock are received.

## Bulk Data Send

This lets you save important PortaTone data and settings to another device (such as a sequencer, computer, or MIDI data filer).

*These settings can be made in the Function mode (page 76).*

### ● Bulk Data Receive

Send the Bulk Data from computer or sequencer to the PSR-292.

### CAUTION

- Keep in mind that all recorded Song data and One Touch Setting data operations replace the data.

### Keyboard Out

This determines whether Keyboard performance data of the Portatone is transmitted via MIDI OUT or not.

*These settings can be made in the Function mode (page 76).*

### Style Out

This determines whether style data is transmitted via MIDI OUT or not.

*These settings can be made in the Function mode (page 76).*

### Song Out

This determines whether Song data is transmitted via MIDI OUT or not.


*These settings can be made in the Function mode (page 76).*

NOTE

- For the Song #001, data is not transmitted.

#### MIDI LSB Receive Cancel

Determines whether the LSB data of Bank Select is received or not. Press and hold the lowest key and turn on the power to change the setting (LSB is ignored).

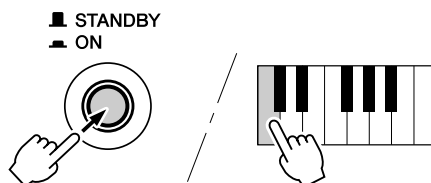

To restore MIDI LSB Receive Cancel to normal (LSB is recognized), turn on the power again normally.




## ■ Song Filer .....

Après avoir installé Song Filer et connecté le PSR-292 à l'ordinateur, vous pouvez utiliser les deux fonctions décrites ci-dessous.


### ● Transfert de fichiers

Vous pouvez transférer des fichiers de morceaux depuis l'ordinateur vers la mémoire flash du PSR-292.

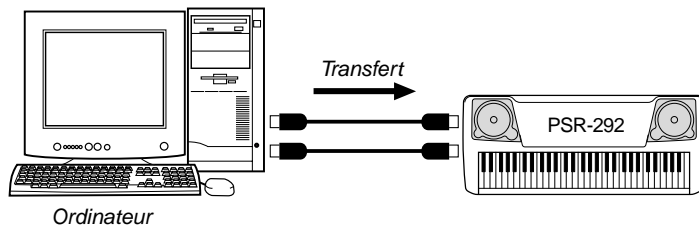

### ● Gestion de fichiers dans la mémoire flash

Vous pouvez supprimer et renommer des fichiers dans la mémoire flash du PSR-292 depuis votre ordinateur.

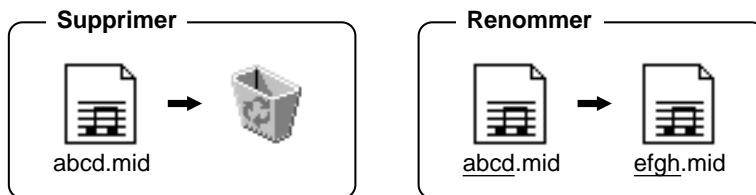

#### NOTE

- Reportez-vous à la page 68 pour plus d'informations sur la connexion du PSR-292 à un ordinateur.
- Vous ne pouvez pas utiliser la fonction « Receive Files » (Réception de fichiers) du Song Filer avec le PSR-292.
- Pour plus d'informations sur l'utilisation du Song Filer, reportez-vous au manuel PDF fourni avec l'application Song Filer.

#### ⚠ ATTENTION

- N'essayez jamais de couper le courant lorsqu'une transmission de données de morceaux est en cours. Cela entraînerait l'interruption de la sauvegarde, mais rendrait également la mémoire flash interne instable. En allumant et en coupant le courant, vous risqueriez aussi de supprimer toutes les données de la mémoire flash interne.
- Les données enregistrées dans l'instrument peuvent être perdues à la suite d'un dysfonctionnement ou d'une opération incorrecte. Sauvegardez une copie de vos données importantes sur votre disque dur ou sur une disquette.

### Sélection d'une piste guide pour la main droite/gauche

Vous pouvez sélectionner une piste dans le *mode Function* (page 76) qui guide votre main droite et votre main gauche durant la leçon (page 63).

Cette fonction n'est disponible que lorsque vous sélectionnez un morceau de la mémoire flash (SMF de format 0).



## PC Mode


The PC Mode lets you instantly reconfigure the MIDI control settings for use with a computer or MIDI device.

### ● Default settings

	PC mode is on	PC mode is off
LOCAL ON/OFF	ON	
EXTERNAL CLOCK	OFF	
KEYBOARD OUT	ON	
STYLE OUT	OFF	ON
SONG OUT	OFF	

### ■ To turn the PC mode on or off:

Press the [PC] button and then press the appropriate [+]/[-] button. This switches between the PC Mode on/off settings.

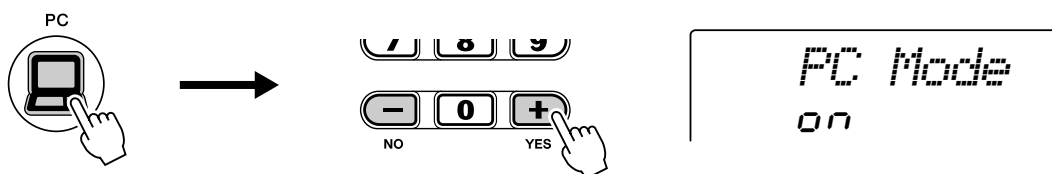

### ■ To store the PC mode parameters:

#### 1 Change the PC mode parameters.

Change the desired MIDI parameters in the Function mode.  
The following PC Mode parameters can be stored to memory.


LOCAL ON/OFF  
EXTERNAL  
KEYBOARD  
STYLE OUT  
SONG OUT

#### ⚠ CAUTION

- No sound is output from the PSR-292 when Local ON/OFF is set to OFF.
- If External Clock is set to ON, style or song playback will not start unless external clock are received.

#### 2 Store the parameters to the PC memory.

Press and hold the [PC] button until “WRITING!” appears in the LCD.

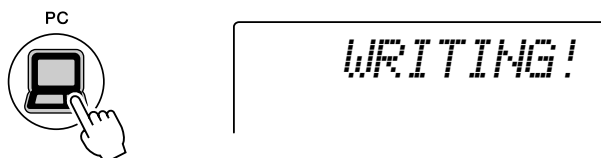




# Function

The PSR-292 has a variety of settings in the Function parameters. These give you detailed control over many of the PSR-292's features.

## Using the Function parameters

### 1 Press the Function button.

 FUNCTION





NOTE

- To save the Function parameters and the Touch on/off status to internal memory (flash memory), press and hold the [FUNCTION] button. (See page 78.)

### 2 Select a Function name.

 Use the SELECT [▲]/[▼] buttons to select a Function name.

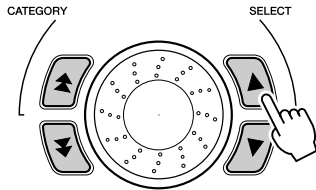


NOTE


- Use the CATEGORY [▲]/[▼] buttons when selecting the category steps.

### 3 Input the appropriate value or use the [+]/[-] buttons to set the selected Function.

You can also use the dial.

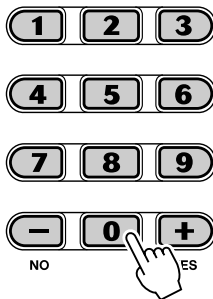

OR

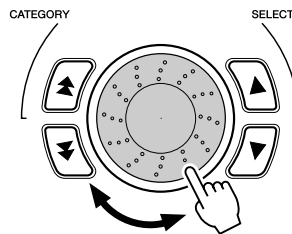

## ● Function parameters

CATEGORY	SELECT	Display	Range/ Settings	Description	
Overall	Transpose	<i>TransPos</i>	-12-12	This determines the transposition of the entire PSR-292 sound.	*
	Tuning	<i>Tuning</i>	-100-100	This determines the pitch of the entire PSR-292 sound .	*
	Split Point	<i>SplitPnt</i>	000-127	This determines the highest key for the Split voice and sets the Split "point" — in other words, the key that separates the Split (lower) and Main (upper) voices. (The Split voice sounds up to and including the Split Point key.) The default Split Point is 054 (F#2). The Split Point setting and Accompaniment Split Point setting are automatically set to the same value.	*
	Touch Sensitivity	<i>TouchSns</i>	1-3	A setting of "1" results in limited touch response; this setting produces a relatively narrow dynamic range, no matter how lightly or strongly you play the keys. "2" lets you play over a normal dynamic range (soft to loud), while "3" is designed for playing very soft passages, giving you slightly more detailed control in the soft volume range. When Touch is turned off (page 30), a constant velocity value of 80 is produced (total velocity range = 0-127).	*
Main Voice	Volume	<i>M. Volume</i>	0-127	This determines the volume of the Main voice, letting you create an optimum mix with the Dual or Split voice.	*
	Octave	<i>M. Octave</i>	-2-2 (octave)	This determines the octave range for the Main voice. Use this to set the most suitable range for the Main voice.	*
	Pan	<i>M. Pan</i>	0 (full left)-64 (center) -127 (full right)	This determines the pan position of the Main voice in the stereo image.	*
	Reverb Send Level	<i>M. RevLvl</i>	0-127	This determines how much of the Main voice's signal is sent to the Reverb effect. Higher values result in a louder Reverb effect.	*
	Chorus Send Level	<i>M. ChoLvl</i>	0-127	This determines how much of the Main voice's signal is sent to the Chorus effect. Higher values result in a louder Chorus effect.	*
	DSP Send Level	<i>M. DspLvl</i>	0-127	This determines how much of the Main voice's signal is sent to the DSP effect. Higher values result in a louder DSP effect.	*
Dual Voice	Voice	<i>D. Voice</i>	1-605	This select the dual voice.	*
	Volume	<i>D. Volume</i>	0-127	This determines the volume of the Dual voice, letting you create an optimum mix with the Main voice.	*
	Octave	<i>D. Octave</i>	-2-2 (octave)	This determines the octave range for the Dual voice. Use this to create an octave layer with the Main voice.	*
	Pan	<i>D. Pan</i>	0 (full left)-64 (center) -127 (full right)	This determines the pan position of the Dual voice in the stereo image. For a spacious sounding effect, set this value at or near 0, and set the Main Voice Pan at the opposite positive value.	*
	Reverb Send Level	<i>D. RevLvl</i>	0-127	This determines how much of the Dual voice's signal is sent to the Reverb effect. Higher values result in a louder Reverb effect for the Dual voice.	*
	Chorus Send Level	<i>D. ChoLvl</i>	0-127	This determines how much of the Dual voice's signal is sent to the Chorus effect. Higher values result in a louder Chorus effect for the Dual voice.	*
	DSP Send Level	<i>D. DspLvl</i>	0-127	This determines how much of the Dual voice's signal is sent to the DSP effect. Higher values result in a louder DSP effect for the Dual voice.	*
Split Voice	Voice	<i>S. Voice</i>	1-605	This select the split voice.	*
	Volume	<i>S. Volume</i>	0-127	This determines the volume of the Split voice, letting you create an optimum mix with the Main voice.	*
	Octave	<i>S. Octave</i>	-2-2 (octave)	This determines the octave range for the Split voice. Use this to set the most suitable range for the Split (lower) voice.	*
	Pan	<i>S. Pan</i>	0 (full left)-64 (center) -127 (full right)	This determines the pan position of the Split voice in the stereo image. For a spacious sounding effect, set this value at or near 0, and set the Main Voice Pan at the opposite positive value.	*
	Reverb Send Level	<i>S. RevLvl</i>	0-127	This determines how much of the Split voice's signal is sent to the Reverb effect. Higher values result in a louder Reverb effect for the Split voice.	*
	Chorus Send Level	<i>S. ChoLvl</i>	0-127	This determines how much of the Split voice's signal is sent to the Chorus effect. Higher values result in a louder Chorus effect for the Split voice.	*
	DSP Send Level	<i>S. DspLvl</i>	0-127	This determines how much of the Split voice's signal is sent to the DSP effect. Higher values result in a louder DSP effect for the Split voice.	*

\* The "\*" mark indicates that the setting can be restored to default value by pressing both [+]/[-] buttons simultaneously.

# Function

CATEGORY	SELECT	Display	Range/ Settings	Description	
Effect	Reverb Type	<i>Reverb</i>	1-9	This determines the Reverb type, including "off." (See the list on page 33).	*
	Chorus Type	<i>Chorus</i>	1-5	This determines the Chorus type, including "off." (See the list on page 34).	*
	DSP Type	<i>DSP</i>	1-39	This determines the DSP type, including "off." (See the list on page 34).	*
Harmony	Harmony Type	<i>HarmType</i>	1-26	This determines the Harmony type. (See the list on page 33).	*
	Harmony Volume	<i>HarmVol</i>	0-127	This determines the level of the Harmony effect when Harmony type 1-5 is selected, letting you create the optimum mix with the original melody note.	*
MIDI	Local On/Off	<i>Local</i>	On/Off	This determines the Local on or off. Press the [+]/[-] buttons to set Local Control to on or off.	
	External Clock	<i>ExtClock</i>	On/Off	This determines the External clock or Internal clock. Press the [+]/[-] buttons to set External clock or Internal clock.	
	Bulk Data Send	<i>BulkSend</i>	YES/NO	This lets you save important PortaTone data and settings to another device (such as a sequencer, computer, or MIDI data filer). Use the [YES/+] button to transmit the data. Use the [NO/-] button to stop the transmission.	
	Initial Setup Send	<i>InitSend</i>	YES/NO	This lets you save PortaTone initial data to another device (such as a sequencer, computer, or MIDI data filer). Use the [YES/+] button to transmit the data. Use the [NO/-] button to stop the transmission.	
	Keyboard Out	<i>KbdOut</i>	On/Off	This determines whether Keyboard performance data of the Portatone is transmitted or not. Use the [+]/[-] buttons to change the setting.	
	Style Out	<i>StyleOut</i>	On/Off	This determines whether style data is transmitted via MIDI OUT or not. Press the [+]/[-] buttons to set the Style Out to on or off.	
	Song Out	<i>SongOut</i>	On/Off	This determines whether Song data is transmitted via MIDI OUT or not. Press the [+]/[-] buttons to set Song Out to on or off. (For song #001, data is not transmitted.)	
Volume	Style	<i>StyleVol</i>	0-127	This determines the volume of the style, letting you create an optimum mix with your performance.	*
	Song	<i>Song Vol</i>	0-127	This determines the volume of the Song.	*
Metronome	Volume	<i>Mtr Vol</i>	0-127	This determines the volume of the Metronome.	*
	Time Signature	<i>Time Sig</i>	0-15	This determines the time signature of the Metronome.	*
Lesson	Lesson Track (R)	<i>R-Part</i>	1-16	This determines the track number for your right hand lesson. This setting is effective only loaded song.	*
	Lesson Track (L)	<i>L-Part</i>	1-16	This determines the track number for your left hand lesson. This setting is effective only loaded song.	*
Utility	Grade On/Off	<i>Grade</i>	On/Off	This determines whether Grade function is on or off. Press the [+]/[-] buttons to set Grade to on or off.	
	Demo and DJ Cancel	<i>D-Cancel</i>	On/Off	This determines the Demo and DJ cancel is enabled or not. Press the [+]/[-] buttons to set Demo and DJ Cancel to on or off.	

\* The "\*" mark indicates that the setting can be restored to default value by pressing both [+]/[-] buttons simultaneously.



# Troubleshooting

Problem	Possible Cause and Solution
When the PSR-292 is turned on or off, a popping sound is temporarily produced.	This is normal and indicates that the PSR-292 is receiving electrical power.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the PSR-292 may produce interference. To prevent this, turn off the mobile phone or use it further away from the PSR-292.
There is no sound even when the keyboard is played or when a song is being played back.	Check that nothing is connected to the PHONES/OUTPUT jack on the rear panel. When a set of headphones is plugged into this jack, no sound is output.
	Check the Local Control on/off. (See page 69.)
Playing keys in the right hand area of the keyboard does not produce any sound.	When using the Dictionary function (page 45), the keys in the right hand area are used only for entering the chord root and type.
The sound of the voices or rhythms seems unusual or strange.	The battery power is too low. Replace the batteries. (See page 10.)
The auto accompaniment doesn't turn on, even when pressing the [ACMP] button.	Make sure the Style mode is active before using the auto accompaniment. Press the [STYLE] button to enable style operations.
The style or song does not play back even when pressing the [START/STOP] button.	Check the External Clock on/off. (See page 69.)
The style does not sound properly.	Make sure that the Style Volume (page 42) is set to an appropriate level. Make sure that the Split Point (page 27) is set to an appropriate value.
When playing back one of the Pianist styles (#124 - #135), the rhythm cannot be heard.	This is normal. The Pianist styles have no drums or bass — only piano accompaniment. The accompaniment of the style can only be heard when accompaniment is set to ON and keys are played in the auto accompaniment area of the keyboard.
Not all of the voices seem to sound, or the sound seems to be cut off.	The PSR-292 is polyphonic up to a maximum of 32 notes. If the Dual voice or Split voice is being used and a style or song is playing back at the same time, some notes/sounds may be omitted (or "stolen") from the accompaniment or song.
A strange "flanging" or "doubling" sound occurs when using the PSR-292 with a sequencer. (This may also sound like a "dual" layered sound of two voices, even when Dual is turned off.)	When using the style with a sequencer, set MIDI Echo (or the relevant control) to "off." (Refer to the owner's manual of your particular device and/or software for details.)
The footswitch (for sustain) seems to produce the opposite effect. For example, pressing the footswitch cuts off the sound and releasing it sustains the sounds.	The polarity of the footswitch is reversed. Make sure that the footswitch plug is properly connected to the SUSTAIN jack before turning on the power.
The sound of the voice changes from note to note.	The AWM tone generation method uses multiple recordings (samples) of an instrument across the range of the keyboard; thus, the actual sound of the voice may be slightly different from note to note.



# Data Backup & Initialization

## ■ Data Backup .....

The following data can be stored to internal flash memory as data backup.

Group	Parameter
SONG	User Song Data
ONE TOUCH SETTING	See page 28.
PC	PC Memory
FUNCTION	Tuning Split Point Touch Sensitivity Style Volume Song Volume Metronome Volume Grade On/Off Demo & DJ Cancel
Touch	Touch On/Off

● **About the Internal Flash Memory**  
 The Song, One Touch Setting and PC parameters are automatically stored when each saving operation is done. Function and touch On/Off are stored when Pressing and Holding the Function button.




### ⚠ CAUTION

- Never attempt to turn the power off when a "WRITING!" message is shown in the display. Doing so can damage the internal flash memory and result in loss of data.

## ■ Data Initialization .....

### ● All Data Initialization

All data can be initialized and restored to the factory preset condition by turning on the power while holding the highest (rightmost) white key and highest (rightmost) black key on the keyboard. "All Mem CLr" will appear briefly on the display.

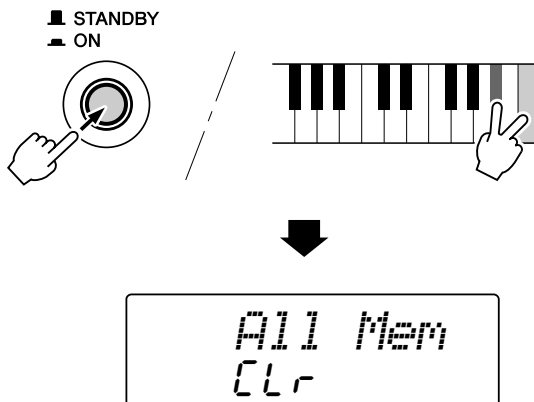

### ⚠ CAUTION

- All data listed above, plus loaded song data, will be erased and/or changed when the All Data Initialization procedure is carried out.
- Carrying out the data initialization procedure will usually restore normal operation if the PSR-292 freezes or begins to act erratically for any reason.

### ● Loaded Song Initializaion

You can erase only the loaded song data by turning on the power while holding the highest (rightmost) black key on the keyboard.



## Panel controls and terminals

+/-	9, 24
A-B REPEAT	9, 53
ACMP	9, 36
CATEGORY	8, 23
DC IN 12V	9, 10
DEMO	8, 14
Dial	8, 24
DICTIONARY	8, 45
DJ	8, 22
DUAL	8, 26
FF	9, 53
FUNCTION	8, 74
HARMONY	8, 31
INTRO ENDING	9, 36
LEFT	53
LESSON	8, 62
M.D.B.	8, 48
MAIN/AUTO FILL	9, 36
MASTER VOLUME	8
MEMORY	9, 29
METRONOME	8, 20
MIDI IN	9, 67
MIDI OUT	9, 67
NO	9, 59, 60
Numeric keypad	9, 24
ONE TOUCH SETTING	9, 28
PAUSE	9, 53
PC	8, 73
PHONES/OUTPUT	9, 11
PORTABLE GRAND	8, 20
REC	57
RECORD	9
REW	9, 53
RIGHT	53
SELECT	8, 24
SONG	8, 51, 57, 61
SONG MEMORY	9, 57
SPLIT	8, 27
STANDBY/ON	8, 11
START/STOP	9, 36, 53
STYLE	8, 35
SUSTAIN	9, 11
SYNC START	9, 36
SYNC STOP	9, 36
TEMPO/TAP	9, 20, 41
TOUCH	8, 30
VOICE	8, 23
YES	9, 59, 60

## Misc.

#000 OTS	26
----------	----

## A

A-B repeat	54
AC Power adaptor	10
accessory jacks	11
accompaniment sections	42
Accompaniment Split Point	27

## B

Batteries	10
Beat display	51
beat marks	51
Bulk	69

## C

Chord Names	47
Chord Track	57
Chord Type	47
Chords, About	46
Chords, Fingered	43
Chords, Single Finger	43
Chorus	32
Clearing, Song	59

## D

DEMO Cancel	14
Demo song	14
Dictionary	45
DJ	22
Drum Kit Voice Chart	92
DSP	32
Dual Voice	26

## E

Effects	31
Ending	36
External Clock	69

## F

Fill-in	42
Fingered chords	43
Flash memory	71, 78
Footswitch	11
Function	74

## G

GM System Level 1	66
Grade	65

## H

Harmony	31
Headphones	11

## I

Indicator	18
Initial Setup Send	69
Initialization	78
Internal Clock	69
Intro	38

## L

Left	62
Lesson	61
Lesson Track	63
Level, chorus send	32
Level, DSP send	32
Level, reverb send	31
Local on/off	69

## M

M.D.B. (music database)	48
Main A/B	42
Main Voice	25
Master Volume	8
Melody Voice Change	55
Metronome	20
MIDI	66
MIDI channels	67
MIDI Implementation Chart	94
MIDI LSB Receive cancel	70
MIDI terminals	67
Multi Fingering	43
Music Stand	19

## O

Octave	19
Octave, dual	26
Octave, main	25
Octave, split	27
One Touch Setting	28

## P

Pan, dual	26
Pan, main	25
Pan, split	27
PC	73
Portable Grand	20

## Q

Quick Guide	12
-------------	----

## R

recording, song	56
Reverb	31
Right	62
Root	46

## S

sections (accompaniment) .....	42
Single Finger chords.....	43
Song Clear .....	59
Song Filer .....	72
Song Volume.....	55
songs, playing .....	53
songs, recording.....	56
songs, selecting.....	51
Specifications.....	98
Split Point .....	27
Split Voice.....	27
Style Volume.....	42
styles, playing .....	36
styles, selecting.....	35
Sync Start.....	37
Sync Stop.....	40

## T

Tap.....	37
Tempo .....	20, 41
Time Signature.....	21
Touch Sensitivity.....	30
track (song) .....	57
tracks, muting.....	58
Transpose .....	29
Troubleshooting .....	77
Tuning .....	29

## U

User songs.....	56
-----------------	----

## V

Voice List.....	82
voices, Drum Kit .....	92
voices, selecting and playing.....	23
voices, XG.....	84
Volume, dual.....	26
Volume, harmony .....	31
Volume, main .....	25
Volume, Metronome.....	21
Volume, Song .....	55
Volume, split.....	27
Volume, Style .....	42

## X

XG voices .....	84
-----------------	----





# Voice List / Voice-Liste / Liste des voix / Lista de voces

## ■ Maximum Polyphony

The PSR-292 has 32-note maximum polyphony. This means that it can play a maximum of up to 32 notes at once, regardless of what functions are used. Auto Accompaniment uses a number of the available notes, so when Auto Accompaniment is used the total number of available notes for playing on the keyboard is correspondingly reduced. The same applies to the Split Voice and Song functions.

NOTE

- The Voice List includes MIDI program change numbers for each voice. Use these program change numbers when playing the PSR-292 via MIDI from an external device.
- Some voices may sound continuously or have a long decay after the notes have been released while the sustain pedal (foot-switch) is held.

## ■ Polyphoniekapazität

Das PSR-292 verfügt über eine maximale Polyphonie von 32 Noten. Dies bedeutet, dass das PSR-292, unabhängig von den aktivierten Funktionen, maximal 32 Noten gleichzeitig spielen kann. Eine bestimmte Anzahl der verfügbaren Noten wird von der automatischen Begleitung belegt. Bei der Verwendung der automatischen Begleitung verringert sich somit die Anzahl der für das Spielen auf dem Keyboard verfügbaren Noten entsprechend. Das Gleiche wird auf die Split-Stimmen und Song-Funktion angewendet.

HINWEIS

- In der Voice-Liste sind für jede Stimme Änderungsnummern der MIDI-Programme enthalten. Verwenden Sie diese Änderungsnummern der Programme, wenn Sie das PSR-292 über MIDI von einem externen Gerät aus ansteuern.
- Solange der Sustain-Fußschalter gedrückt ist, ertönen einige Stimmen nach dem Loslassen der Taste eventuell kontinuierlich oder mit einer langen Abklingzeit (Decay).

## ■ Polyphonie maximale

Le PSR-292 dispose d'une polyphonie maximale de 32 notes. Cela signifie que l'instrument peut reproduire un nombre maximal de 32 voix à la fois, indépendamment des fonctions utilisées. L'accompagnement automatique fait appel à un certain nombre de notes disponibles. Il s'ensuit que lorsque l'accompagnement automatique est utilisé, le nombre total de notes disponibles pour l'interprétation au clavier est réduite en conséquence. Cela s'applique également aux fonctions Split Voice (Voix partagées) et Song (Morceau).

NOTE

- La liste des voix comporte des numéros de modification de programmes MIDI pour chaque voix. Utilisez ces derniers pour commander le PSR-292 à partir d'un périphérique MIDI.
- Certaines voix peuvent avoir une sonorité prolongée ou un long déclin après le relâchement des touches, pendant la durée de maintien de la pédale de sustain.

## ■ Polifonía máxima

El PSR-292 tiene una polifonía máxima de 32 notas. Esto significa que puede tocar un máximo de 32 notas a la vez, independientemente de las funciones que se usen. El acompañamiento automático utiliza una parte de las notas disponibles, de forma que cuando se utiliza el acompañamiento automático, el número de notas disponibles se reduce de acuerdo con ello. Lo mismo puede aplicarse a las funciones Split Voice y Song.

NOTA

- La lista de voces incluye números de cambio de programa MIDI para cada sonido. Utilice estos números de cambio de programa cuando toque el PSR-292 mediante MIDI desde un dispositivo externo.
- Algunas voces podrían sonar de forma continuada o presentar una larga caída después de soltar las notas mientras se mantiene presionado el pedal de sostenido (interruptor de pedal).

# Voice List / Voice-Liste / Liste des voix / Lista de voces

## ● Panel Voice List / Verzeichnis der Bedienfeld-Voices / Liste des voix de panneau / Lista de voces del panel

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
<b>PIANO</b>				
001	0	112	0	Grand Piano
002	0	112	1	Bright Piano
003	0	112	3	Honky-tonk Piano
004	0	112	2	MIDI Grand Piano
005	0	113	2	CP 80
006	0	112	6	Harpsichord
<b>E.PIANO</b>				
007	0	114	4	Galaxy EP
008	0	112	4	Funky Electric Piano
009	0	112	5	DX Modern Elec. Piano
010	0	113	5	Hyper Tines
011	0	114	5	Venus Electric Piano
012	0	112	7	Clavi
<b>ORGAN</b>				
013	0	112	16	Jazz Organ 1
014	0	113	16	Jazz Organ 2
015	0	112	17	Click Organ
016	0	116	16	Bright Organ
017	0	112	18	Rock Organ
018	0	114	18	Purple Organ
019	0	118	16	16'+2' Organ
020	0	119	16	16'+4' Organ
021	0	114	16	Theater Organ
022	0	112	19	Church Organ
023	0	113	19	Chapel Organ
024	0	112	20	Reed Organ
<b>ACCORDION</b>				
025	0	113	21	Traditional Accordion
026	0	112	21	Musette Accordion
027	0	113	23	Bandoneon
028	0	112	22	Harmonica
<b>GUITAR</b>				
029	0	112	24	Classical Guitar
030	0	112	25	Folk Guitar
031	0	113	25	12Strings Guitar
032	0	112	26	Jazz Guitar
033	0	113	26	Octave Guitar
034	0	112	27	Clean Guitar
035	0	117	27	60's Clean Guitar
036	0	112	28	Muted Guitar
037	0	112	29	Overdriven Guitar
038	0	112	30	Distortion Guitar
<b>BASS</b>				
039	0	112	32	Acoustic Bass
040	0	112	33	Finger Bass
041	0	112	34	Pick Bass
042	0	112	35	Fretless Bass
043	0	112	36	Slap Bass
044	0	112	38	Synth Bass
045	0	113	38	Hi-Q Bass
046	0	113	39	Dance Bass
<b>STRINGS</b>				
047	0	112	48	String Ensemble
048	0	112	49	Chamber Strings
049	0	112	50	Synth Strings
050	0	113	49	Slow Strings

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
051	0	112	44	Tremolo Strings
052	0	112	45	Pizzicato Strings
053	0	112	55	Orchestra Hit
054	0	112	40	Violin
055	0	112	42	Cello
056	0	112	43	Contrabass
057	0	112	105	Banjo
058	0	112	46	Harp
<b>CHOIR</b>				
059	0	112	52	Choir
060	0	113	52	Vocal Ensemble
061	0	112	53	Vox Humana
062	0	112	54	Air Choir
<b>SAXOPHONE</b>				
063	0	112	64	Soprano Sax
064	0	112	65	Alto Sax
065	0	112	66	Tenor Sax
066	0	114	66	Breathy Tenor
067	0	112	67	Baritone Sax
068	0	112	68	Oboe
069	0	112	69	English Horn
070	0	112	70	Bassoon
071	0	112	71	Clarinet
<b>TRUMPET</b>				
072	0	112	56	Trumpet
073	0	112	59	Muted Trumpet
074	0	112	57	Trombone
075	0	113	57	Trombone Section
076	0	112	60	French Horn
077	0	112	58	Tuba
<b>BRASS</b>				
078	0	112	61	Brass Section
079	0	113	61	Big Band Brass
080	0	119	61	Mellow Horns
081	0	112	62	Synth Brass
082	0	113	62	Jump Brass
083	0	114	62	Techno Brass
<b>FLUTE</b>				
084	0	112	73	Flute
085	0	112	72	Piccolo
086	0	112	75	Pan Flute
087	0	112	74	Recorder
088	0	112	79	Ocarina
<b>SYNTH LEAD</b>				
089	0	112	80	Square Lead
090	0	112	81	Sawtooth Lead
091	0	112	85	Voice Lead
092	0	112	98	Star Dust
093	0	112	100	Brightness
094	0	115	81	Analogon
095	0	119	81	Fargo
<b>SYNTH PAD</b>				
096	0	112	88	Fantasia
097	0	113	100	Bell Pad
098	0	112	91	Xenon Pad
099	0	112	94	Equinox
100	0	113	89	Dark Moon
<b>PERCUSSION</b>				
101	0	112	11	Vibraphone
102	0	112	12	Marimba
103	0	112	13	Xylophone

# Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
104	0	112	114	Steel Drums
105	0	112	8	Celesta
106	0	112	14	Tubular Bells
107	0	112	47	Timpani
108	0	112	10	Music Box
<b>DRUM KITS</b>				
109	127	0	0	Standard Kit 1
110	127	0	1	Standard Kit 2
111	127	0	8	Room Kit
112	127	0	16	Rock Kit
113	127	0	24	Electronic Kit
114	127	0	25	Analog Kit
115	127	0	27	Dance Kit
116	127	0	32	Jazz Kit
117	127	0	40	Brush Kit
118	127	0	48	Symphony Kit
119	126	0	0	SFX Kit 1
120	126	0	1	SFX Kit 2

## ● XG Voice List / XG-Stimmenliste / Liste de voix XG / Lista de voces XG

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
<b>PIANO</b>				
121	0	0	0	Grand Piano
122	0	1	0	Grand Piano KSP
123	0	18	0	Mellow Grand Piano
124	0	40	0	Piano Strings
125	0	41	0	Dream
126	0	0	1	Bright Piano
127	0	1	1	Bright Piano KSP
128	0	0	2	Electric Grand Piano
129	0	1	2	Electric Grand Piano KSP
130	0	32	2	Detuned CP80
131	0	40	2	Layered CP 1
132	0	41	2	Layered CP 2
133	0	0	3	Honky-tonk Piano
134	0	1	3	Honky-tonk Piano KSP
135	0	0	4	Electric Piano 1
136	0	1	4	Electric Piano 1 KSP
137	0	18	4	Mellow Electric Piano 1
138	0	32	4	Chorus Electric Piano 1
139	0	40	4	Hard Electric Piano
140	0	45	4	Velocity Crossfade Electric Piano 1
141	0	64	4	60's Electric Piano 1
142	0	0	5	Electric Piano 2
143	0	1	5	Electric Piano 2 KSP
144	0	32	5	Chorus Electric Piano 2
145	0	33	5	DX Electric Piano Hard
146	0	34	5	DX Legend
147	0	40	5	DX Phase Electric Piano
148	0	41	5	DX + Analog Electric Piano
149	0	42	5	DX Koto Electric Piano
150	0	45	5	Velocity Crossfade Electric Piano 2
151	0	0	6	Harpsichord
152	0	1	6	Harpsichord KSP

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
153	0	25	6	Harpsichord 2
154	0	35	6	Harpsichord 3
155	0	0	7	Clavi
156	0	1	7	Clavi KSP
157	0	27	7	Clavi Wah
158	0	64	7	Pulse Clavi
159	0	65	7	Pierce Clavi
<b>CHROMATIC</b>				
160	0	0	8	Celesta
161	0	0	9	Glockenspiel
162	0	0	10	Music Box
163	0	64	10	Orgel
164	0	0	11	Vibraphone
165	0	1	11	Vibraphone KSP
166	0	45	11	Hard Vibraphone
167	0	0	12	Marimba
168	0	1	12	Marimba KSP
169	0	64	12	Sine Marimba
170	0	97	12	Balimba
171	0	98	12	Log Drums
172	0	0	13	Xylophone
173	0	0	14	Tubular Bells
174	0	96	14	Church Bells
175	0	97	14	Carillon
176	0	0	15	Dulcimer
177	0	35	15	Dulcimer 2
178	0	96	15	Cimbalom
179	0	97	15	Santur
<b>ORGAN</b>				
180	0	0	16	DrawOrg
181	0	32	16	DetDrawOrg
182	0	33	16	60sDrawOrg1
183	0	34	16	60sDrawOrg2
184	0	35	16	70sDrawOrg1
185	0	36	16	DrawOrg2
186	0	37	16	60sDrawOrg3
187	0	38	16	Even Bar
188	0	40	16	16+2"2/3
189	0	64	16	Organ Bass
190	0	65	16	70sDrawOrg2
191	0	66	16	Cheezy Organ
192	0	67	16	DrawOrg3
193	0	0	17	Percussive Organ
194	0	24	17	70's Percussive Organ
195	0	32	17	Detuned Percussive Organ
196	0	33	17	Light Organ
197	0	37	17	Percussive Organ 2
198	0	0	18	Rock Organ
199	0	64	18	Rotary Organ
200	0	65	18	Slow Rotary
201	0	66	18	Fast Rotary
202	0	0	19	Church Organ
203	0	32	19	Church Organ 3
204	0	35	19	Church Organ 2
205	0	40	19	Notre Dame
206	0	64	19	Organ Flute
207	0	65	19	Tremolo Organ Flute
208	0	0	20	Reed Organ
209	0	40	20	Puff Organ

# Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
210	0	0	21	Accordion
211	0	32	21	Accord It
212	0	0	22	Hamonica
213	0	32	22	Harmonica 2
214	0	0	23	Tango Accordion
215	0	64	23	Tango Accordion 2
<b>GUITAR</b>				
216	0	0	24	Nylon Guitar
217	0	16	24	Nylon Guitar 2
218	0	25	24	Nylon Guitar 3
219	0	43	24	Velocity Guitar Harmonics
220	0	96	24	Ukulele
221	0	0	25	Steel Guitar
222	0	16	25	Steel Guitar 2
223	0	35	25	12-string Guitar
224	0	40	25	Nylon & Steel Guitar
225	0	41	25	Steel Guitar with Body Sound
226	0	96	25	Mandolin
227	0	0	26	Jazz Guitar
228	0	18	26	Mellow Guitar
229	0	32	26	Jazz Amp
230	0	0	27	Clean Guitar
231	0	32	27	Chorus Guitar
232	0	0	28	Muted Guitar
233	0	40	28	Funk Guitar 1
234	0	41	28	Muted Steel Guitar
235	0	43	28	Funk Guitar 2
236	0	45	28	Jazz Man
237	0	0	29	Overdriven Guitar
238	0	43	29	Guitar Pinch
239	0	0	30	Distortion Guitar
240	0	40	30	Feedback Guitar
241	0	41	30	Feedback Guitar 2
242	0	0	31	Guitar Harmonics
243	0	65	31	Guitar Feedback
244	0	66	31	Guitar Harmonics 2
<b>BASS</b>				
245	0	0	32	Acoustic Bass
246	0	40	32	Jazz Rhythm
247	0	45	32	Velocity Crossfade Upright Bass
248	0	0	33	Finger Bass
249	0	18	33	Finger Dark
250	0	27	33	Flange Bass
251	0	40	33	Bass & Distorted Electric Guitar
252	0	43	33	Finger Slap Bass
253	0	45	33	Finger Bass 2
254	0	65	33	Modulated Bass
255	0	0	34	Pick Bass
256	0	28	34	Muted Pick Bass
257	0	0	35	Fretless Bass
258	0	32	35	Fretless Bass 2
259	0	33	35	Fretless Bass 3
260	0	34	35	Fretless Bass 4
261	0	96	35	Synth Fretless
262	0	97	35	Smooth Fretless
263	0	0	36	Slap Bass 1
264	0	27	36	Resonant Slap
265	0	32	36	Punch Thumb Bass

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
266	0	0	37	Slap Bass 2
267	0	43	37	Velocity Switch Slap
268	0	0	38	Synth Bass 1
269	0	18	38	Synth Bass 1 Dark
270	0	20	38	Fast Resonant Bass
271	0	24	38	Acid Bass
272	0	35	38	Clavi Bass
273	0	40	38	Techno Synth Bass
274	0	64	38	Orbiter
275	0	65	38	Square Bass
276	0	66	38	Rubber Bass
277	0	96	38	Hammer
278	0	0	39	Synth Bass 2
279	0	6	39	Mellow Synth Bass
280	0	12	39	Sequenced Bass
281	0	18	39	Click Synth Bass
282	0	19	39	Synth Bass 2 Dark
283	0	32	39	Smooth Synth Bass
284	0	40	39	Modular Synth Bass
285	0	41	39	DX Bass
286	0	64	39	X Wire Bass
<b>STRING</b>				
287	0	0	40	Violin
288	0	8	40	Slow Violin
289	0	0	41	Viola
290	0	0	42	Cello
291	0	0	43	Contrabass
292	0	0	44	Tremolo Strings
293	0	8	44	Slow Tremolo Strings
294	0	40	44	Suspense Strings
295	0	0	45	Pizzicato Strings
296	0	0	46	Orchestral Harp
297	0	40	46	Yang Chin
298	0	0	47	Timpani
<b>ENSEMBLE</b>				
299	0	0	48	Strings 1
300	0	3	48	Stereo Strings
301	0	8	48	Slow Strings
302	0	24	48	Arco Strings
303	0	35	48	60's Strings
304	0	40	48	Orchestra
305	0	41	48	Orchestra 2
306	0	42	48	Tremolo Orchestra
307	0	45	48	Velocity Strings
308	0	0	49	Strings 2
309	0	3	49	Stereo Slow Strings
310	0	8	49	Legato Strings
311	0	40	49	Warm Strings
312	0	41	49	Kingdom
313	0	64	49	70's Strings
314	0	65	49	String Ensemble 3
315	0	0	50	Synth Strings 1
316	0	27	50	Resonant Strings
317	0	64	50	Synth Strings 4
318	0	65	50	Synth Strings 5
319	0	0	51	Synth Strings 2
320	0	0	52	Choir Aahs
321	0	3	52	Stereo Choir
322	0	16	52	Choir Aahs 2
323	0	32	52	Mellow Choir
324	0	40	52	Choir Strings

# Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
325	0	0	53	Voice Oohs
326	0	0	54	Synth Voice
327	0	40	54	Synth Voice 2
328	0	41	54	Choral
329	0	64	54	Analog Voice
330	0	0	55	Orchestra Hit
331	0	35	55	Orchestra Hit 2
332	0	64	55	Impact
<b>BRASS</b>				
333	0	0	56	Trumpet
334	0	16	56	Trumpet 2
335	0	17	56	Bright Trumpet
336	0	32	56	Warm Trumpet
337	0	0	57	Trombone
338	0	18	57	Trombone 2
339	0	0	58	Tuba
340	0	16	58	Tuba 2
341	0	0	59	Muted Trumpet
342	0	0	60	French Horn
343	0	6	60	French Horn Solo
344	0	32	60	French Horn 2
345	0	37	60	Horn Orchestra
346	0	0	61	Brass Section
347	0	35	61	Trumpet & Trombone Section
348	0	40	61	Brass Section 2
349	0	41	61	High Brass
350	0	42	61	Mellow Brass
351	0	0	62	Synth Brass 1
352	0	12	62	Quack Brass
353	0	20	62	Resonant Synth Brass
354	0	24	62	Poly Brass
355	0	27	62	Synth Brass 3
356	0	32	62	Jump Brass
357	0	45	62	Analog Velocity Brass 1
358	0	64	62	Analog Brass 1
359	0	0	63	Synth Brass 2
360	0	18	63	Soft Brass
361	0	40	63	Synth Brass 4
362	0	41	63	Choir Brass
363	0	45	63	Analog Velocity Brass 2
364	0	64	63	Analog Brass 2
<b>REED</b>				
365	0	0	64	Soprano Sax
366	0	0	65	Alto Sax
367	0	40	65	Sax Section
368	0	43	65	Hyper Alto Sax
369	0	0	66	Tenor Sax
370	0	40	66	Breathy Tenor Sax
371	0	41	66	Soft Tenor Sax
372	0	64	66	Tenor Sax 2
373	0	0	67	Baritone Sax
374	0	0	68	Oboe
375	0	0	69	English Horn
376	0	0	70	Bassoon
377	0	0	71	Clarinet
<b>PIPE</b>				
378	0	0	72	Piccolo
379	0	0	73	Flute

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
380	0	0	74	Recorder
381	0	0	75	Pan Flute
382	0	0	76	Blown Bottle
383	0	0	77	Shakuhachi
384	0	0	78	Whistle
385	0	0	79	Ocarina
<b>SYNTH LEAD</b>				
386	0	0	80	Square Lead
387	0	6	80	Square Lead 2
388	0	8	80	LM Square
389	0	18	80	Hollow
390	0	19	80	Shroud
391	0	64	80	Mellow
392	0	65	80	Solo Sine
393	0	66	80	Sine Lead
394	0	0	81	Sawtooth Lead
395	0	6	81	Sawtooth Lead 2
396	0	8	81	Thick Sawtooth
397	0	18	81	Dynamic Sawtooth
398	0	19	81	Digital Sawtooth
399	0	20	81	Big Lead
400	0	24	81	Heavy Synth
401	0	25	81	Waspy Synth
402	0	40	81	Pulse Sawtooth
403	0	41	81	Dr. Lead
404	0	45	81	Velocity Lead
405	0	96	81	Sequenced Analog
406	0	0	82	Calliope Lead
407	0	65	82	Pure Pad
408	0	0	83	Chiff Lead
409	0	64	83	Rubby
410	0	0	84	Charang Lead
411	0	64	84	Distorted Lead
412	0	65	84	Wire Lead
413	0	0	85	Voice Lead
414	0	24	85	Synth Aahs
415	0	64	85	Vox Lead
416	0	0	86	Fifths Lead
417	0	35	86	Big Five
418	0	0	87	Bass & Lead
419	0	16	87	Big & Low
420	0	64	87	Fat & Perky
421	0	65	87	Soft Whirl
<b>SYNTH PAD</b>				
422	0	0	88	New Age Pad
423	0	64	88	Fantasy
424	0	0	89	Warm Pad
425	0	16	89	Thick Pad
426	0	17	89	Soft Pad
427	0	18	89	Sine Pad
428	0	64	89	Horn Pad
429	0	65	89	Rotary Strings
430	0	0	90	Poly Synth Pad
431	0	64	90	Poly Pad 80
432	0	65	90	Click Pad
433	0	66	90	Analog Pad
434	0	67	90	Square Pad
435	0	0	91	Choir Pad
436	0	64	91	Heaven

# Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
437	0	66	91	Itopia
438	0	67	91	CC Pad
439	0	0	92	Bowed Pad
440	0	64	92	Glacier
441	0	65	92	Glass Pad
442	0	0	93	Metallic Pad
443	0	64	93	Tine Pad
444	0	65	93	Pan Pad
445	0	0	94	Halo Pad
446	0	0	95	Sweep Pad
447	0	20	95	Shwimmer
448	0	27	95	Converge
449	0	64	95	Polar Pad
450	0	66	95	Celestial
<b>SYNTH EFFECTS</b>				
451	0	0	96	Rain
452	0	45	96	Clavi Pad
453	0	64	96	Harmo Rain
454	0	65	96	African Wind
455	0	66	96	Carib
456	0	0	97	Sound Track
457	0	27	97	Prologue
458	0	64	97	Ancestral
459	0	0	98	Crystal
460	0	12	98	Synth Drum Comp
461	0	14	98	Popcorn
462	0	18	98	Tiny Bells
463	0	35	98	Round Glockenspiel
464	0	40	98	Glockenspiel Chimes
465	0	41	98	Clear Bells
466	0	42	98	Chorus Bells
467	0	64	98	Synth Mallet
468	0	65	98	Soft Crystal
469	0	66	98	Loud Glockenspiel
470	0	67	98	Christmas Bells
471	0	68	98	Vibraphone Bells
472	0	69	98	Digital Bells
473	0	70	98	Air Bells
474	0	71	98	Bell Harp
475	0	72	98	Gamelimba
476	0	0	99	Atmosphere
477	0	18	99	Warm Atmosphere
478	0	19	99	Hollow Release
479	0	40	99	Nylon Electric Piano
480	0	64	99	Nylon Harp
481	0	65	99	Harp Vox
482	0	66	99	Atmosphere Pad
483	0	67	99	Planet
484	0	0	100	Brightness
485	0	64	100	Fantasy Bells
486	0	96	100	Smokey
487	0	0	101	Goblins
488	0	64	101	Goblins Synth
489	0	65	101	Creeper
490	0	66	101	Ring Pad
491	0	67	101	Ritual
492	0	68	101	To Heaven
493	0	70	101	Night

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
494	0	71	101	Glisten
495	0	96	101	Bell Choir
496	0	0	102	Echoes
497	0	8	102	Echoes 2
498	0	14	102	Echo Pan
499	0	64	102	Echo Bells
500	0	65	102	Big Pan
501	0	66	102	Synth Piano
502	0	67	102	Creation
503	0	68	102	Star Dust
504	0	69	102	Resonant & Panning
505	0	0	103	Sci-Fi
506	0	64	103	Starz
<b>WORLD</b>				
507	0	0	104	Sitar
508	0	32	104	Detuned Sitar
509	0	35	104	Sitar 2
510	0	96	104	Tambra
511	0	97	104	Tamboura
512	0	0	105	Banjo
513	0	28	105	Muted Banjo
514	0	96	105	Rabab
515	0	97	105	Gopichant
516	0	98	105	Oud
517	0	0	106	Shamisen
518	0	0	107	Koto
519	0	96	107	Taisho-kin
520	0	97	107	Kanoon
521	0	0	108	Kalimba
522	0	0	109	Bagpipe
523	0	0	110	Fiddle
524	0	0	111	Shanai
525	0	64	111	Shanai 2
526	0	96	111	Pungi
527	0	97	111	Hichiriki
<b>PERCUSSIVE</b>				
528	0	0	112	Tinkle Bell
529	0	96	112	Bonang
530	0	97	112	Altair
531	0	98	112	Gamelan Gongs
532	0	99	112	Stereo Gamelan Gongs
533	0	100	112	Rama Cymbal
534	0	101	112	Asian Bells
535	0	0	113	Agogo
536	0	0	114	Steel Drums
537	0	97	114	Glass Percussion
538	0	98	114	Thai Bells
539	0	0	115	Woodblock
540	0	96	115	Castanets
541	0	0	116	Taiko Drum
542	0	96	116	Gran Cassa
543	0	0	117	Melodic Tom
544	0	64	117	Melodic Tom 2
545	0	65	117	Real Tom
546	0	66	117	Rock Tom
547	0	0	118	Synth Drum
548	0	64	118	Analog Tom
549	0	65	118	Electronic Percussion

# Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
550	0	0	119	Reverse Cymbal
<b>SOUND EFFECTS</b>				
551	0	0	120	Fret Noise
552	0	0	121	Breath Noise
553	0	0	122	Seashore
554	0	0	123	Bird Tweet
555	0	0	124	Telephone Ring
556	0	0	125	Helicopter
557	0	0	126	Applause
558	0	0	127	Gunshot
559	64	0	0	Cutting Noise
560	64	0	1	Cutting Noise 2
561	64	0	3	String Slap
562	64	0	16	Flute Key Click
563	64	0	32	Shower
564	64	0	33	Thunder
565	64	0	34	Wind
566	64	0	35	Stream
567	64	0	36	Bubble
568	64	0	37	Feed
569	64	0	48	Dog
570	64	0	49	Horse
571	64	0	50	Bird Tweet 2
572	64	0	54	Ghost
573	64	0	55	Maou
574	64	0	64	Phone Call
575	64	0	65	Door Squeak
576	64	0	66	Door Slam
577	64	0	67	Scratch Cut
578	64	0	68	Scratch Split
579	64	0	69	Wind Chime
580	64	0	70	Telephone Ring 2
581	64	0	80	Car Engine Ignition
582	64	0	81	Car Tires Squeal
583	64	0	82	Car Passing
584	64	0	83	Car Crash
585	64	0	84	Siren
586	64	0	85	Train
587	64	0	86	Jet Plane
588	64	0	87	Starship
589	64	0	88	Burst
590	64	0	89	Roller Coaster
591	64	0	90	Submarine
592	64	0	96	Laugh
593	64	0	97	Scream
594	64	0	98	Punch
595	64	0	99	Heartbeat
596	64	0	100	Footsteps
597	64	0	112	Machine Gun
598	64	0	113	Laser Gun
599	64	0	114	Explosion
600	64	0	115	Firework

## ● DJ Voice List / DJ-Stimmenliste / Liste des voix DJ / Lista de sonidos DJ

Voice No.	Bank Select		MIDI Program Change#	Voice Name
	MSB	LSB		
<b>DJ</b>				
601	0	123	118	DJ Set 1
602	0	123	119	DJ Set 2
603	0	123	120	DJ Set 3
604	0	123	121	DJ Set 4
605	0	123	122	DJ Set 5



# Voice List / Voice-Liste / Liste des voix / Lista de voces

## ● DJ Voice List / DJ-Stimmenliste / Liste des voix DJ / Lista de sonidos DJ

Voice No.		601	602	603	604	605
MSB/LSB/PC		000/123/118	000/123/119	000/123/120	000/123/121	000/123/122
No.	Note	DJ Set 1	DJ Set 2	DJ Set 3	DJ Set 4	DJ Set 5
036	C 1	BD Analog H	Bass Drum Soft	BD Analog H	BD Analog H	BD Analog H
037	C# 1	Analog Side Stick	Side Stick	Analog Side Stick	Analog Side Stick	Analog Side Stick
038	D 1	Analog Snare 1	Snare M	Analog Snare 1	Analog Snare 1	Analog Snare 1
039	D# 1	Hand Clap	Hand Clap	Hand Clap	Hand Clap	Hand Clap
040	E 1	Analog Snare 2	Snare H Hard	Analog Snare 2	Analog Snare 2	Analog Snare 2
041	F 1	Analog Tom 1	Floor Tom L	Analog Tom 1	Analog Tom 1	Analog Tom 1
042	F# 1	Analog HH Closed 1	Hi-Hat Closed	Analog HH Closed 1	Analog HH Closed 1	Analog HH Closed 1
043	G 1	Analog Tom 2	Floor Tom H	Analog Tom 2	Analog Tom 2	Analog Tom 2
044	G# 1	Analog HH Closed 2	Hi-Hat Pedal	Analog HH Closed 2	Analog HH Closed 2	Analog HH Closed 2
045	A 1	Analog Tom 3	Low Tom	Analog Tom 3	Analog Tom 3	Analog Tom 3
046	A# 1	Analog HH Open	Hi-Hat Open	Analog HH Open	Analog HH Open	Analog HH Open
047	B 1	Analog Tom 4	Mid Tom L	Analog Tom 4	Analog Tom 4	Analog Tom 4
048	C 2	Analog Tom 5	Mid Tom H	Analog Tom 5	Analog Tom 5	Analog Tom 5
049	C# 2	Analog Cymbal	Crash Cymbal 1	Analog Cymbal	Analog Cymbal	Analog Cymbal
050	D 2	Analog Tom 6	High Tom	Analog Tom 6	Analog Tom 6	Analog Tom 6
051	D# 2	Ride Cymbal 1	Ride Cymbal 1	Ride Cymbal 1	Ride Cymbal 1	Ride Cymbal 1
052	E 2	Chinese Cymbal	Chinese Cymbal	Chinese Cymbal	Chinese Cymbal	Chinese Cymbal
053	F 2	Ride Cymbal Cup	Ride Cymbal Cup	Ride Cymbal Cup	Ride Cymbal Cup	Ride Cymbal Cup
054	F# 2	Tambourine	Tambourine	Tambourine	Tambourine	Tambourine
055	G 2					
056	G# 2					
057	A 2					
058	A# 2					
059	B 2					
060	C 3					
061	C# 3					
062	D 3					
063	D# 3	Ohh2	FX01	ORCH	signal	Go
064	E 3					
065	F 3					
066	F# 3					
067	G 3					
068	G# 3					
069	A 3					
070	A# 3					
071	B 3					
072	C 4					
073	C# 4					
074	D 4					
075	D# 4					
076	E 4					
077	F 4	FX02	Onemorettime	Onemorettime	Uhh-Hit	Huea
078	F# 4					
079	G 4					
080	G# 4					
081	A 4					
082	A# 4					
083	B 4					
084	C 5	Joo	Go	GetUp	Huihu	GetUp
085	C# 5	Reverse	Ohh2	signal	Joo	Reverse
086	D 5	Huihu	Heau	Joo	ComeOn	Joo
087	D# 5	FXTBrs	FX02	FXTBrs	Onemorettime	FX01
088	E 5	Huea	Huihu	Go	Go	Ohh1
089	F 5	GetUp	GetUp	Huihu	GetUp	Ohh2
090	F# 5	Ohh1	Reverse	FX01	Huea	Onemorettime
091	G 5	Go	signal	ComeOn	Ohh2	ComeOn
092	G# 5	Scratch 1	Scratch 1	Scratch 1	Scratch 1	Scratch 1
093	A 5	Scratch 2	Scratch 2	Scratch 2	Scratch 2	Scratch 2
094	A# 5	Scratch 3	Scratch 3	Scratch 3	Scratch 3	Scratch 3
095	B 5	Scratch 4	Scratch 4	Scratch 4	Scratch 4	Scratch 4
096	C 6	Scratch 5	Scratch 5	Scratch 5	Scratch 5	Scratch 5

# Style List / Style-Liste / Liste des styles / Lista de estilos

Style No.	Style Name
<b>8Beat</b>	
001	8BeatModern
002	60'sGtrPop
003	8BeatAdria
004	60's8Beat
005	8Beat
006	OffBeat
007	60'sRock
008	HardRock
009	RockShuffle
010	8BeatRock
<b>16Beat</b>	
011	16Beat
012	PopShuffle1
013	PopShuffle2
014	GuitarPop
015	16BtUptempo
016	KoolShuffle
017	JazzRock
018	HipHopLight
<b>Ballad</b>	
019	PianoBallad
020	LoveSong
021	6/8ModernEP
022	6/8SlowRock
023	OrganBallad
024	PopBallad
025	16BeatBallad1
026	16BeatBallad2
<b>Dance</b>	
027	EuroTrance
028	Ibiza
029	HouseMusik
030	SwingHouse
031	TechnoPolis
032	Clubdance
033	ClubLatin
034	Garage1
035	Garage2
036	TechnoParty
037	UKPop
038	HipHopGroove
039	HipShuffle
040	HipHopPop
<b>Disco</b>	
041	70'sDisco1
042	70'sDisco2
043	LatinDisco
044	DiscoPhilly
045	SaturdayNight
046	DiscoChocolate
047	DiscoHands

Style No.	Style Name
<b>Swing&amp;Jazz</b>	
048	BigBandFast
049	BigBandMid
050	BigBandBallad
051	BigBandShfl
052	JazzClub
053	Swing1
054	Swing2
055	Five/Four
056	JazzBallad
057	Dixieland
058	Ragtime
059	AfroCuban
060	Charleston
<b>R&amp;B</b>	
061	Soul
062	DetroitPop1
063	60'sRock&Roll
064	6/8Soul
065	CrocoTwist
066	Rock&Roll
067	DetroitPop2
068	BoogieWoogie
069	ComboBoogie
070	6/8Blues
<b>Country</b>	
071	Country8Beat
072	CountryPop
073	CountrySwing
074	Country2/4
075	CowboyBoogie
076	CountryShuffle
077	Bluegrass
<b>Latin</b>	
078	BrazilianSamba
079	BossaNova
080	PopBossa
081	Tijuana
082	DiscoLatin
083	Mambo
084	Salsa
085	Beguine
086	GypsyRumba
087	RmbFlamenca
088	Rumbalsland
089	Reggae
<b>Ballroom</b>	
090	VienneseWaltz
091	EnglishWaltz
092	Slowfox
093	Foxtrot
094	Quickstep

Style No.	Style Name
095	Tango
096	Pasodoble
097	Samba
098	ChaChaCha
099	Rumba
100	Jive
<b>Traditional</b>	
101	USMarch
102	6/8March
103	GermanMarch
104	PolkaPop
105	OberPolka
106	Tarantella
107	Showtune
108	ChristmasSwing
109	ChristmasWaltz
110	ScottishReel
111	Hawaiian
<b>Waltz</b>	
112	GuitarSerenade
113	SwingWaltz
114	JazzWaltz1
115	JazzWaltz2
116	CountryWaltz
117	OberWalzer
118	Musette
<b>DJ</b>	
119	DJ-HipHop
120	DJ-DanceSwing
121	DJ-House
122	DJ-GarageHouse
123	DJ-PopR&B
<b>Pianist</b>	
124	Stride
125	PianoSwing
126	PianoRag
127	Arpeggio
128	Musical
129	Habanera
130	SlowRock
131	8BeatPianoBallad
132	PianoMarch
133	6/8PianoMarch
134	PianoWaltz
135	PianoBeguine

# Music Database List / Musikdatenbankliste / Liste des bases de données musicales / Lista de la base de datos musical

M.D.B. No.	M.D.B. Name
<b>POP HITS</b>	
001	AlvFever
002	Croco Rk
003	DayPdise
004	EasySday
005	GoMyWay
006	HowDeep!
007	HurryLuv
008	I'm Torn
009	Imagine
010	ISurvive
011	JustCall
012	JustWay
013	NikitTrp
014	ProudGtr
015	SailingSx
016	Sept.Pop
017	SultanSw
018	SweetLrd
019	ThnkMsic
020	TitanicH
021	WatchGrl
022	WhatALoo
023	WhitePle
024	YestDGtr
<b>SWING &amp; JAZZ</b>	
025	Alex Rag
026	Blue Set
027	DayOfW&R
028	HighMoon
029	MistySax
030	MoonLit
031	New York
032	PanthrSw
033	PatrolBr
034	PatrolSx
035	PetiteCl
036	RedRoses
037	SaintMch
038	SatinWd
039	SaxMood
040	SF Heart
041	ShearJz
042	Showbiz
043	SplinkyTb
044	SunnySde
045	TstHoney
046	TwoFoot5
047	WhatsNew
048	Wild Cat
049	WondrLnd
<b>EASY LISTENING</b>	
050	BlackFst
051	CaliBlue
052	CiaoCpri
053	Close2U
054	DAmorStr
055	DolanesM
056	EiCondor
057	Enrttain
058	Frippers
059	LuckySax
060	LuvStory
061	MyPrince
062	OSoleMio
063	PalomaGt
064	PuppetBr
065	Raindrop
066	RedMouln
067	R'ticGtr
068	Schiwago
069	ShadowGt
070	SingRain

M.D.B. No.	M.D.B. Name
071	SmallWld
072	SpkSoft
073	SpnshEy
074	StrangeN
075	TieRibbn
076	TimeGoes
077	WhteXmas
078	WishStar
079	WondrWld
<b>ROMANTIC BALLADS</b>	
080	AdelineB
081	ArgenCry
082	BeautBdy
083	Bl Bayou
084	CatMemry
085	CavaSolo
086	E Weiss
087	ElvGhett
088	Feeling
089	Fly Away
090	Fnl Date
091	GreenSlv
092	GtCncert
093	HrdToSay
094	LonlyPan
095	MBoxDnce
096	Mn Rivr
097	Norw.Flt
098	OnMyMnd
099	OverRbow
100	Red Lady
101	ReleseMe
102	SavingLv
103	Shore Cl
104	SierraMd
105	SilverMn
106	SmokyEye
107	SndOfSil
108	TblWater
109	WhisprSx
<b>ROCK &amp; FUSION</b>	
110	DavAgain
111	JumpRock
112	OyComCha
113	PickUpPc
114	RdRiverR
115	SatsfyGt
116	Sheriff
117	SmokeWtr
118	TwistAgn
119	VenusPop
<b>RHYTHM &amp; BLUES</b>	
120	AmazingG
121	BoogiePf
122	Clock Rk
123	CU later
124	HappyDay
125	JohnnyB
126	MercyBrs
127	RisingSn
128	S Preems
129	SuperStv
130	Yeh Orgn
<b>HIP HOP HOUSE</b>	
131	2 of US
132	B Leave
133	Back St
134	FunkyTwn
135	KillSoft
136	MiamiTrn
137	Nine PM
138	SharpRap
139	SingBack
140	StrandD

M.D.B. No.	M.D.B. Name
<b>LATIN NIGHTS</b>	
141	BambaBrs
142	BambaFlt
143	BeHappy!
144	CopaLola
145	DayNight
146	Ipanema
147	MarinaAc
148	MuchoTrb
149	SmoothLt
150	SunOfLif
151	Sunshine
152	Tico Org
153	TrbWave
<b>COUNTRY &amp; WESTERN</b>	
154	BlownWnd
155	Bonanza
156	BoxerGtr
157	CntryRds
158	GreenGrs
159	Jambala
160	LondonSt
161	LooseEL
162	TopWorld
163	YlwRose
<b>DISCO &amp; PARTY</b>	
164	AlhHwaii
165	Babylon
166	Barbados
167	BirdySyn
168	FestaMex
169	HandsPty
170	LuvTheme
171	ModrnTlk
172	NxtAlice
173	PalomaFl
174	PubPiano
175	Tijuana
176	Why MCA?
<b>BALLROOM</b>	
177	BrazilBr
178	CherryBr
179	CherryOr
180	DanubeWv
181	MantoStr
182	SandmnFx
183	SundyNvr
184	TangoPiz
185	Tea4Two
186	TulipWtz
187	YesSirQk
<b>TRADITIONAL</b>	
188	AlpenTri
189	Balalaik
190	Ceilidh
191	CielPari
192	Cl Polka
193	Comrades
194	Funiculi
195	HappyPlk
196	Herzlin
197	HornPipe
198	JinglBel
199	Kufstein
200	MexiHat
201	MickyFlt
202	NavyAway
203	RlBarrel
204	SnowWtz
205	StarMrch
206	WashPost
207	WdCuttrs
208	XmasWalz

# Drum Kit List / Drum Kit-Liste / Liste des kits de

- „ ” indicates that the drum sound is the same as “Standard Kit 1”.
- Each percussion voice uses one note.
- The MIDI Note # and Note are actually one octave lower than keyboard Note # and Note. For example, in “109: Standard Kit 1”, the “Seq Click H” (Note# 36/Note C1) corresponds to (Note# 24/Note C0).
- Key Off: Keys marked “O” stop sounding the instant they are released.
- Voices with the same Alternate Note Number (\*1 ... 4) cannot be played simultaneously. (They are designed to be played alternately with each other.)

- „ ” bedeutet, dass der Schlagzeugklang gleich „Standard Kit 1” ist.
- Jede Perkussionsnote belegt eine Note.
- Die MIDI-Note # und Note sind in Wirklichkeit eine Octave tiefer als hier aufgeführt. Beispiel: In „109: Standard Kit 1” entspricht die „Seq Click H” (Note# 36/Note C1) der Note (Note# 24/Note C0).
- Key Off: Mit „O” bezeichnete Tasten hören sofort auf zu klingen, sobald sie losgelassen werden.
- Stimmen mit derselben Alternate Note Number (\*1 ... 4) können nicht gleichzeitig gespielt werden. (Diese Stimmen sind dazu gedacht, wechselweise gespielt zu werden.)

C1 C#1  
D1 D#1  
E1  
F1 F#1  
G1 G#1  
A1 A#1  
B1  
C2 C#2  
D2 D#2  
E2  
F2 F#2  
G2 G#2  
A2 A#2  
B2  
C3 C#3  
D3 D#3  
E3  
F3 F#3  
G3 G#3  
A3 A#3  
B3  
C4 C#4  
D4 D#4  
E4  
F4 F#4  
G4 G#4  
A4 A#4  
B4  
C5 C#5  
D5 D#5  
E5  
F5 F#5  
G5 G#5  
A5 A#5  
B5  
C6

Voice No.						109	110	111	112	113	114
MSB/LSB/PC						127/000/000	127/000/001	127/000/008	127/000/016	127/000/024	127/000/025
Keyboard		MIDI		Key Off	Alternate assign	Standard Kit 1	Standard Kit 2	Room Kit	Rock Kit	Electronic Kit	Analog Kit
Note#	Note	Note#	Note			Standard Kit 1	Standard Kit 2	Room Kit	Rock Kit	Electronic Kit	Analog Kit
25	C#	0	13	C#	-1	3	Surdo Mute				
26	D	0	14	D	-1	3	Surdo Open				
27	D#	0	15	D#	-1		Hi Q				
28	E	0	16	E	-1		Whip Slap				
29	F	0	17	F	-1	4	Scratch Push				
30	F#	0	18	F#	-1	4	Scratch Pull				
31	G	0	19	G	-1		Finger Snap				
32	G#	0	20	G#	-1		Click Noise				
33	A	0	21	A	-1		Metronome Click				
34	A#	0	22	A#	-1		Metronome Bell				
35	B	0	23	B	-1		Seq Click L				
36	C	1	24	C	0		Seq Click H				
37	C#	1	25	C#	0		Brush Tap				
38	D	1	26	D	0	O	Brush Swirl				
39	D#	1	27	D#	0		Brush Slap				
40	E	1	28	E	0	O	Brush Tap Swirl			Reverse Cymbal	Reverse Cymbal
41	F	1	29	F	0	O	Snare Roll				
42	F#	1	30	F#	0		Castanet			Hi Q 2	Hi Q 2
43	G	1	31	G	0		Snare H Soft	Snare H Soft 2	SD Rock H	Snare L	SD Rock H
44	G#	1	32	G#	0		Sticks				
45	A	1	33	A	0		Bass Drum Soft			Bass Drum H	Bass Drum H
46	A#	1	34	A#	0		Open Rim Shot	Open Rim Shot 2			
47	B	1	35	B	0		Bass Drum Hard		Bass Drum H	BD Rock	BD Analog L
48	C	2	36	C	1		Bass Drum	Bass Drum 2	BD Rock	BD Gate	BD Analog H
49	C#	2	37	C#	1		Side Stick				Analog Side Stick
50	D	2	38	D	1		Snare M	Snare M 2	SD Room L	SD Rock L	SD Rock L
51	D#	2	39	D#	1		Hand Clap				Analog Snare 2
52	E	2	40	E	1		Snare H Hard	Snare H Hard 2	SD Room H	SD Rock Rim	SD Rock H
53	F	2	41	F	1		Floor Tom L	Room Tom 1	Rock Tom 1	E Tom 1	Analog Tom 1
54	F#	2	42	F#	1	1	Hi-Hat Closed				Analog HH Closed 1
55	G	2	43	G	1		Floor Tom H	Room Tom 2	Rock Tom 2	E Tom 2	Analog Tom 2
56	G#	2	44	G#	1	1	Hi-Hat Pedal				Analog HH Closed 2
57	A	2	45	A	1		Low Tom	Room Tom 3	Rock Tom 3	E Tom 3	Analog Tom 3
58	A#	2	46	A#	1	1	Hi-Hat Open				Analog HH Open
59	B	2	47	B	1		Mid Tom L	Room Tom 4	Rock Tom 4	E Tom 4	Analog Tom 4
60	C	3	48	C	2		Mid Tom H	Room Tom 5	Rock Tom 5	E Tom 5	Analog Tom 5
61	C#	3	49	C#	2		Crash Cymbal 1				Analog Cymbal
62	D	3	50	D	2		High Tom	Room Tom 6	Rock Tom 6	E Tom 6	Analog Tom 6
63	D#	3	51	D#	2		Ride Cymbal 1				
64	E	3	52	E	2		Chinese Cymbal				
65	F	3	53	F	2		Ride Cymbal Cup				
66	F#	3	54	F#	2		Tambourine				
67	G	3	55	G	2		Splash Cymbal				
68	G#	3	56	G#	2		Cowbell				Analog Cowbell
69	A	3	57	A	2		Crash Cymbal 2				
70	A#	3	58	A#	2		Vibraslap				
71	B	3	59	B	2		Ride Cymbal 2				
72	C	4	60	C	3		Bongo H				
73	C#	4	61	C#	3		Bongo L				
74	D	4	62	D	3		Conga H Mute				Analog Conga H
75	D#	4	63	D#	3		Conga H Open				Analog Conga M
76	E	4	64	E	3		Conga L				Analog Conga L
77	F	4	65	F	3		Timbale H				
78	F#	4	66	F#	3		Timbale L				
79	G	4	67	G	3		Agogo H				
80	G#	4	68	G#	3		Agogo L				
81	A	4	69	A	3		Cabasa				
82	A#	4	70	A#	3		Maracas				Analog Maracas
83	B	4	71	B	3	O	Samba Whistle H				
84	C	5	72	C	4	O	Samba Whistle L				
85	C#	5	73	C#	4		Guiro Short				
86	D	5	74	D	4	O	Guiro Long				
87	D#	5	75	D#	4		Claves				Analog Claves
88	E	5	76	E	4		Wood Block H				
89	F	5	77	F	4		Wood Block L				
90	F#	5	78	F#	4		Cuica Mute			Scratch Push	Scratch Push
91	G	5	79	G	4		Cuica Open			Scratch Pull	Scratch Pull
92	G#	5	80	G#	4	2	Triangle Mute				
93	A	5	81	A	4	2	Triangle Open				
94	A#	5	82	A#	4		Shaker				
95	B	5	83	B	4		Jingle Bell				
96	C	6	84	C	5		Bell Tree				
97	C#	6	85	C#	5						
98	D	6	86	D	5						
99	D#	6	87	D#	5						
100	E	6	88	E	5						
101	F	6	89	F	5						
102	F#	6	90	F#	5						
103	G	6	91	G	5						

# percussion / Lista de juegos de batería

- « **■** » indique que les sonorités de percussion sont identiques à celles de « Standard Kit 1 ».
- Chaque voix de percussion utilise une note unique.
- Le numéro de note MIDI (Note #) et la note MIDI se situent en réalité à une octave inférieure à celle qui est indiquée dans la liste. Par exemple, dans « 109 : Standard Kit 1 », « Seq Click H » (Note# 36/Note C1) correspond à (Note# 24/Note C0).
- Key Off : pour les touches signalées par « O », l'émission de sons s'arrête instantanément aussitôt que les touches sont relâchées.
- Les voix portant un même numéro de note alternative (\*1 ... 4) ne peuvent pas être jouées simultanément. (Elles sont en effet conçues pour être interprétées en alternance).
- « **■** » indica que el sonido de batería es el mismo que el "Standard Kit 1".
- Cada sonido de percusión utiliza una nota.
- La nota MIDI # y la nota son en realidad una octava menos de lo que aparece en la lista. Por ejemplo, en "109: Standard Kit 1", el "Seq Click H" (Nota# 36/Nota C1) corresponde a (Nota# 24/Nota C0).
- Tecla desactivada: las teclas marcadas con "O" dejan de sonar en el momento en que se sueltan.
- Los sonidos con el mismo número alterno de nota (\*1 ... 4) no pueden tocarse simultáneamente. (Están diseñados para tocarse alternativamente el uno con el otro.)

		Voice No.						109	115	116	117	118	119	120
		MSB/LSB/PC						127/000/000	127/000/027	127/000/032	127/000/040	127/000/048	126/000/000	126/000/001
		Keyboard		MIDI		Key Off	Alternate assign	Standard Kit 1	Dance Kit	Jazz Kit	Brush Kit	Symphony Kit	SFX Kit 1	SFX Kit 2
		Notes#	Note	Notes#	Note			Notes#	Note	Notes#	Note	Notes#	Note	Notes#
		25	C# 0	13	C# -1		3	Surdo Mute						
		26	D 0	14	D -1		3	Surdo Open						
		27	D# 0	15	D# -1			Hi Q						
		28	E 0	16	E -1			Whip Slap						
		29	F 0	17	F -1		4	Scratch Push						
		30	F# 0	18	F# -1		4	Scratch Pull						
		31	G 0	19	G -1			Finger Snap						
		32	G# 0	20	G# -1			Click Noise						
		33	A 0	21	A -1			Metronome Click						
		34	A# 0	22	A# -1			Metronome Bell						
		35	B 0	23	B -1			Seq Click L						
		36	C 1	24	C 0			Seq Click H						
C1	C#1	37	C# 1	25	C# 0			Brush Tap						
D1	D#1	38	D 1	26	D 0	O		Brush Swirl						
E1	E#1	39	D# 1	27	D# 0			Brush Slap						
F1	F#1	40	E 1	28	E 0	O		Brush Tap Swirl	Reverse Cymbal					
G1	G#1	41	F 1	29	F 0	O		Snare Roll						
A1	A#1	42	F# 1	30	F# 0			Castanet	Hi Q 2					
B1	B#1	43	G 1	31	G 0			Snare H Soft	AnSD Snappy	SD Jazz H Light	Brush Slap L			
C2	C#2	44	G# 1	32	G# 0			Sticks						
D2	D#2	45	A 1	33	A 0			Bass Drum Soft	AnBD Dance-1			Bass Drum L		
E2	E#2	46	A# 1	34	A# 0			Open Rim Shot	AnSD OpenRim					
F2	F#2	47	B 1	35	B 0			Bass Drum Hard	AnBD Dance-2			Gran Cassa		
G2	G#2	48	C 2	36	C 1			Bass Drum	AnBD Dance-3	BD Jazz	BD Jazz	Gran Cassa Mute	Cutting Noise	Phone Call
A2	A#2	49	C# 2	37	C# 1			Side Stick	Analog Side Stick				Cutting Noise 2	Door Squeak
B2	B#2	50	D 2	38	D 1			Snare M	AnSD Q	SD Jazz L	Brush Slap	Marching Sn M		Door Slam
C3	C#3	51	D# 2	39	D# 1			Hand Clap					String Slap	Scratch Cut
D3	D#3	52	E 2	40	E 1			Snare H Hard	AnSD Ana+Acoustic	SD Jazz M	Brush Tap	Marching Sn H		Scratch
E3	E#3	53	F 2	41	F 1			Floor Tom L	Analog Tom 1	Jazz Tom 1	Brush Tom 1	Jazz Tom 1		Wind Chime
F3	F#3	54	F# 2	42	F# 1	1		Hi-Hat Closed	Analog HH Closed 3					Telephone Ring 2
G3	G#3	55	G 2	43	G 1			Floor Tom H	Analog Tom 2	Jazz Tom 2	Brush Tom 2	Jazz Tom 2		
A3	A#3	56	G# 2	44	G# 1	1		Hi-Hat Pedal	Analog HH Closed 4					
B3	B#3	57	A 2	45	A 1			Low Tom	Analog Tom 3	Jazz Tom 3	Brush Tom 3	Jazz Tom 3		
C4	C#4	58	A# 2	46	A# 1	1		Hi-Hat Open	Analog HH Open 2					
D4	D#4	59	B 2	47	B 1			Mid Tom L	Analog Tom 4	Jazz Tom 4	Brush Tom 4	Jazz Tom 4		
E4	E#4	60	C 3	48	C 2			Mid Tom H	Analog Tom 5	Jazz Tom 5	Brush Tom 5	Jazz Tom 5		
F4	F#4	61	C# 3	49	C# 2			Crash Cymbal 1	Analog Cymbal			Hand Cym. L		
G4	G#4	62	D 3	50	D 2			High Tom	Analog Tom 6	Jazz Tom 6	Brush Tom 6	Jazz Tom 6		
A4	A#4	63	D# 3	51	D# 2			Ride Cymbal 1				Hand Cym.Short L		
B4	B#4	64	E 3	52	E 2			Chinese Cymbal					Flute Key Click	Car Engine Ignition
C5	C#5	65	F 3	53	F 2			Ride Cymbal Cup						Car Tires Squeal
D5	D#5	66	F# 3	54	F# 2			Tambourine						Car Passing
E5	E#5	67	G 3	55	G 2			Splash Cymbal						Car Crash
F5	F#5	68	G# 3	56	G# 2			Cowbell	Analog Cowbell					Siren
G5	G#5	69	A 3	57	A 2			Crash Cymbal 2				Hand Cym. H		Train
A5	A#5	70	A# 3	58	A# 2			Vibraslap						Jet Plane
B5	B#5	71	B 3	59	B 2			Ride Cymbal 2				Hand Cym.Short H		Starship
C6	C#6	72	C 4	60	C 3			Bongo H						Burst
D6	D#6	73	C# 4	61	C# 3			Bongo L						Roller Coaster
E6	E#6	74	D 4	62	D 3			Conga H Mute	Analog Conga H					Submarine
F6	F#6	75	D# 4	63	D# 3			Conga H Open	Analog Conga M					
G6	G#6	76	E 4	64	E 3			Conga L	Analog Conga L					
A6	A#6	77	F 4	65	F 3			Timbale H						
B6	B#6	78	F# 4	66	F# 3			Timbale L						
C7	C#7	79	G 4	67	G 3			Agogo H						
D7	D#7	80	G# 4	68	G# 3			Agogo L						
E7	E#7	81	A 4	69	A 3			Cabasa					Shower	Laugh
F7	F#7	82	A# 4	70	A# 3			Maracas	Analog Maracas				Thunder	Scream
G7	G#7	83	B 4	71	B 3	O		Samba Whistle H					Wind	Punch
A7	A#7	84	C 5	72	C 4	O		Samba Whistle L					Stream	Heartbeat
B7	B#7	85	C# 5	73	C# 4			Guiro Short					Bubble	FootSteps
C8	C#8	86	D 5	74	D 4	O		Guiro Long					Feed	
D8	D#8	87	D# 5	75	D# 4			Claves	Analog Claves					
E8	E#8	88	E 5	76	E 4			Wood Block H						
F8	F#8	89	F 5	77	F 4			Wood Block L						
G8	G#8	90	F# 5	78	F# 4			Cuica Mute	Scratch Push					
A8	A#8	91	G 5	79	G 4			Cuica Open	Scratch Pull					
B8	B#8	92	G# 5	80	G# 4		2	Triangle Mute						
C9	C#9	93	A 5	81	A 4		2	Triangle Open						
D9	D#9	94	A# 5	82	A# 4			Shaker						
E9	E#9	95	B 5	83	B 4			Jingle Bell						
F9	F#9	96	C 6	84	C 5			Bell Tree					Dog	Machine Gun
G9	G#9	97	C# 6	85	C# 5								Horse	Laser Gun
A9	A#9	98	D 6	86	D 5								Bird Tweet 2	Explosion
B9	B#9	99	D# 6	87	D# 5									Firework
C10	C#10	100	E 6	88	E 5									
D10	D#10	101	F 6	89	F 5									
E10	E#10	102	F# 6	90	F# 5								Ghost	
F10	F#10	103	G 6	91	G 5								Maou	



# Feuille d'implémentation MIDI / Gráfica de implementación MIDI

## NOTE:

- \*1 By default (factory settings) the PSR-292 ordinarily functions as a 16-channel multi-timbral tone generator, and incoming data does not affect the panel voices or panel settings. However, the MIDI messages listed below do affect the panel voices, auto accompaniment, and songs.
- MIDI Master Tuning
  - System exclusive messages for changing the Reverb Type, Chorus Type, and DSP Type.
- \*2 Messages for these control change numbers cannot be transmitted from the PSR-292 itself. However, they may be transmitted when playing the accompaniment, song or using the Harmony effect.
- \*3 Exclusive
- <GM System ON> F0H, 7EH, 7FH, 09H, 01H, F7H
- This message automatically restores all default settings for the instrument, with the exception of MIDI Master Tuning.
- <MIDI Master Volume> F0H, 7FH, 7FH, 04H, 01H, II, mm, F7H
- This message allows the volume of all channels to be changed simultaneously (Universal System Exclusive).
  - The values of "mm" is used for MIDI Master Tuning. (Values for "II" are ignored.)
- <MIDI Master Tuning> F0H, 43H, 1nH, 27H, 30H, 00H, 00H, mm, II, cc, F7H
- This message simultaneously changes the tuning value of all channels.
  - The values of "mm" and "II" are used for MIDI Master Tuning.
  - The default value of "mm" and "II" are 08H and 00H, respectively. Any values can be used for "n" and "cc."
- <Reverb Type> F0H, 43H, 1nH, 4CH, 02H, 01H, 00H, mmH, IIH, F7H
- mm : Reverb Type MSB
  - II : Reverb Type LSB
- Refer to the Effect Map (page 97) for details.
- <Chorus Type> F0H, 43H, 1nH, 4CH, 02H, 01H, 20H, mmH, IIH, F7H
- mm : Chorus Type MSB
  - II : Chorus Type LSB
- Refer to the Effect Map (page 97) for details.
- <DSP Type> F0H, 43H, 1nH, 4CH, 02H, 01H, 40H, mmH, IIH, F7H
- mm : DSP Type MSB
  - II : DSP Type LSB
- Refer to the Effect Map (page 97) for details.
- <DRY Level> F0H, 43H, 1nH, 4CH, 08H, 0mH, 11H, IIH, F7H
- II : Dry Level
  - 0m : Channel Number
- <XG Parameter Change> F0H, 43H, 1nH, 4CH, hh, mm, II, dd, F7H
- hh mm II : address
  - dd : data
- <XG Bulk Dump> F0H, 43H, 0nH, 4CH, aa, bb, hh, mm, II, dd, cc, F7H
- 0n : Device Number n=0 (send), 0 - f (receive)
  - aa bb : Byte Count (aa << 7) + bb
  - hh mm II : address
  - dd : data
- <Sequence Recording Bulk Dump>
- F0H, 43H, 73H, 7FH, mID, 06H, 0AH, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : model ID PSR-292=2BH
  - 06H : Bulk ID
  - 0AH : Bulk No.
  - aa : Byte Count MSB
  - bb : Byte Count LSB
  - cc : amount of valid MSB data
  - dd : amount of valid LSB data
  - hh mm II : address
  - bulk data : Sequence data (1byte, 2byte...7byte, MSB data)
  - sum : Check Sum = 0-sum (bulk data)
- <One Touch Setting Bulk Dump>
- F0H, 43H, 73H, 7FH, mID, 06H, 09H, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : model ID PSR-292=2BH
  - 06H : Bulk ID
  - 09H : Bulk No.
  - aa : Byte Count MSB
  - bb : Byte Count LSB
  - cc : amount of valid MSB data
  - dd : amount of valid LSB data
  - hh mm II : address
  - bulk data : Sequence data (low 4bit, high 4 bit...low 4bit, high 4 bit)
  - sum : Check Sum = 0-sum (bulk data)
- \*4 When the accompaniment is started, an FAH message is transmitted. When accompaniment is stopped, an FCH message is transmitted. When the clock is set to External, both FAH (accompaniment start) and FCH (accompaniment stop) are recognized.
- \*5 Local ON/OFF
- <Local ON> Bn, 7A, 7F
- <Local OFF> Bn, 7A, 00
- Value for "n" is ignored.

## HINWEIS:

- \*1 Im Standardbetrieb (Werksvorgaben) funktioniert das PSR-292 gewöhnlich als multi-timbraler 16Kanal- Klanggenerator, und eingehende Daten haben keinen Einfluß auf die Bedienfeld-Stimmen und die Bedienfeld-Einstellungen. Die im folgenden aufgeführten Befehle verändern jedoch die Bedienfeld-Stimmen, die automatische Begleitung und die Songs:
- MIDI Master Tuning
  - Systemexklusive Befehle zum Ändern von Reverb Type, Chorus Type und DSP Type
- \*2 Befehle für diese Steuerbefehlsnummern können vom PSR-292 selbst nicht gesendet werden. Sie können jedoch gesendet werden, wenn die Begleitung oder Song gespielt oder der Harmonie-Effekt verwendet wird.
- \*3 Exclusive
- <GM System ON> (GM-System AN) F0H, 7EH, 7FH, 09H, 01H, F7H
- Durch diesen Befehl werden automatisch alle Werksvorgaben des Instruments, mit Ausnahme von MIDI Master Tuning, wieder hergestellt.
- <MIDI Master Volume> (MIDI-Gesamtlautstärke)
- F0H, 7FH, 7FH, 04H, 01H, II, mm, F7H
- Mit diesem Befehl kann die Lautstärke aller Kanäle gleichzeitig geändert werden (Universal System Exclusive).
  - Die Werte für „mm“ werden für MIDI Master Tuning verwendet. (Werte für „II“ werden ignoriert.)
- <MIDI Master Tuning> (MIDI-Grundstimmung)
- F0H, 43H, 1nH, 27H, 30H, 00H, 00H, mm, II, cc, F7H
- Durch diesen Befehl wird der Stimmungswert für alle Kanäle gleichzeitig geändert.
  - Die Werte von „mm“ und „II“ werden für MIDI Master Tuning verwendet.
  - Der Standardwert beträgt für „mm“ 08H und für „II“ 00H. Für „n“ und „cc“ können beliebige Werte verwendet werden.
- <Reverb Type> (Reverb-Typ)
- F0H, 43H, 1nH, 4CH, 02H, 01H, 00H, mmH, IIH, F7H
- mm : Reverb Type MSB
  - II : Reverb Type LSB
- Weitere Einzelheiten hierzu finden Sie in der Effekt-Zuordnung (Seite 97).
- <Chorus Type> (Chorus-Typ)
- F0H, 43H, 1nH, 4CH, 02H, 01H, 20H, mmH, IIH, F7H
- mm : Chorus Type MSB
  - II : Chorus Type LSB
- Weitere Einzelheiten hierzu finden Sie in der Effekt-Zuordnung (Seite 97).
- <DSP Type> (DSP-Typ)
- F0H, 43H, 1nH, 4CH, 02H, 01H, 40H, mmH, IIH, F7H
- mm : DSP Type MSB
  - II : DSP Type LSB
- Weitere Einzelheiten hierzu finden Sie in der Effekt-Zuordnung (Seite 97).
- <DRY Level> (DRY-Pegel)
- F0H, 43H, 1nH, 4CH, 08H, 0mH, 11H, IIH, F7H
- II : Dry Level
  - 0m : Channel Number
- <XG Parameter Change> F0H, 43H, 1nH, 4CH, hh, mm, II, dd, F7H
- hh mm II : Adresse
  - dd : Daten
- <XG Bulk Dump> F0H, 43H, 0nH, 4CH, aa, bb, hh, mm, II, dd, cc, F7H
- 0n : Device Number n=0 (Übertragung), 0 - f (Empfang)
  - aa bb : Byte Count (aa << 7) + bb
  - hh mm II : Adresse
  - dd : Daten
- <Sequence Recording Bulk Dump>
- F0H, 43H, 73H, 7FH, mID, 06H, 0AH, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : Model ID PSR-292=2BH
  - 06H : Bulk ID
  - 0AH : Bulk Nr.
  - aa : Byte Count MSB
  - bb : Byte Count LSB
  - cc : Anzahl gültiger MSB-Daten
  - dd : Anzahl gültiger LSB-Daten
  - hh mm II : Adresse
  - bulk data : Sequenzdaten (1byte, 2byte...7byte, MSB-Daten)
  - sum : Prüfsumme = 0-sum (Bulk-Daten)
- <One Touch Setting Bulk Dump>
- F0H, 43H, 73H, 7FH, mID, 06H, 09H, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : Model ID PSR-292=2BH
  - 06H : Bulk ID
  - 09H : Bulk Nr.
  - aa : Byte Count MSB
  - bb : Byte Count LSB
  - cc : Anzahl gültiger MSB-Daten
  - dd : Anzahl gültiger LSB-Daten
  - hh mm II : Adresse
  - bulk data : Sequenzdaten (low 4bit, high 4 bit...low 4bit, high 4 bit)
  - sum : Prüfsumme = 0-sum (Bulk-Daten)
- \*4 Beim Starten der Begleitung wird ein Befehl FAH gesendet. Beim Stoppen der Begleitung wird ein Befehl FCH gesendet. Wurde für die Taktsteuerung „External“ festgelegt, werden sowohl der Befehl FAH (Start der Begleitung) als auch der Befehl FCH (Stopp der Begleitung) erkannt.
- \*5 Local ON/OFF
- <Local ON> Bn, 7A, 7F
- <Local OFF> Bn, 7A, 00
- Der Wert für „n“ wird ignoriert.

## REMARQUE :

- \*1 Le PSR-292 fonctionne par défaut (selon les réglages d'usine) comme un générateur de son multi-timbre à 16 canaux. De ce fait, la réception de données n'affecte ni les voix de panneau ni les réglages de panneau. Cependant, les messages MIDI figurant dans la liste ci-dessous ont des effets sur les voix de panneau, l'accompagnement automatique et les morceaux..
- MIDI Master Tuning (Accord général MIDI)
  - Messages exclusifs au système permettant de modifier respectivement les types d'effets Reverb, Chorus et DSP.
- \*2 Les messages relatifs à ces numéros de modification de commande ne peuvent pas être transmis à partir du PSR-292. Toutefois, il est possible de les émettre pendant la reproduction de l'accompagnement ou le morceau ou en utilisant l'effet Harmony.
- \*3 Exclusif
- <GM System ON> F0H, 7EH, 7FH, 09H, 01H, F7H
- Ce message rétablit automatiquement tous les réglages par défaut de l'instrument, à l'exception de la commande MIDI Master Tuning (Accord général MIDI).
- <MIDI Master Volume> (Volume général MIDI)  
F0H, 7FH, 7FH, 04H, 01H, II, mm, F7H
- Ce message autorise la modification simultanée du volume de tous les canaux (Universal System Exclusive).
  - Les valeurs « mm » sont utilisées pour MIDI Master Tuning. (Les valeurs « ll » sont ignorées).
- <MIDI Master Tuning> (Accord général MIDI)  
F0H, 43H, 1nH, 27H, 30H, 00H, 00H, mm, II, cc, F7H
- Ce message modifie simultanément la valeur de l'accord de tous les canaux.
  - Les valeurs « mm » et « ll » sont utilisées pour MIDI Master Tuning.
  - Les valeurs par défaut de « mm » et « ll » sont respectivement 08H et 00H. Toutes les valeurs peuvent être utilisées pour « n » et « cc ».
- <Reverb Type> (type de réverbération)  
F0H, 43H, 1nH, 4CH, 02H, 01H, 00H, mmH, IIH, F7H
- mm : Reverb Type MSB
  - ll : Reverb Type LSB
- Reportez-vous à la page (97) pour les détails.
- <Chorus Type> F0H, 43H, 1nH, 4CH, 02H, 01H, 20H, mmH, IIH, F7H
- mm : Chorus Type MSB
  - ll : Chorus Type LSB
- Reportez-vous à la page (97) pour les détails.
- <DSP Type> F0H, 43H, 1nH, 4CH, 02H, 01H, 40H, mmH, IIH, F7H
- mm : DSP Type MSB
  - ll : DSP Type LSB
- Reportez-vous à la page (97) pour les détails.
- <DRY Level> F0H, 43H, 1nH, 4CH, 08H, 0mH, 11H, IIH, F7H
- ll : Dry Level
  - 0m : Channel Number (Numéro de canal)
- <XG Parametter Change> (Changement de paramètre XG)  
F0H, 43H, 1nH, 4CH, hh, mm, II, dd, F7H
- hh mm ll : adresse
  - dd : données
- <XG Bulk Dump> (Transfert de blocs de données XG)  
F0H, 43H, 0nH, 4CH, aa, bb, hh, mm, II, dd, cc, F7H
- 0n : Numéro du périphérique n=0 (envoi), 0 - f (réception)
  - aa bb : Nombre d'octets (aa << 7) + bb
  - hh mm ll : adresse
  - dd : données
- <Sequence Recording Bulk Dump>  
(Transfert de blocs d'enregistrements de séquence)  
F0H, 43H, 73H, 7FH, mID, 06H, 0AH, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : ID du modèle PSR-292=2BH
  - 06H : ID du bloc
  - 0AH : N° du bloc
  - aa : Nombre d'octets MSB
  - bb : Nombre d'octets LSB
  - cc : nombre de données MSB valides
  - dd : nombre de données LSB valides
  - hh mm ll : adresse
  - bulk data : données de séquence (1byte, 2byte...7byte, MSB data)
  - sum : Total = 0-sum (bloc de données)
- <One Touch Setting Bulk Dump>  
(Transfert de blocs de présélections immédiates)  
F0H, 43H, 73H, 7FH, mID, 06H, 09H, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : ID du modèle PSR-292=2BH
  - 06H : ID du bloc
  - 09H : N° du bloc
  - aa : Nombre d'octets MSB
  - bb : Nombre d'octets LSB
  - cc : nombre de données MSB valides
  - dd : nombre de données LSB valides
  - hh mm ll : adresse
  - bulk data : données de séquence (low 4bit, high 4 bit...low 4bit, high 4 bit)
  - sum : Total = 0-sum (bloc de données)
- \*4 Lors du lancement de l'accompagnement, un message FAH est transmis. À l'arrêt de l'accompagnement, c'est un message FCH qui est transmis. Quand l'horloge est réglée sur External (externe), les deux types de messages FAH (au lancement de l'accompagnement) et FCH (à l'arrêt de l'accompagnement) sont reconnus.
- \*5 Local ON/OFF  
<Local ON> Bn, 7A, 7F  
<Local OFF> Bn, 7A, 00  
La valeur « n » n'est pas connue.

## NOTA:

- \*1 Con los ajustes iniciales (ajustes de fabricación), el PSR-292 funciona normalmente como un generador de tonos de varios timbres de 16 canales, y los datos de entrada no afectan a los sonidos ni ajustes del panel. En cualquier caso, los mensajes MIDI enumerados a continuación sí afectan a los sonidos del panel, al acompañamiento automático y a las canciones.
- Afinación principal MIDI
  - Mensajes exclusivos del sistema para cambiar el tipo de reverberación, el tipo de coro y el tipo de DSP.
- \*2 Los mensajes para estos números de cambio de control no pueden transmitirse desde el mismo PSR-292. En cualquier caso, podrían transmitirse al tocar el acompañamiento o la canción, o al usar el efecto de armonía.
- \*3 Exclusivo
- <GM System ON> (Sistema GM conectado) F0H, 7EH, 7FH, 09H, 01H, F7H
- Este mensaje restituye automáticamente todos los ajustes iniciales para el instrumento, a excepción de la afinación principal MIDI.
- <MIDI Master Volume> (Volumen principal MIDI)  
F0H, 7FH, 7FH, 04H, 01H, II, mm, F7H
- Este mensaje permite cambiar simultáneamente el volumen de todos los canales (Exclusivo del Sistema Universal).
  - Los valores de "mm" se usan para la afinación principal MIDI. (Los valores para "ll" se ignoran.)
- <MIDI Master Volume> (Afinación principal MIDI)  
F0H, 43H, 1nH, 27H, 30H, 00H, 00H, mm, II, cc, F7H
- Este mensaje cambia simultáneamente el valor de afinación de todos los canales.
  - Los valores de "mm" y "ll" se usan para la afinación principal MIDI.
  - El valor inicial de "mm" y "ll" es de 08H y 00H respectivamente. Puede usarse cualquier valor para "n" y "cc".
- <Reverb Type> (Tipo de reverberación)  
F0H, 43H, 1nH, 4CH, 02H, 01H, 00H, mmH, IIH, F7H
- mm: Reverberación tipo MSB
  - ll: Reverberación tipo LSB
- Para más detalles, consulte la lista de efectos (página 97).
- <Chorus Type> (Tipo de coro)  
F0H, 43H, 1nH, 4CH, 02H, 01H, 20H, mmH, IIH, F7H
- mm: Coro tipo MSB
  - ll: Coro tipo LSB
- Para más detalles, consulte la lista de efectos (página 97).
- <DSP Type> (Tipo de DSP)  
F0H, 43H, 1nH, 4CH, 02H, 01H, 40H, mmH, IIH, F7H
- mm: Tipo de DSP MSB
  - ll: Tipo de DSP LSB
- Para más detalles, consulte la lista de efectos (página 97).
- <Dry Level> (Nivel DRY) F0H, 43H, 1nH, 4CH, 08H, 0mH, 11H, IIH, F7H
- ll: Nivel Dry
  - 0m: Número de canal
- <XG Parametter Change> (Cambio de parámetros XG)  
F0H, 43H, 1nH, 4CH, hh, mm, II, dd, F7H
- hh mm ll : dirección
  - dd : datos
- <XG Bulk Dump> (Transmisión de datos XG por lotes)  
F0H, 43H, 0nH, 4CH, aa, bb, hh, mm, II, dd, cc, F7H
- 0n : número de dispositivo n=0 (enviar), 0 - f (recibir)
  - aa bb : número de bytes (aa << 7) + bb
  - hh mm ll : dirección
  - dd : datos
- <Sequence Recording Bulk Dump>  
(Transmisión de registro de secuencias por lotes)  
F0H, 43H, 73H, 7FH, mID, 06H, 0AH, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : ID modelo PSR-292=2BH
  - 06H : ID lotes
  - 0AH : número lotes
  - aa : número de bytes MSB
  - bb : número de bytes LSB
  - cc : cantidad de datos MSB no válidos
  - dd : cantidad de datos LSB no válidos
  - hh mm ll : dirección
  - bulk data : datos de secuencia (1byte, 2byte...7byte, datos MSB)
  - sum : suma de verificación = 0-sum (datos por lotes)
- <One Touch Setting Bulk Dump>  
(Transmisión de ajuste de una pulsación por lotes)  
F0H, 43H, 73H, 7FH, mID, 06H, 09H, aa, bb, cc, dd, hh, mm, II, bulk data, sum, F7H
- mID : ID modelo PSR-292=2BH
  - 06H : ID lotes
  - 09H : número lotes
  - aa : número de bytes MSB
  - bb : número de bytes LSB
  - cc : cantidad de datos MSB no válidos
  - dd : cantidad de datos LSB no válidos
  - hh mm ll : dirección
  - bulk data : datos de secuencia (4 bit bajo, 4 bit alto...4 bit bajo, 4 bit alto)
  - sum : suma de verificación = 0-sum (datos por lotes)
- \*4 Cuando se inicia el acompañamiento se transmite un mensaje FAH. Cuando se detiene el acompañamiento se transmite un mensaje FCH. Cuando el reloj se ajusta al modo externo, se reconocen tanto el FAH (inicio de acompañamiento) como el FCH (detención de acompañamiento).
- \*5 Local ON/OFF  
<Local ON> Bn, 7A, 7F  
<Local OFF> Bn, 7A, 00  
El valor para "n" se ignora.



## ■ Effect map / Effekt-Zuordnung / Liste des effets / Lista de efectos

- \* If the received value does not contain an effect type in the TYPE LSB, the LSB will be directed to TYPE 0.
- \* The numbers in parentheses in front of the Effect Type names correspond to the number indicated in the display..
- \* By using an external sequencer, which is capable of editing and transmitting the system exclusive messages and parameter changes, you can select the Reverb, Chorus and DSP effect types which are not accessible from the PSR-292 panel itself. When one of the effects is selected by the external sequencer, " - " will be shown on the display.
- \* Wenn der empfangene Wert in TYPE LSB keinen Effekt-Typ enthält, wird für den LSB-Wert TYPE 0 angenommen.
- \* Die Zahlen in Klammern vor den Effektypnamen entsprechen der im Display angezeigten Zahl.
- \* Bei Verwendung eines externen Sequenzers, mit dem systemexklusive Daten und Parameteränderungen spezifiziert und gesendet werden können, lassen sich die Reverb-, Chorus- und Effekt-Typen wählen, die über das Bedienfeld des PSR-292 nicht wählbar sind. Wenn ein solcher Effekt per Sequenzer aufgerufen wurde, wird "-" auf dem Display angezeigt.
- \* Si les valeurs des effets ne contient pas un type d'effet dans TYPE LSB, le LSB sera orienté vers TYPE 0.
- \* Les chiffres entre parenthèses situés en regard des noms de types d'effets correspondent au numéro apparaissant dans l'affichage.
- \* En se servant d'un séquenceur extérieur capable d'éditer et de transmettre les messages exclusifs de système et les modifications de paramètre de réglage, vous pouvez sélectionner le type d'effet Reverb, Chorus et DSP qui ne sont pas accessibles à partir de la console du PSR-292. Le signe " - " apparaît dans l'afficheur dès qu'un des effets est sélectionné par le séquenceur extérieur.
- \* Si el valor recibido no contiene un tipo de efecto en TYPE LSB, LSB se dirigirá a TYPE 0.
- \* Los números entre paréntesis delante de los nombres del tipo de efecto corresponden al número indicado en la pantalla.
- \* Empleando un secuenciador exterior, que sea capaz de editar y transmitir los mensajes exclusivos del sistema y los cambios de parámetros, podrá seleccionar los tipos de efectos de reverberación, coros, y DSP que no son accesibles desde el mismo panel del PSR-292. Cuando se selecciona uno de los efectos con el secuenciador exterior, se indicará "-" en el visualizador.

### ● REVERB

TYPE MSB	TYPE LSB									
	00	01	02	08	16	17	18	19	20	
000	No Effect									
001	(1)Hall1					(2)Hall2				
002	Room					(3)Room1		(4)Room2		
003	Stage				(5)Stage1	(6)Stage2				
004	Plate				(7)Plate1	(8)Plate2				
005...127	No Effect									

### ● CHORUS

TYPE MSB	TYPE LSB									
	00	01	02	08	16	17	18	19	20	
000...064	No Effect									
065	Chorus		Chorus2							
066	Celeste					Chorus1				
067	Flanger			Flanger1		Flanger2				
068...127	No Effect									

### ● DSP

TYPE MSB	TYPE LSB									
	00	01	02	08	16	17	18	19	20	
000	No Effect									
001	(1)Hall1					(2)Hall2				
002	Room					(3)Room1		(4)Room2		
003	Stage				(5)Stage1	(6)Stage2				
004	Plate				(7)Plate1	(8)Plate2				
005	Delay L,C,R				(26)Delay L,C,R					
006	(27)Delay L,R									
007	(28)Echo									
008	(29)Cross Delay									
009	(9)Early Reflection1	(10)Early Reflection2								
010	(11)Gate Reverb									
011	(12)Reverse Gate									
012...019	No Effect									
020	(30)Karaoke									
021...064	No Effect									
065	Chorus		(14)Chorus2							
066	Celeste					(13)Chorus1				
067	Flanger			(15)Flanger1		(16)Flanger2				
068	Symphonic				(17)Symphonic					
069	Rotary Speaker				(19)Rotary Speaker1					
070	Tremolo				(21)Tremolo1					
071	Auto Pan				(24)Auto Pan		(20)Rotary Speaker2	(22)Tremolo2	(23)Guitar Tremolo	
072	(18)Phaser									
073	Distortion									
074	(33)Overdrive									
075	(34)Amp Simulation				(31)Distortion Hard	(32)Distortion Soft				
076	(36)3Band EQ					(35)EQ Telephone				
077	(37)2Band EQ									
078	Auto Wah				(25)Auto Wah					
079...127	No Effect									

## Keyboards

- 61 standard-size keys (C1 - C6), with Touch Response.

## Display

- Large multi-function LCD display (backlit)

## Setup

- STANDBY/ON
- MASTER VOLUME : MIN - MAX

## Panel Controls

- SONG, VOICE, STYLE, M.D.B., DICTIONARY, DJ, PC, LESSON L, R, METRONOME, PORTABLE GRAND, DEMO, FUNCTION(TRANSPOSE), TOUCH, HARMONY, DUAL, SPLIT, TEMPO/TAP, ONE TOUCH SETTING, [0]-[9], [+](YES), [-](NO), CATEGORY, SELECT, Dial

## Voice

- 108 panel voices + 12 drum kits + 480 XG voices + 5 DJ voices
- Polyphony : 32
- DUAL
- SPLIT

## Style

- 135 styles
- Style Control : ACMP ON/OFF, SYNC STOP, SYNC START, START/STOP, INTRO ENDING, MAIN/AUTO FILL
- Fingering : Multi fingering
- Style Volume

## Music Database

- 208

## Yamaha Educational Suite

- Dictionary
- Lesson 1-4

## One Touch Setting

- Preset A and B (for each style)
- Memory

## Function

- Transpose, Tuning, Split Point, Touch Sensitivity, Main Voice – Volume; Octave; Pan; Reverb Send Level; Chorus Send Level; DSP Send Level, Dual Voice – Voice; Volume; Octave; Pan; Reverb Send Level; Chorus Send Level; DSP Send Level, Split Voice – Voice; Volume; Octave; Pan; Reverb Send Level; Chorus Send Level; DSP Send Level, Reverb Type, Chorus Type, DSP Type, Harmony Type, Harmony Volume, Local On/Off, External Clock, Bulk Data Send, Initial Setup Send, Keyboard Out, Style Out, Song Out, Style Volume, Song Volume, Metronome Volume, Time Signature, Lesson Track (R), Lesson Track (L), Grade On/Off, Demo and DJ Cancel

## Effects

- Reverb : 8 types
- Chorus : 4 types
- DSP : 38 types
- Harmony : 26 types

## Song

- 100 Songs + 5 User Songs + Flash Memory
- Song Clear, Track Clear
- Song Volume

## Recording

- Song  
User Song : 5 Songs  
Recording Tracks : 1, 2, 3, 4, 5, STYLE

## MIDI

- Local On/Off
- Initial Setup Send
- External Clock
- Bulk Data Send
- Keyboard Out
- Style Out
- Song Out

## Auxiliary jacks

- PHONES/OUTPUT, DC IN 12V, MIDI IN/OUT, SUSTAIN

## Amplifier

- 3.0W + 3.0W

## Speakers

- 12cm x 2 + 3cm x 2

## Power Consumption (when using PA-3C power adaptor)

- UL/CSA :14W
- CE :15W

## Power Supply

- Adaptor : Yamaha PA-3C AC power adaptor
- Batteries : Six "D" size, R20P (LR20) or equivalent batteries

## Dimensions (W x D x H)

- 952 x 389 x 140 mm (37-1/2" x 15-1/3" x 5-1/2")

## Weight

- 6.8 kg (15 lbs.)

## Supplied Accessories

- Music Stand
- Owner's Manual
- Song Book

## Optional Accessories

- Headphones : HPE-150
- AC power adaptor : PA-3B/3C
- Footswitch : FC4, FC5
- Keyboard stand : L-2C

\* Specifications and descriptions in this owner's manual are for information purposes only. Yamaha Corp. reserves the right to change or modify products or specifications at any time without prior notice. Since specifications, equipment or options may not be the same in every locale, please check with your Yamaha dealer.

\* Die technischen Daten und Beschreibungen in dieser Bedienungsanleitung dienen nur der Information. Yamaha Corp. behält sich das Recht vor, Produkte oder deren technische Daten jederzeit ohne vorherige Ankündigung zu verändern oder zu modifizieren. Da die technischen Daten, das Gerät selbst oder Sonderzubehör nicht in jedem Land gleich sind, setzen Sie sich im Zweifel bitte mit Ihrem Yamaha-Händler in Verbindung.

\* Les caractéristiques techniques et les descriptions du mode d'emploi ne sont données que pour information. Yamaha Corp. se réserve le droit de changer ou modifier les produits et leurs caractéristiques techniques à tout moment sans aucun avis. Du fait que les caractéristiques techniques, les équipements et les options peuvent différer d'un pays à l'autre, adressez-vous au distributeur Yamaha le plus proche.

\* Las especificaciones y descripciones de este manual del propietario tienen sólo el propósito de servir como información. Yamaha Corp. se reserva el derecho a efectuar cambios o modificaciones en los productos o especificaciones en cualquier momento sin previo aviso. Puesto que las especificaciones, equipos u opciones pueden no ser las mismas en todos los mercados, solicite información a su distribuidor Yamaha.

For details of products, please contact your nearest Yamaha or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

## NORTH AMERICA

### CANADA

**Yamaha Canada Music Ltd.**  
135 Milner Avenue, Scarborough, Ontario,  
M1S 3R1, Canada  
Tel: 416-298-1311

### U.S.A.

**Yamaha Corporation of America**  
6600 Orangethorpe Ave., Buena Park, Calif. 90620,  
U.S.A.  
Tel: 714-522-9011

## CENTRAL & SOUTH AMERICA

### MEXICO

**Yamaha de Mexico S.A. De C.V.,  
Departamento de ventas**  
Javier Rojo Gomez No.1149, Col. Gpe Del  
Moral, Deleg. Iztapalapa, 09300 Mexico, D.F.  
Tel: 686-00-33

### BRAZIL

**Yamaha Musical do Brasil LTDA.**  
Av. Rebouças 2636, São Paulo, Brasil  
Tel: 011-853-1377

### ARGENTINA

**Yamaha de Panamá S.A. Sucursal de Argentina**  
Viamonte 1145 Piso2-B 1053,  
Buenos Aires, Argentina  
Tel: 1-4371-7021

### PANAMA AND OTHER LATIN AMERICAN COUNTRIES/ CARIBBEAN COUNTRIES

**Yamaha de Panamá S.A.**  
Torre Banco General, Piso 7, Urbanización Marbella,  
Calle 47 y Aquilino de la Guardia,  
Ciudad de Panamá, Panamá  
Tel: 507-269-5311

## EUROPE

### THE UNITED KINGDOM

**Yamaha-Kemble Music (U.K.) Ltd.**  
Sherbourne Drive, Tilbrook, Milton Keynes,  
MK7 8BL, England  
Tel: 01908-366700

### IRELAND

**Danfay Ltd.**  
61D, Sallynoggin Road, Dun Laoghaire, Co. Dublin  
Tel: 01-2859177

### GERMANY/SWITZERLAND

**Yamaha Europa GmbH.**  
Siemensstraße 22-34, 25462 Rellingen,  
F.R. of Germany  
Tel: 04101-3030

### AUSTRIA

**Yamaha Music Austria**  
Schleiergasse 20, A-1100 Wien Austria  
Tel: 01-60203900

### THE NETHERLANDS

**Yamaha Music Nederland**  
Kanaalweg 18G, 3526KL, Utrecht, The Netherlands  
Tel: 030-2828411

### BELGIUM

**Yamaha Music Belgium**  
Keilberg Imperiastraat 8, 1930 Zaventem, Belgium  
Tel: 02-7258220

### FRANCE

**Yamaha Musique France,  
Division Claviers**  
BP 70-77312 Marne-la-Vallée Cedex 2, France  
Tel: 01-64-61-4000

## ITALY

**Yamaha Musica Italia S.P.A.**  
Viale Italia 88, 20020 Lainate (Milano), Italy  
Tel: 02-935-771

## SPAIN/PORTUGAL

**Yamaha-Hazen Electronica Musical, S.A.**  
Ctra. de la Coruna km. 17, 200, 28230  
Las Rozas (Madrid) Spain  
Tel: 91-201-0700

## GREECE

**Philippe Nakas S.A.**  
Navarinou Street 13, P.Code 10680, Athens, Greece  
Tel: 01-364-7111

## SWEDEN

**Yamaha Scandinavia AB**  
J. A. Wettergrens Gata 1  
Box 30053  
S-400 43 Göteborg, Sweden  
Tel: 031 89 34 00

## DENMARK

**YS Copenhagen Liaison Office**  
Generatorvej 8B  
DK-2730 Herlev, Denmark  
Tel: 44 92 49 00

## FINLAND

**F-Musiikki Oy**  
Kluuvikatu 6, P.O. Box 260,  
SF-00101 Helsinki, Finland  
Tel: 09 618511

## NORWAY

**Norsk filial av Yamaha Scandinavia AB**  
Grini Næringspark 1  
N-1345 Østerås, Norway  
Tel: 67 16 77 70

## ICELAND

**Skeifan HF**  
Skeifan 17 P.O. Box 8120  
IS-128 Reykjavik, Iceland  
Tel: 525 5000

## OTHER EUROPEAN COUNTRIES

**Yamaha Europa GmbH.**  
Siemensstraße 22-34, 25462 Rellingen,  
F.R. of Germany  
Tel: 04101-3030

## AFRICA

**Yamaha Corporation,  
Asia-Pacific Music Marketing Group**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430-8650  
Tel: 053-460-2312

## MIDDLE EAST

### TURKEY/CYPRUS

**Yamaha Europa GmbH.**  
Siemensstraße 22-34, 25462 Rellingen,  
F.R. of Germany  
Tel: 04101-3030

### OTHER COUNTRIES

**Yamaha Music Gulf FZE**  
LB21-128 Jebel Ali Freezone  
P.O.Box 17328, Dubai, U.A.E.  
Tel: 971-4-881-5868

## ASIA

### HONG KONG

**Tom Lee Music Co., Ltd.**  
11/F., Silvercord Tower 1, 30 Canton Road,  
Tsimshatsui, Kowloon, Hong Kong  
Tel: 2737-7688

### INDONESIA

**PT. Yamaha Music Indonesia (Distributor)  
PT. Nusantara**  
Gedung Yamaha Music Center, Jalan Jend. Gatot  
Subroto Kav. 4, Jakarta 12930, Indonesia  
Tel: 21-520-2577

### KOREA

**Yamaha Music Korea Ltd.**  
Tong-Yang Securities Bldg. 16F 23-8 Yoido-dong,  
Youngdungpo-ku, Seoul, Korea  
Tel: 02-3770-0661

### MALAYSIA

**Yamaha Music Malaysia, Sdn., Bhd.**  
Lot 8, Jalan Perbandaran, 47301 Kelana Jaya,  
Petaling Jaya, Selangor, Malaysia  
Tel: 3-703-0900

### PHILIPPINES

**Yupangco Music Corporation**  
339 Gil J. Puyat Avenue, P.O. Box 885 MCPO,  
Makati, Metro Manila, Philippines  
Tel: 819-7551

### SINGAPORE

**Yamaha Music Asia Pte., Ltd.**  
11 Ubi Road #06-00, Meiban Industrial Building,  
Singapore  
Tel: 65-747-4374

### TAIWAN

**Yamaha KHS Music Co., Ltd.**  
10F, 150, Tun-Hwa Northroad,  
Taipei, Taiwan, R.O.C.  
Tel: 02-2713-8999

### THAILAND

**Siam Music Yamaha Co., Ltd.**  
121/60-61 RS Tower 17th Floor,  
Ratchadaphisek RD., Dindaeng,  
Bangkok 10320, Thailand  
Tel: 02-641-2951

### THE PEOPLE'S REPUBLIC OF CHINA AND OTHER ASIAN COUNTRIES

**Yamaha Corporation,  
Asia-Pacific Music Marketing Group**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430-8650  
Tel: 053-460-2317

## OCEANIA

### AUSTRALIA

**Yamaha Music Australia Pty. Ltd.**  
Level 1, 99 Queensbridge Street, Southbank, Victoria  
3006, Australia  
Tel: 3-9693-5111

### NEW ZEALAND

**Music Houses of N.Z. Ltd.**  
146/148 Captain Springs Road, Te Papapa,  
Auckland, New Zealand  
Tel: 9-634-0099

### COUNTRIES AND TRUST

### TERRITORIES IN PACIFIC OCEAN

**Yamaha Corporation,  
Asia-Pacific Music Marketing Group**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430-8650  
Tel: 053-460-2312

**HEAD OFFICE** Yamaha Corporation, Pro Audio & Digital Musical Instrument Division  
Nakazawa-cho 10-1, Hamamatsu, Japan 430-8650  
Tel: 053-460-3273



Yamaha PK CLUB (Portable Keyboard Home Page, English only)

<http://www.yamahaPKclub.com/>

Yamaha Manual Library (English versions only)

<http://www2.yamaha.co.jp/manual/english/>

M.D.G., Pro Audio & Digital Musical Instrument Division, Yamaha Corporation  
© 2002 Yamaha Corporation

V874210 ???PO???.?-03C0 Printed in China