Read Me First

Use this guide to make sure all connections are properly done prior to powering the unit ON.

YMC-700/YMC-500 Quick Start Guide

Start

Items used for setup in this guide

Supplied items
- YMC-700/YMC-500 (this unit)
- Power cable
- Remote control
  * Install the supplied batteries to the remote control in advance.
- IR flasher x2

Required items
- TV with an HDMI connection
- HDMI cable from this unit to TV
- Source devices (Cable box, DVD, etc.)
- HDMI and/or Audio/Video cables from source devices
- Speakers and speaker cables
- Subwoofer and subwoofer cable

For operation and installation details, refer to the owner's manual of each source device item.

1

On the Connection Planning Chart A, write down the source devices (except TV) that you will connect in order of most frequently used (from left to right) as follows.

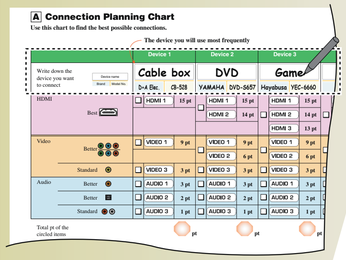

2

View the output jacks available on each source device and then fill in the check box.

Example: A cable box

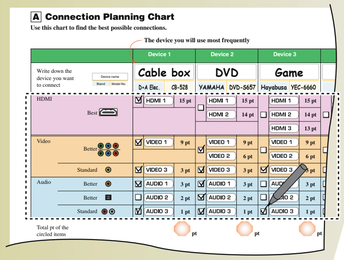

3

Choose the best connections available for your source device as follows:

- When there is a check mark on the HDMI jack, circle the top HDMI 1, HDMI 2, or HDMI 3. If the top input has already selected by another device, select the next one.
- If there are NO check marks in the any of the the HDMI jacks, then make sure to select a video jack with an audio jack.

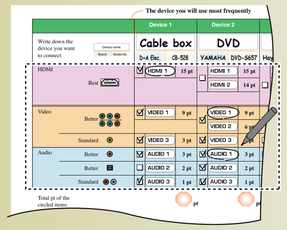

4

Write down the point (pt) of the circled item(s). If two items (AUDIO 1 to 3 and VIDEO 1 to 3) are circled, add both points for the VIDEO and AUDIO. Refer to the following examples.

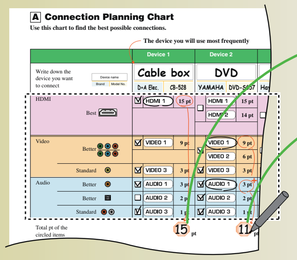

5

Write down the names of the devices to the corresponding columns of "Connection Diagrams B" to the numbers you wrote in ○pt.

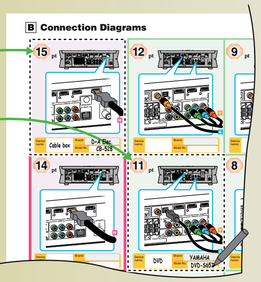

6

Refer to "Connection Diagrams B" and then connect the cables from the source devices to this unit as indicated. See page 6 about further connections (iPod dock, LAN, etc.)

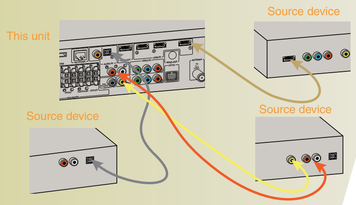

7

Use the HDMI out of this unit to your TV. Use an HDMI cable to connect this unit to your TV's HDMI input.

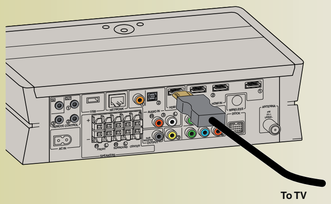

8

Connect the supplied IR flashers to the REMOTE OUT 1 and 2 jacks on the back of this unit, then attach the IR Flasher to the remote control sensor on the front of the devices as follows. (☞ P. 8 for details) This will allow this unit to control the other source devices attached.

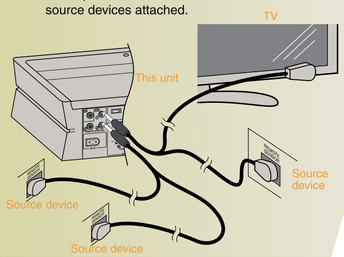

9

Connect speakers to the SPEAKERS terminals. If speakers have color coded terminals, match the colors. If the speakers are not color coded on the terminals, then match + and –. (☞ P. 6 for details)

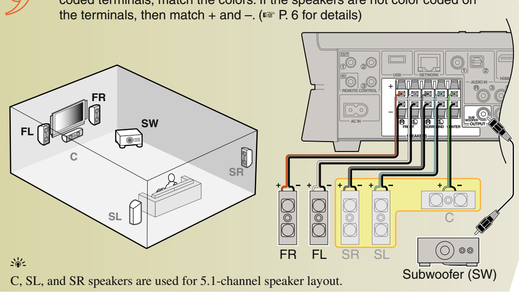

✲ C, SL, and SR speakers are used for 5.1-channel speaker layout.

10

- Connect the power cable to this unit and plug it to a wall outlet.
- Turn all connected devices ON including this unit, subwoofer and TV. Make sure to select the appropriate HDMI input on the TV to display neoHD "Initial Setup" screen.
- Follow the setup process of this unit by using the "Initial Setup" on screen guide to complete the basic configuration. (☞ P. 10)

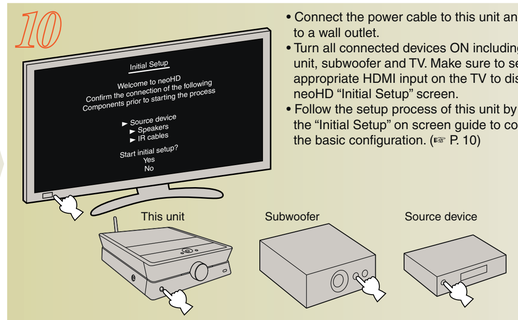

Begin the Initial Setup

A Connection Planning Chart

Use this chart to find the best possible connections.

The source device you will use most frequently

	Device 1	Device 2	Device 3	Device 4	Device 5	Device 6
Write down the device you want to connect (Device name / Brand / Model No.)						
HDMI — Best — HDMI	☐ HDMI① 15 pt	☐ HDMI① 15 pt HDMI② 14 pt	☐ HDMI① 15 pt HDMI② 14 pt HDMI③ 13 pt	☐ HDMI① 15 pt HDMI② 14 pt HDMI③ 13 pt	☐ HDMI① 15 pt HDMI② 14 pt HDMI③ 13 pt	☐ HDMI① 15 pt HDMI② 14 pt HDMI③ 13 pt
Video — Better — COMPONENT VIDEO	☐ VIDEO① 9 pt	☐ VIDEO① 9 pt VIDEO② 6 pt	☐ VIDEO① 9 pt VIDEO② 6 pt	☐ VIDEO① 9 pt VIDEO② 6 pt	☐ VIDEO① 9 pt VIDEO② 6 pt	☐ VIDEO① 9 pt VIDEO② 6 pt
Video — Standard — COMPOSITE	☐ VIDEO③ 3 pt	☐ VIDEO③ 3 pt	☐ VIDEO③ 3 pt	☐ VIDEO③ 3 pt	☐ VIDEO③ 3 pt	☐ VIDEO③ 3 pt
Audio — Better — COAXIAL	☐ AUDIO① 3 pt	☐ AUDIO① 3 pt	☐ AUDIO① 3 pt	☐ AUDIO① 3 pt	☐ AUDIO① 3 pt	☐ AUDIO① 3 pt
Audio — Better — OPTICAL	☐ AUDIO② 2 pt	☐ AUDIO② 2 pt	☐ AUDIO② 2 pt	☐ AUDIO② 2 pt	☐ AUDIO② 2 pt	☐ AUDIO② 2 pt
Audio — Standard — AUDIO L/R	☐ AUDIO③ 1 pt	☐ AUDIO③ 1 pt	☐ AUDIO③ 1 pt	☐ AUDIO③ 1 pt	☐ AUDIO③ 1 pt	☐ AUDIO③ 1 pt
Total pt of the circled items	○ pt	○ pt	○ pt	○ pt	○ pt	○ pt

✲ The numbers of pts are used in the Initial Setup procedure.

B Connection Diagrams

H : HDMI V : VIDEO A : AUDIO

Use the following cables for connections.



Printed in China WR17650