




TBDRUM INSTRUCTIONS

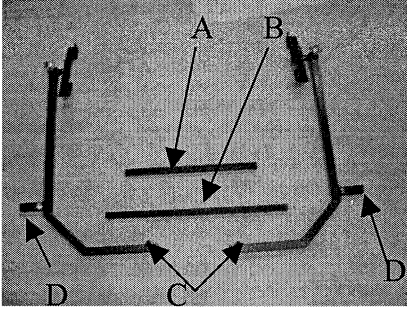



- A. 1" x 1" x 21" insert (28" & 32")
- B. 1" x 1" x 28" insert (36" & 40")
- C. Bottom Frame of Drum
- D. 1 1/4" x 1 1/4" insert

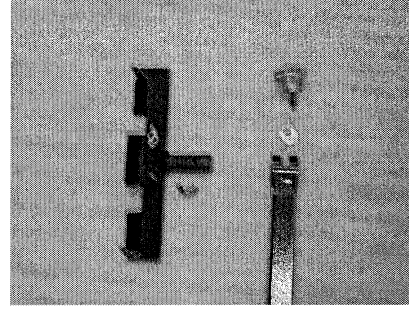


To assemble drum carrier the 3/8" washer should be placed on the bolt of the knob. Then screw the knob into threads. (Picture Below)

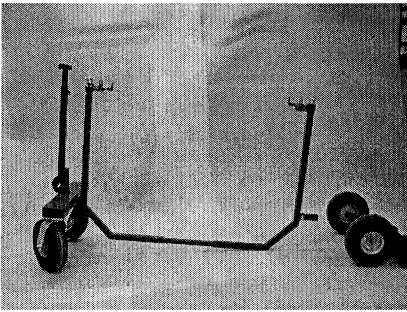

Take bottom frame, C, and either insert A or insert B depending on size of Drum then tighten both set screws on frame C.

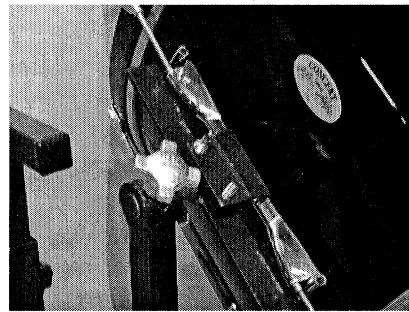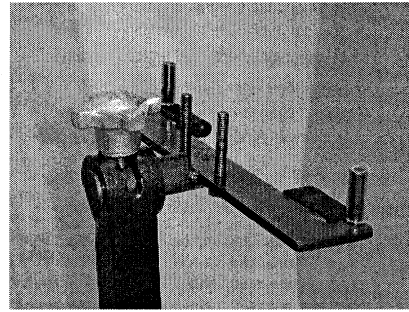

Put drum on carrier with 5/16" bolts with rubber protectors outside lug and between tension rods and drum.

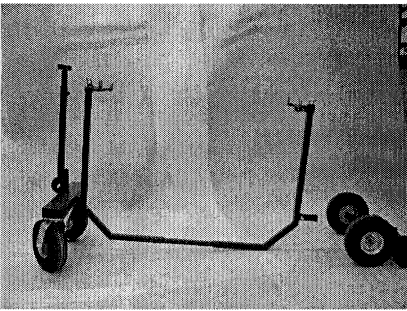

Once part C is assembled place insert, D, into receivers on the wheel assemblies. Then tighten set screws on bottom of both wheel assemblies.

